This file is available for free download at <u>http://www.iluvmyrx7.com</u>



www.iluvmyrx7.com

## Parts Catalog

LAYOUT OF CONTENTS

The following is a type a example of the layout of contents on Map (a microfiche parts cate i)

## Mazda RX-7 U.S.A. ('89 > '90)






FC3----700001 - 900000

May'92 (FINAL) Catalog No. AU-FA02-06



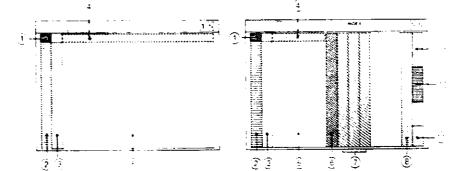



i	• Layout of contents	2 Pictorial Index	(U)	Master Section No. Index
<b>(</b>	-Section No. Index for the Column	51 Hustration & Text	la,	-Part No. Index

्रे - Alphabetical Index 🤅 🖓 Model Ident fication

g) - ven die Identification System




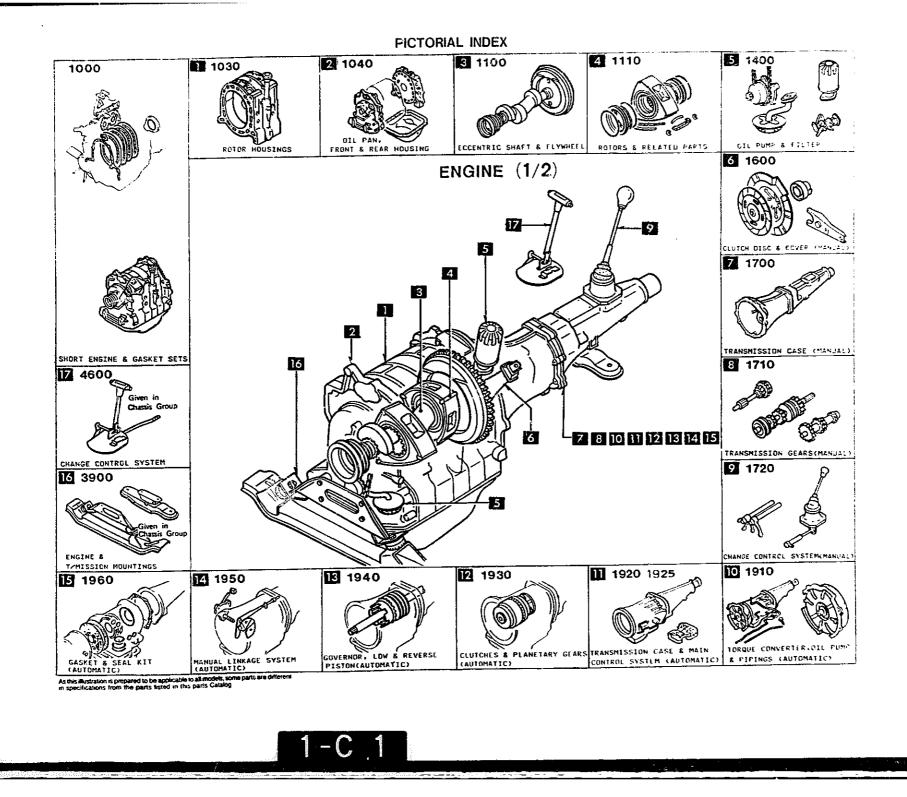

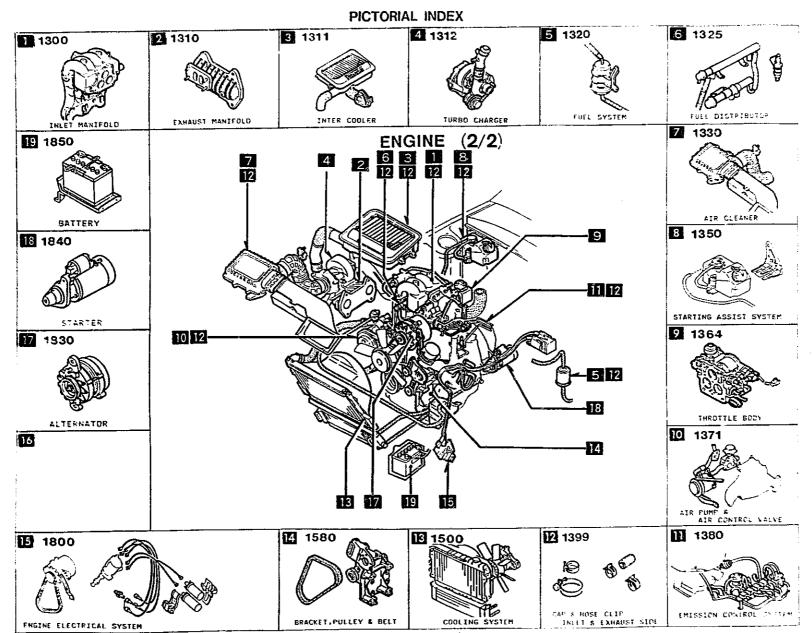


As this illustration is prepared to be applicable to all models, some parts are different in specifications from the parts listed in this parts Catalog



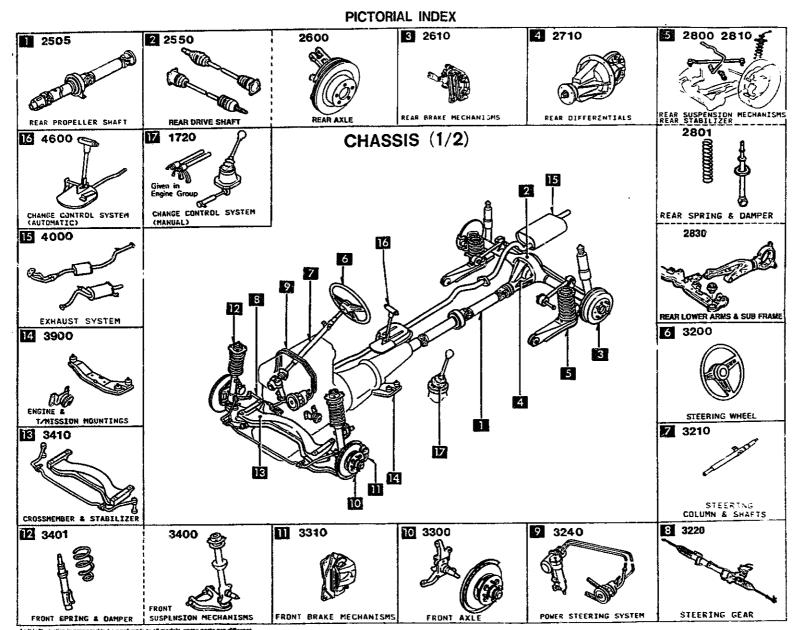


As this illustration is prepared to be applicable to all models, some parts are different to specifications from the parts listed in this parts Catalog.



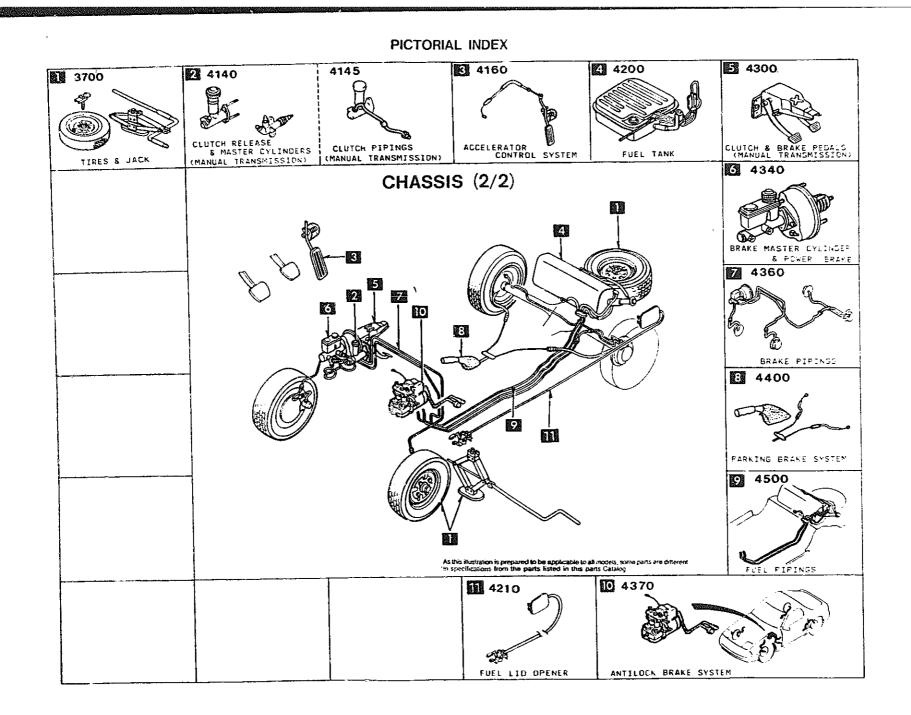




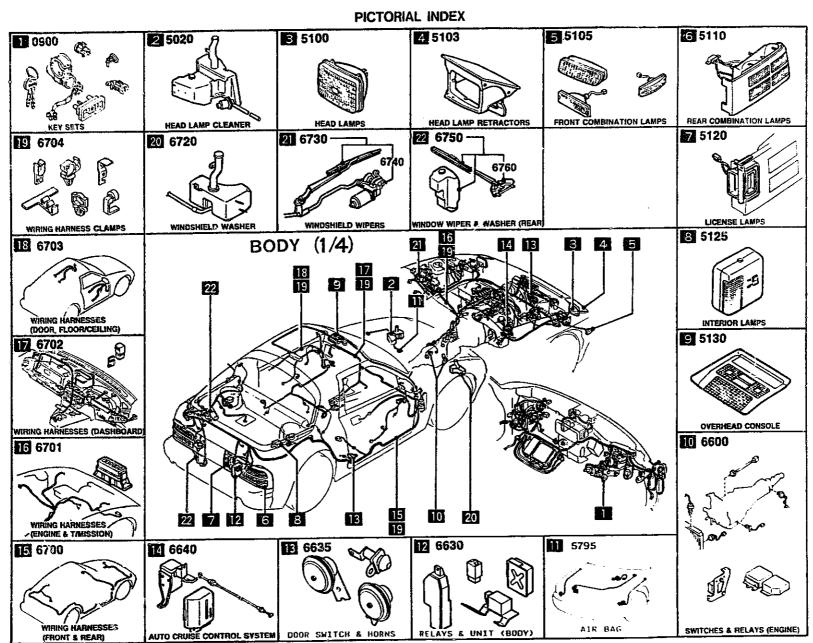

As this Businesion is prepared to be applicable to all models, white parts are different in specifications from the parts listed in this parts Catalog.




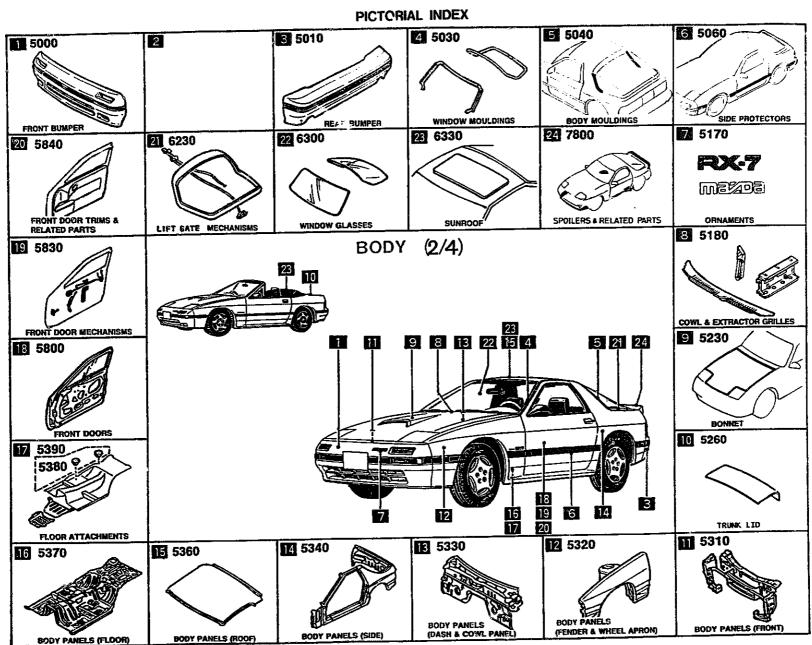


As this illustration is prepared to be applicable to all module, some parts are different

in specifications from the parts listed in this parts Catalog.



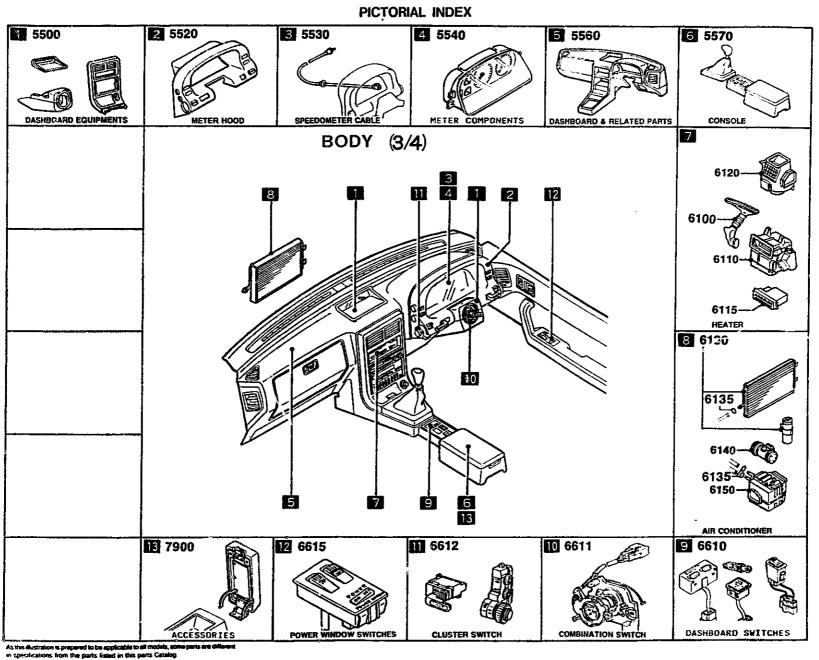

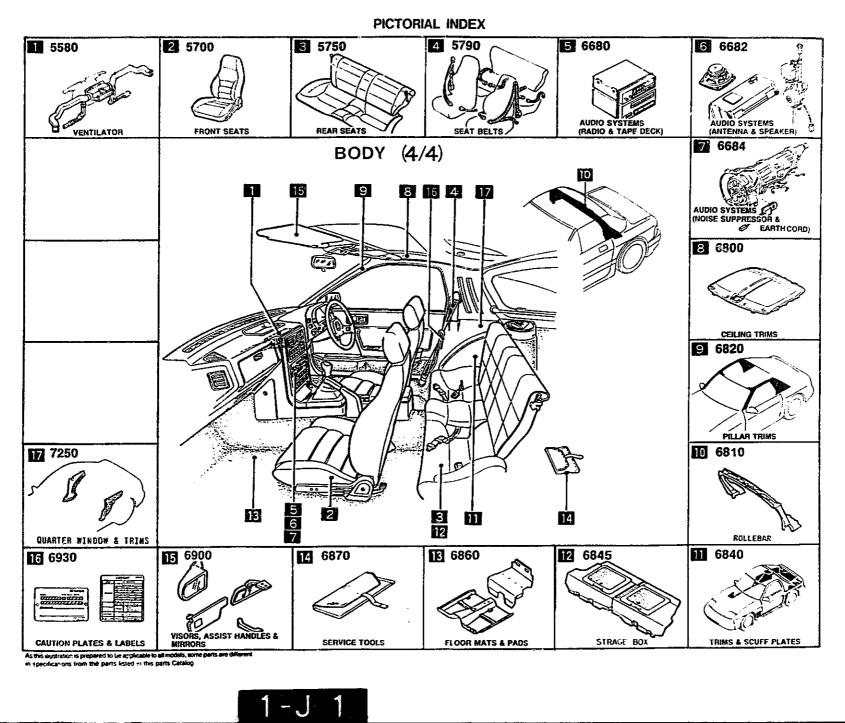

SECTION NAME INDEX (ENGINE)

0.N0	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME
-C03	1000	SHORT ENGINE & GASKET SETS	1-611	1840	STARTER			
		(W/O TURBO) Short Engine & Gasket Sets	1-J11	1850	BATTERY			
-D03	1000 A	(TURBO)	1-к11	1910	TORQUE CONVERTER, OIL PUMP & PI PINGS (AUTOMATIC)			
L-E03	1030	RDTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR			
1-603	1030 A	ROTOR HOUSINGS (Turbo)	1-112	1925	CONTROL VALVE (AUTOMATIC)			
1-J03	1040	DIL PAN,FRONT & REAR HOUSING	1-013	1930	CLUTCHES & PLANETARY GEARS (AU		1	
1-MO3	1040 A	OIL PAN, FRONT & REAR HOUSING	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)			
1-004	1100	ECCENTRIC SHAFT & FLYWHEEL	1-014	1950	MANUAL LINKAGE SYSTEM (AUTOMAT			• •
1-G04	1110	ROTORS & RELATED PARTS	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)			
1-104	1300	INLET MANIFOLD	1-614	1700	GREAT & SERE KIT (HOTSINIIG)			
1-M04	1310	EXHAUST MANIFOLD		1			1 1	1
1-N04	1311	INTER COOLER (TURBO)						· · ·
1-005	1312	TURBD CHARGER (TURBD)						
1-F05	1320	FUEL SYSTEM					1	
1-405	1325	FUEL DISTRIBUTOR	ŀ				1	
1-105	1330	AIR CLEANER						
1-M05	1350	STARTING ASSIST SYSTEM						
1-N05	1364	THROTTLE BODY						
1-F06	1371	AIR PUMP & AIR CONTROL VALVE						
1-106	1380	EMISSION CONTROL SYSTEM					Ì	
1-007	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)						
1-F07	1400	OIL PUMP & FILTER (W/O TURBO)						
1-107	1400 A	OIL PUMP & FILTER		)				
1-M07	1500	COOLING SYSTEM						
1-F08	1580	BRACKET, PULLEY & BELT						
1-09	1600	CLUTCH DISC & COVER (MANUAL)	1	1				
1-F09		TRANSMISSION CASE (MANUAL)	i					
1-J09	1710	TRANSMISSION GEARS(MANUAL)						
1-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)	1	1			l.	
1-M10	1800	ENGINE ELECTRICAL SYSTEM	t			1		
1-E11	t.	ALTERNATOR					ł	
	1000					<u> </u>		<u> </u>

CATLOG-NO= AUFA02-06

t**a\***a 0

1



0.ND	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME
2-C03		REAR PROPELLER SHAFT	2-M08	4140	CLUTCH RELEASE & MASTER CYLIND ERS (MANUAL TRANSMISSION)			
2-003	2550	REAR DRIVE SHAFT	2-009	4145	CLUTCH PIPINGS (MANUAL TRANSMI			
2-803	2600	REAR AXLE			SSION)			
2-603	2610	REAR BRAKE MECHANISMS	2-D09	4160	ACCELERATOR CONTROL SYSTEM			
2-KO3	2710	REAR DIFFERENTIALS (NORMAL DIFF.)	2-209	4200	FUEL TANK		1	
2-004	2710 A	REAR DIFFERENTIALS	2-H <b>09</b>	4300	CLUTCH & BRAKE PEDALS (MANUAL TRANSMISSION)			
2-004	2110 4	(LIMITED SLIP DIFF.)	2-K09	4300A	BRAKE PEDALS (AUTOMATIC TRANSM			
2-404	2800	REAR SUSPENSION MECHANISMS			ISSION)	į		
2-J04	2801	REAR SPRING & DAMPER	2-M09	4340	BRAKE MASTER CYLINDER & POWER			
2-K04	2810	REAR STABILIZER			(W/O TURBO)			
2-L04	2830	REAR LOWER ARMS & SUB FRAME	2-C10	4340 A	BRAKE MASTER CYLINDER & POWER BRAKE (TURBD)			
2-N04	3200	STEERING WHEEL (W/O AIR BAG)		6760	BRAKE PIPINGS			
2-E05	3200 A	STEERING WHEEL	2-E10	4360	(W/G TURBO)			
		(W/ AIR BAG)	2-610	4360 A	BRAKE PIPINGS (Turbo)	1		
2-G05	3210	STEERING COLUMN & SHAFTS	2-110	4370	ANTILOCK BRAKE SYSTEM			
2-105	3220 A	W/ POWER STEERING:ENGINE KEVU	2-J10	4370	(TURBO)			
		LUTION PER MINUTE SENSOR) (GTU, '90-GX	2-N10	4400	PARKING BRAKE SYSTEM			
		L,'90-CONV-W/C AIR BAG)	2-011	4500	FUEL PIPINGS			
2-L05	3220 B	STEERING GEAR (W/ POWER STEERING:VELOCITY SE NSOR)	2-H11	4600	CHANGE CONTROL SYSTEM			
		(GTUS,'90-G XL,TURBD,'89-CONV,'90-CONV-W/A IR BAG)						
2~C06	3240	POWER STEERIN, SYSTEM	1				1	
2-F06	3300	FRONT AXLE						
2-H06	3310	FRONT BRAKE MECHANISMS				1		
2-K06	3400	FRONT SUSPENSION MECHANISMS						
2~≓iù6	3401	FRONT SPRING & DAMPER						
2-N06	3410	CROSSMEMBER & STABILIZER					ł	
2-007	3700	TIRES & JACK						
S-C08	3900	ENGINE & T/MISSION MOUNTINGS (MT)						
2-008	3900A	ENGINE & T/MISSION MOUNTINGS						
2~E08	4000	EXHAUST SYSTEM (W/O TURBO)						
2-108	4000 /	EXHAUST SYSTEM (TURBO)						

SECTION NAME INDEX (CHASSIS)

CATLOG-ND= AUFA02-06

\_\_\_\_



				·····	FION NAME INDEX (BODY)1/2	1.0.45		
0.ND	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME
S-C03		KEY SETS	3-J09	5390	FLOOR ATTACHMENTS			
5-F03	5000	FRONT BUMPER	3-C10	5500	DASHBOARD EQUIPMENTS			
3-H03		REAR BUMPER	3-f10	5520	METER HOOD			
5-J03		HEAD LAMP CLEANER	3-G10	5530	SPEEDDMETER CABLE			
3-L03	5030	WINDOW MOULDINGS	3-H10	5540	METER COMPONENTS			
3-M03	5040	BODY MOULDINGS (COUPE)	3-J10	5560	DASHBOARD & RELATED PARTS			
3-E04	5060	SIDE PROTECTORS	3-E11	5570				
3-104	5100	HEAD LAMPS	3-H11	5580	VENTILATOR			
3-J04	5103	HEAD LAMP RETRACTORS	3-J11	5700	FRDNT SEATS (CDUPE)	ľ		
3-N04	5105	FRONT COMBINATION LAMPS	3-E13	5700A	FRONT SEATS			
3-G05	5110	REAR COMBINATION LAMPS	7-417	5750	(CONVERTIBLE)			
3-KO5	5120	LICENSE LAMPS	3-K13	5750	COUPE)			,
3-MD5	5125	INTERIOR LAMPS	3-M13	5790	SEAT BELTS (COUPE)			
3-N05	5130	OVERHEAD CONSOLE	3-014	5790A				
3-CD6	5170	ORNAMENTS	3-C14	3770A	SEAT BELTS (Convertible)	.		
3-D06	5180	COWL & EXTRACTOR GRILLES	3-D14	5800	FRONT DOORS (COUPE)			
3-G06	5230	BONNET	3-G14	5800A	FRONT DOORS			
3-J06	5260	TRUNK LID (Convertible)	5 514		(CONVERTIBLE)			
3-L06	5310	BODY PANELS (FRONT) (COUPE)	3-K14	5830	FRONT DOOR MECHANISMS (COUPE)			
3-C07	5310 A	BODY PANELS (FRONT) (CONVERTIBLE)	3-F15	5830A	FRONT DOOR MECHANISMS (CONVERTIBLE)			
3-F07	5320	BODY PANELS (FENDER & WHEEL AP Ron)	3-J15	5840	FRONT DOOR TRIMS & RELATED PAR TS (COUPE)			
3-K07	5330	BODY PANELS (DASH & COWL PANEL	3-H16	5840A	FRONT DOOR TRIMS & RELATED PAR			
3-LC7	5340	BODY PANELS (SIDÉ) (COUPE)			(CONVERTIBLE)			
3-E08	5340A	BODY PANELS (SIDE) (Convertible)						
3-K08	5360	BODY PANELS (ROOF) (W/O SUN ROOF)						
3-LO8	5360 A	BODY PANELS (ROOF) (Sun Roof)						
3-M08	5370	BODY PANELS (FLOOR) (Coupe)						
3-D09	5370 A	BODY PANELS (FLOOR) (Convertible)						
3-HD9	5380	FLOOR ATTACHMENTS (HOLE COVERS						
	**			I	I	t	1 1	

1-D 2

SECTION NAME INDEX (BODY)1/2

CATLOG-NO= AUFA02-06

SECTION NAME INDEX (BODY)2/2

LO.NO	SEC.NO	SECTION NAME	LO.ND	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME
4-C03	6100	HEATER	4-E08	6703	WIRING HARNESSES(DOOR, FLOOR/CE ILING)			
4-E03	6110	HEATER UNIT COMPONENTS	4-G08	6704	WIRING HARNESS CLAMPS			
4-F03	6115	HEATER CONTROLS COMPONENTS	4-J08	6720	WINDSHIELD WASHER			
4-G03	6120	HEATER BLOWER COMPONENTS			(1.5L & 2.5L)			
4-103	6130	AIR CONDITIONER	4-L08	6720 A	WINDSHIELD WASHER (5.7L)			
4-J03	6230	LIFT GATE MECHANISMS (COUPE)	4-N08	6730	WINDSHIELD WIPERS			
4-M03	6300		4-C0S	6740	WIPER MOTOR COMPONENTS(FRONT)	1		
6-107	47004	(COUPE) WINDOW GLASSES	4-009	6750	WINDOW WIPER & WASHER (REAR)			
4-N03	6300A	(CONVERTIBLE)	4-G09	6760	WINDOW WIPER MOTOR COMPONENTS (REAR)			
4-004	6330	SUNRODF (COUPE)	4-H09	6800	CEILING TRIMS (COUPE)			
4-604	6330A	SUNROOF (Convertible)	4-J09	6800A	CEILING TRIMS			
4-M04	6600	SWITCHES & RELAYS (ENGINE)	4V00	6930	(CONVERTIBLE)			
4-G05	6610	DASHBOARD SWITCHES	4-K09	6810	ROLLËBAR (Convertible)			
4-H05	6611	COMBINATION SWITCH	4-N09	6820	PILLAR TRIMS (COUPE)			
4-105	6612	CLUSTER SWITCH	4-F10	6820A	PILLAR TRIMS			1
4-L05	6615	POWER WINDOW SWITCHES			(CONVERTIBLE)			
4-M05	6630	RELAYS & UNIT (BODY)	4-G10	6840	TRIMS & SCUFF PLATES (COUPE)		l.	
4-D06	6635	DODR SWITCH & HORNS	4-L10	6840A	TRIMS & SCUFF PLATES			
4-E06	6640	AUTO CRUISE CONTROL SYSTEM			(CONVERTIBLE)	1		
4-F06	6680	AUDIO SYSTEMS (RADIO & TAPE DE CK) (Coupe)	4-N10	6845	STRAGE BOX (COUPE) (GXL.TURBO)			
4-KD6	6680 A	AUDID SYSTEMS (RADIO & TAPE DE CK) (CONVERTIBLE)	4-011	6860	FLOOR MATS & PADS			
4-M06	6682	AUDIO SYSTEMS (ANTENNA & SPEAK	4-K11	686DA	FLOOR MATS & PADS			
		ER) (COUPE)			(CONVERTIBLE)			
4-007	6682 A	AUDID SYSTEMS (ANTENNA & SPEAK	4-012	6870	SERVICE TODLS	l		
		ER) (CONVERTIBLE)	4-D12	6900	VISORS,ASSIST HANDLES & MIRROR S (COUPE)		ļ	
4-G07	6684	AUDIO SYSTEMS(NOISE SUPPRESSOR & Earth Cord)	4-H12	6900A	VISORS, ASSIST HANDLES & MIRROR			
4-H07	6700	WIRING HARNESSES(FRONT & REAR		1	(CONVERTIBLE)		1	
4-NJ7	6701	' <u>WIRING</u> HARNESSES(ENGINE & T∕MI	4-K12	6930	CAUTION PLATES & LABELS			
		SSIGN)	4-N12	7250	QUARTER WINDOW & TRIMS			
4-008	6702	WIRING HARNESSES(DASHBOARD)	4-E13	7800	SPOILERS & RELATED PARTS	1		
		]  -	4-014	7900	ACCESSORIES			
		<u> </u>		<u> </u>	<u> </u>	<u> </u>	I	"I

•

CATLOG-NO= AUFA02-06



					SEC	TION NAME INDEX (ENGINE)			
LO	.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME
1-	C03	1009	SHORT ENGINE & GASKET SETS (W/O TURBO)	1-G11	1840	STARTER			
	D03	1000 A		1~J11	1850	BATTERY			
		1000 4	SHORT ENGINE & GASKET SETS (TURBO)	7-KJJ	1910	TORQUÉ CONVERTER,OIL PUMP & PI Pings (Automatic)			
1-	E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR OL SYSTEM (AUTOMATIC)			
1-	G03	1030 A	ROTOR HOUSINGS (TURBO)	1-112	1925	CONTROL VALVE (AUTOMATIC)			
1-	103	1040	OIL PAN, FRONT & REAR HOUSING (W/O TURBO)	1-D13	1930	CLUTCHES & PLANETARY GEARS (AU Tomatic)			
1-	M03	1040 A	DIL PAN, FRONT & REAR HOUSING	1-113	1940	GOVERNOR, LOW & REVERSE PISTON (Automatic)			
1-	D04	1100	ECCENTRIC SHAFT & FLYWHEEL	1.2	950	MANUAL LINKAGE SYSTEM (AUTOMAT			
1-	604	1110	ROTORS & RELATED PARTS	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)			
1-	104	1300	INLET MANIFOLD		1.00	SASKET & SEAL RIT (AUTOMATIC)			
1-	M04	1310	EXHAUST MANIFOLD						
1-	N04	1311	INTER COOLER (TURBO)						
1-	C05	1312	TURBO CHARGER (TURBO)						
1-	F05	1320	FUEL SYSTEM						
1-	H05	1325	FUEL DISTRIBUTOR						
1-	105	1330	AIR CLEANER						
1-	M05	1350	STARTING ASSIST SYSTEM				1		
1-	N05	1364	THROTTLE BODY						
1-	F06	1371	AIR PUMP & AIR CONTROL VALVE						
1-	106	1380	EMISSION CONTROL SYSTEM						
1-	D07	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)				:		
1-	F07	1400	OIL PUMP & FILTER (W/O TURBO)	Ì					
1-	107	1400 A	OIL PUMP & FILTER (TURBD)						
1-	M07	1500	COOLING SYSTEM						
1-	F08	1580	BRACKET, PULLEY & BELT						
1-	-C09	1600	CLUTCH DISC & COVER (MANUAL)						
1-	F09	1700	TRANSMISSION CASE (MANUAL)		1				
1-	J09	1710	TRANSMISSION GEARS(MANUAL)	1					
1-	н10	1720	CHANGE CONTROL SYSTEM (MANUAL)						
1-	M10	1800	ENGINE ELECTRICAL SYSTEM			1			
1-	·E11	1830	ALTERNATOR						
			L	<u> </u>	L		L		

-----


\_\_\_\_\_


1992-05


\_ \_ \_ \_ \_

CATLOG-NO= AUFA02-06



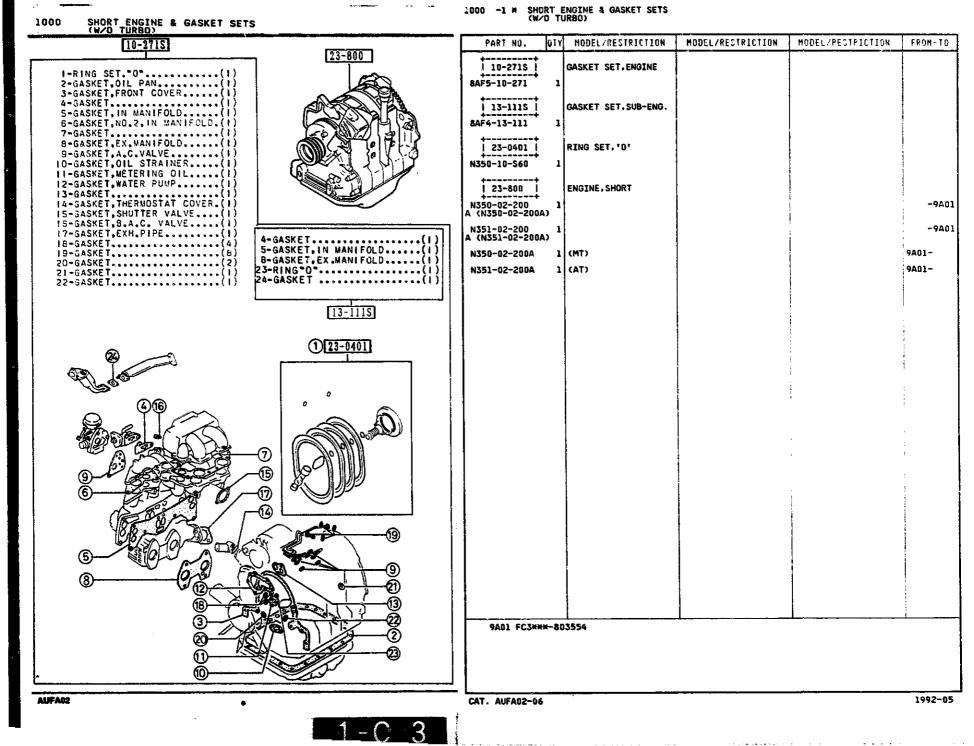

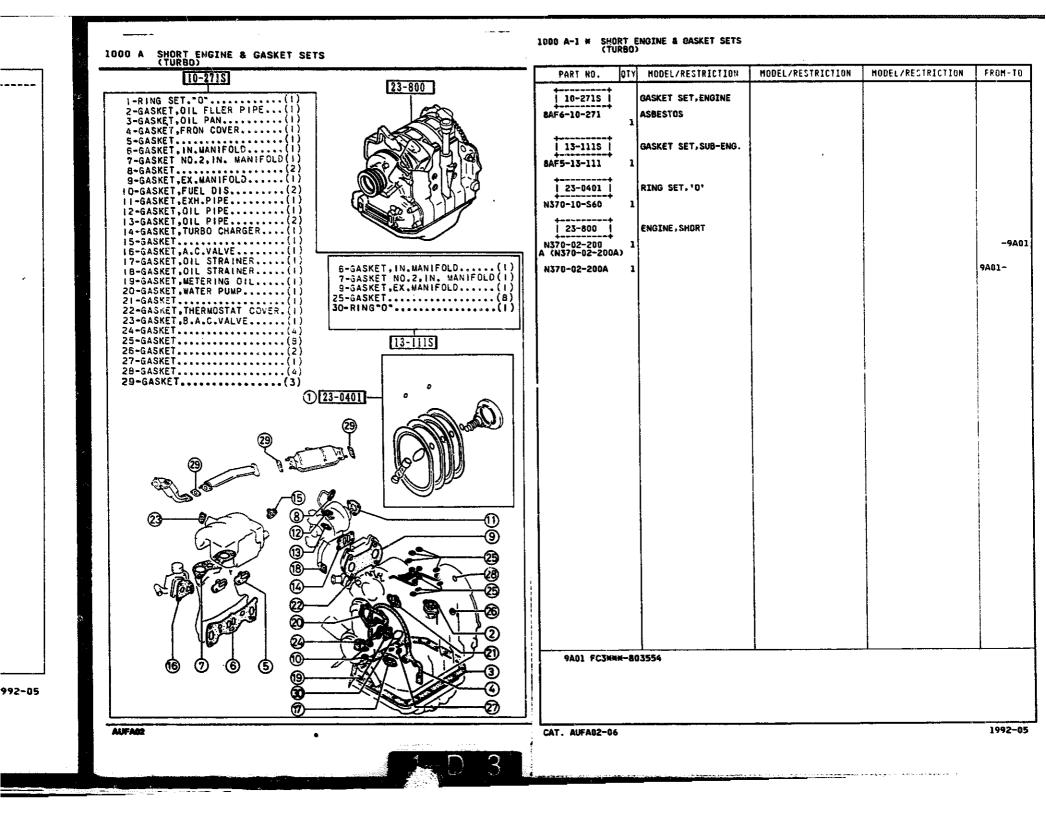

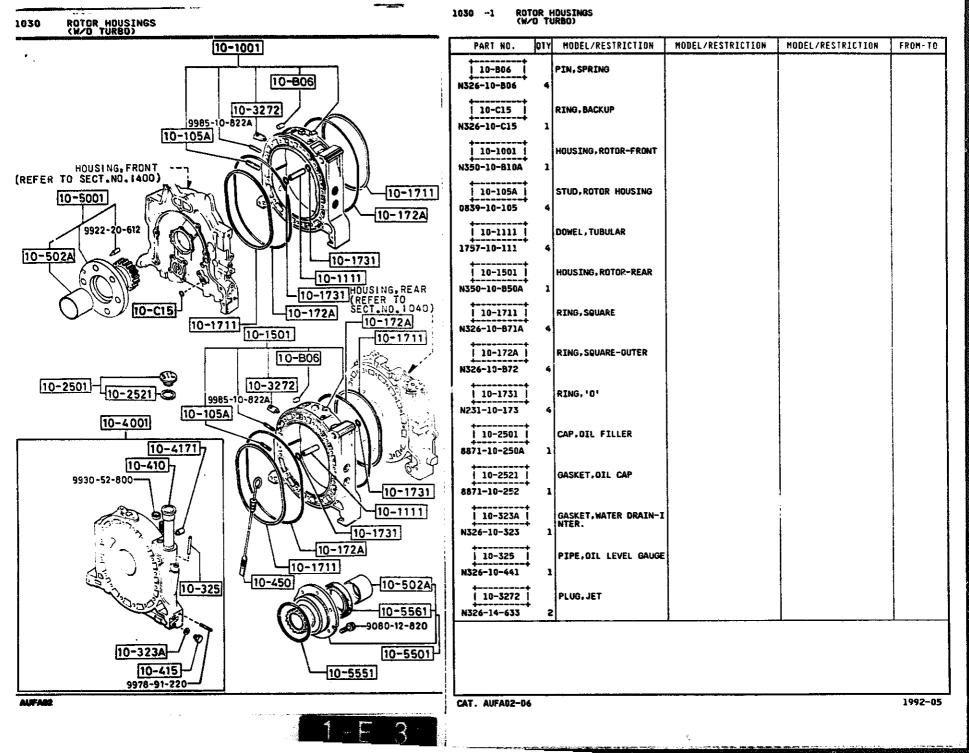


Í


E


11


2


AL

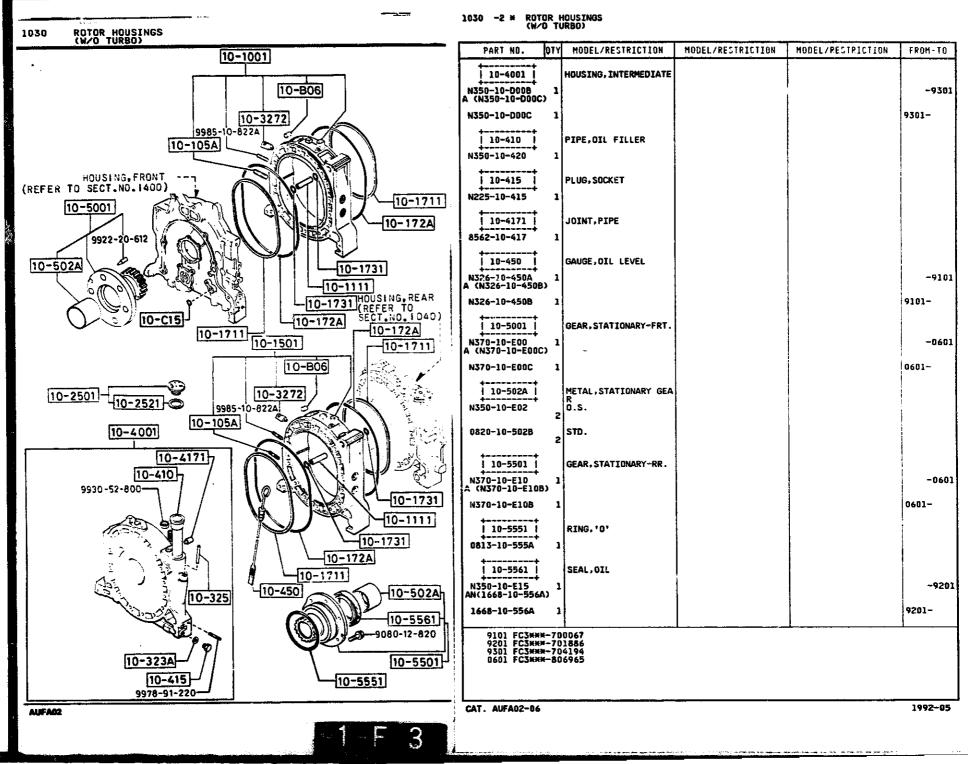


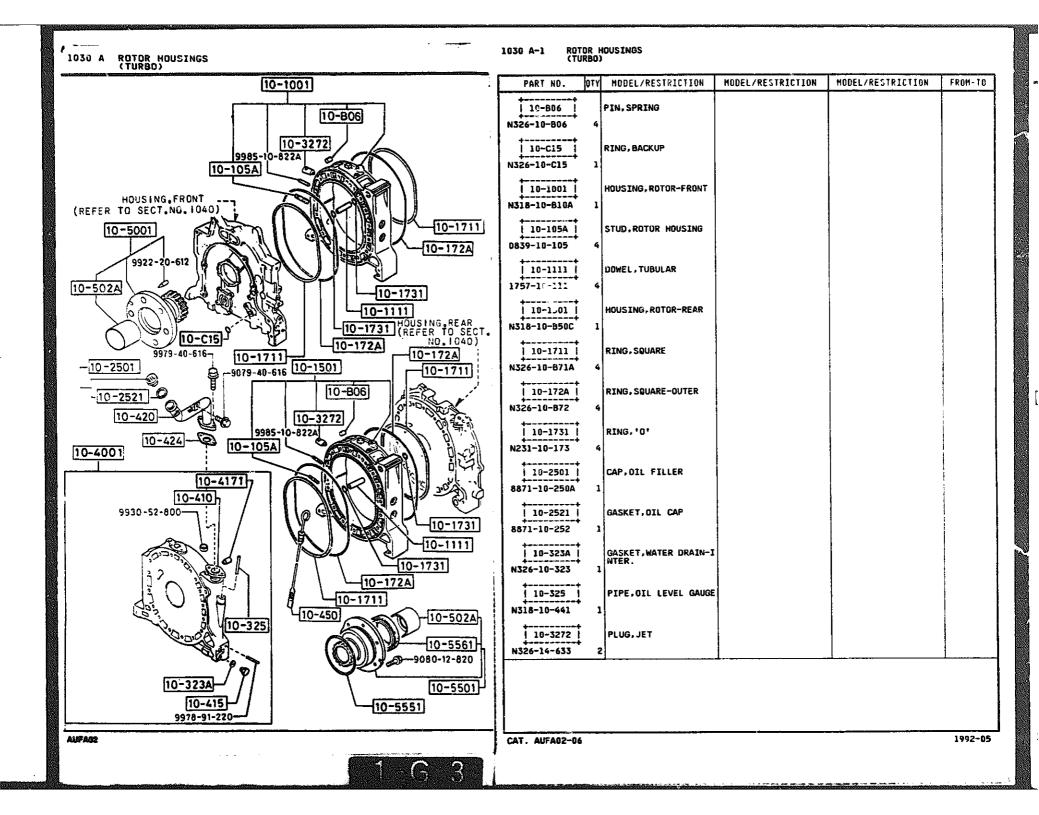

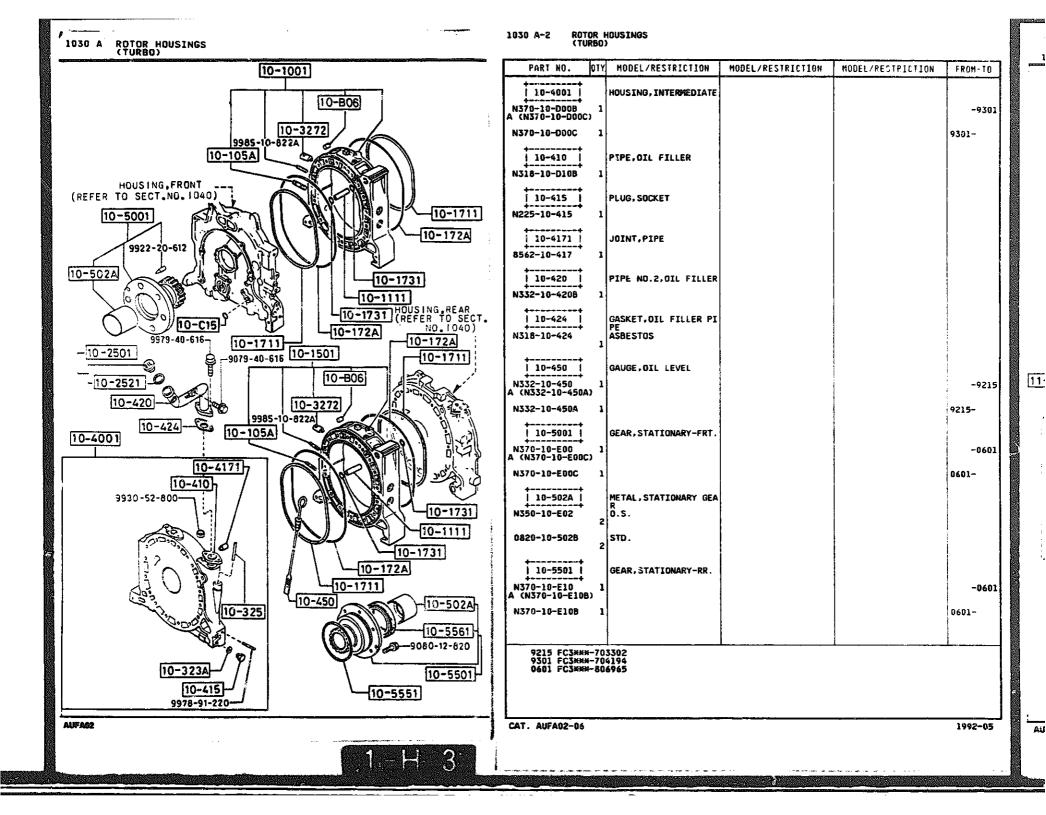

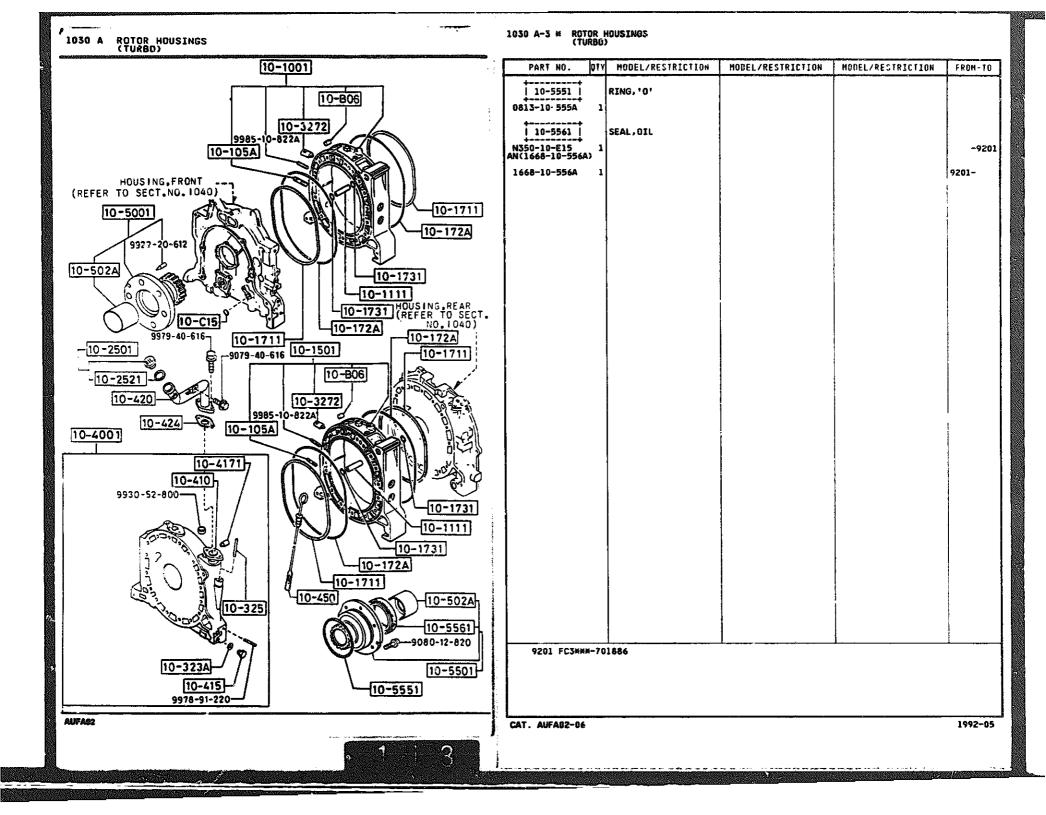


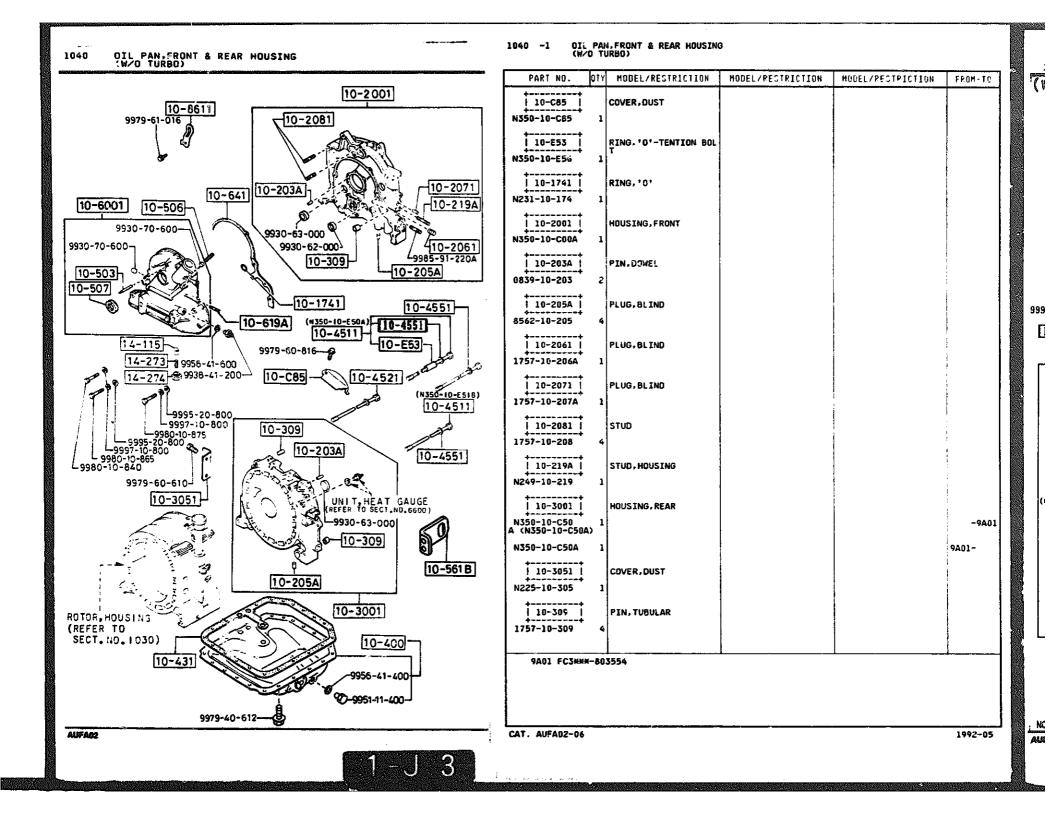

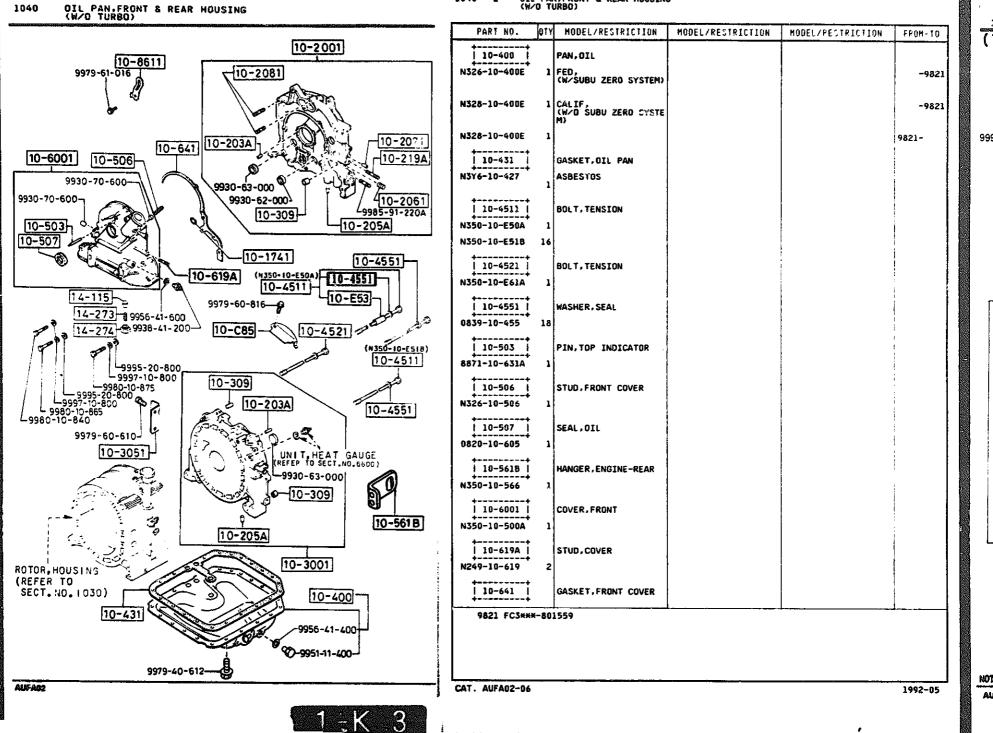


1040 -2 OIL PAN, FRONT & REAR HOUSING

 AU




## 1040 -3 ⊭ OIL PAN,FRONT & REAR HOUSING (₩/C TURBO)


6

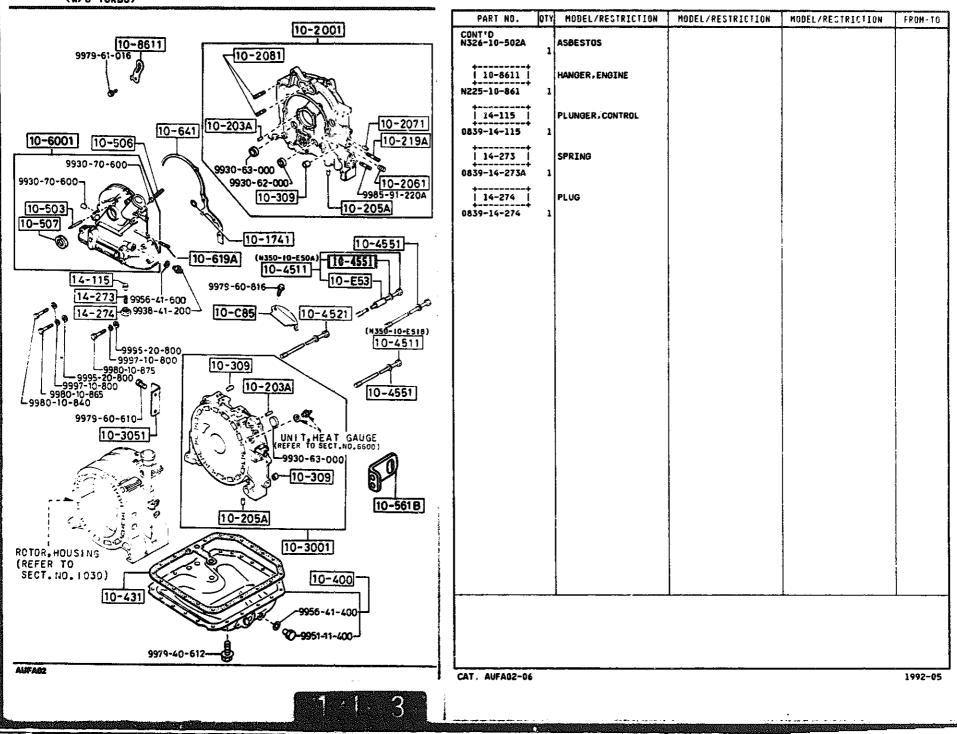

(

99

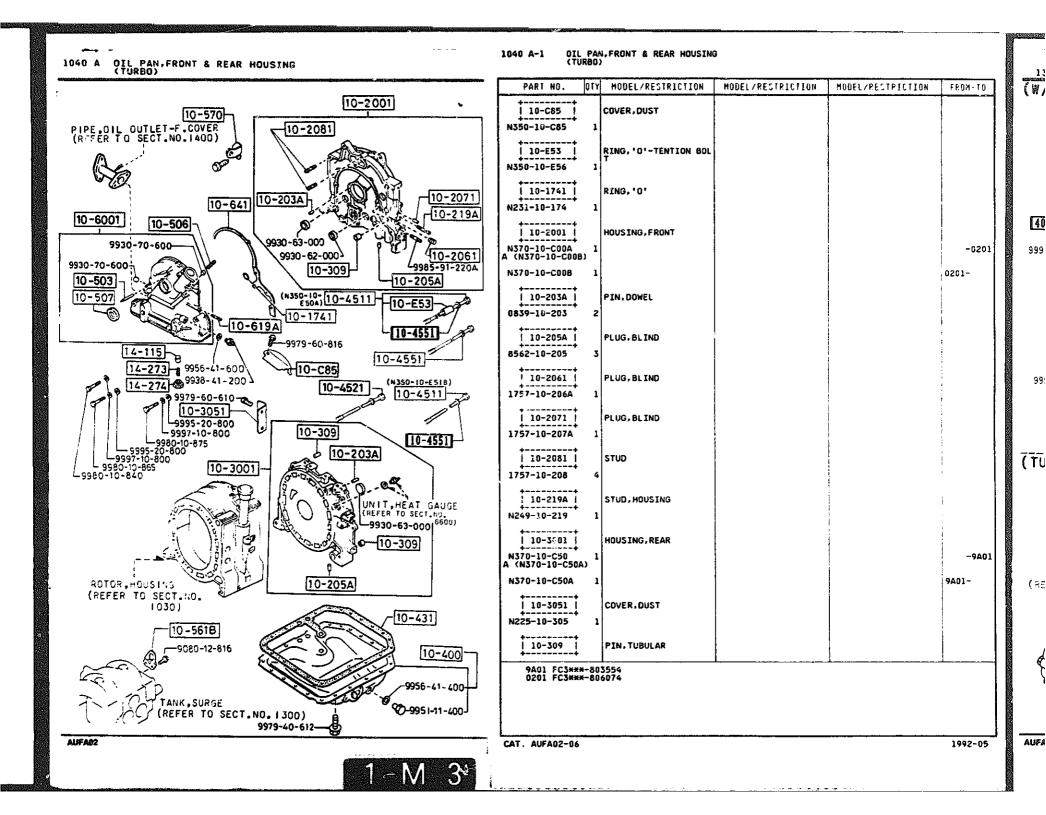

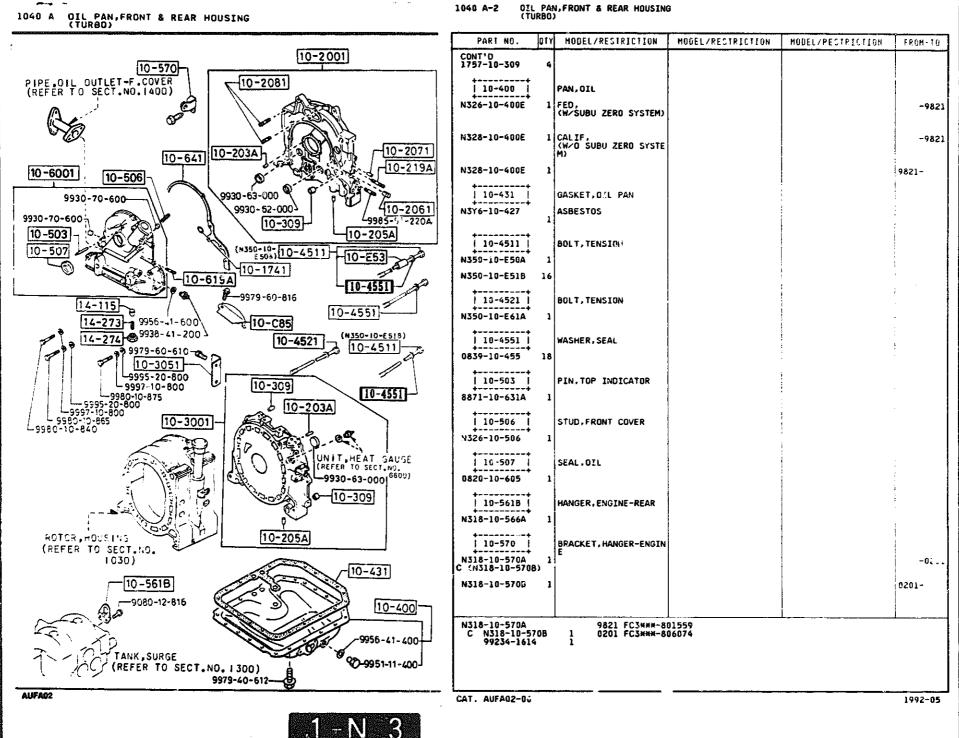

A

					SEC	TION NAME INDEX (ENGINE)			
10	NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LD.NO	SEC.ND	SECTION NAME
1-	03	1000	SHURT ENGINE & GASKET SETS	1-G11	1840	STARTER			
			(W/O TURBO)	1-J11	1850	BATTERY			
1-	003	1000 V	SHORT ENGINE & GASKET SETS (TUR90)	1-K11	1910	TORQUE CONVERTER,OIL PUMP & PI PINGS (AUTOMATIC)			
1-	E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR OL SYSTEM (AUTOMATIC)			
1-	G03	1030 A	ROTOR HOUSINGS (Turbo)	1-112	1925	CONTROL VALVE (AUTOMATIC)			
1-	J03	1040	DIL PAR, FRONT & REAR HOUSING (W/O TURBO)	1-D13	1930	CLUTCHES & PLANETARY GEARS (AU Tomatic)			
1-	M03	1040 A	DIL PAN, FRONT & REAR HOUSING (TURBD)	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)			
1-	004 {	1100	ECCENTRIC SHAFT & FLYWHEEL	1-C14	1950	MANUAL LINKAGE SYSTEM (AUFOMAT			
1-	G04	1110	ROTORS & RELATED PARTS	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)			
1-	104	1300	INLET MANIFOLD						
<b>1</b> -	M04	1310	EXHAUST MANIFOLD						
1-	N04	1311	INTER COOLER (TURBO)						
1-	C05	1312	TURBO CHARGER (TURBO)	Ð	9				
1-	F05	1320	FUEL SYSTEM		Ý				
1-	H05	1325	FUEL DISTRIBUTOR						
1-	105	1330	AIR CLEANER						
1-	M05	1350	STARTING ASSIST SYSTEM						
1.	N05	1364	THROTTLE BODY		ļ	Ļ	ļ		
1.	-F06	1371	AIR PUMP & AIR CONTROL VALVE		1				
1	106	1380	EMISSION CONTROL SYSTEM				1		
1	-007	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)						
1	-F07	1400	OIL PUMP & FILTER (W/Q TURBO)		İ				
1	-107	1400 #	OIL PUMP & FILTER (TURBO)						
3	-M07	1500	COOLING SYSTEM	1					
1	-F08	1580	BRACKET, PULLEY & BELT						
1	~C09	1600	CLUTCH DISC & COVER (MANUAL)			1			
1	-F09	1700	TRANSMISSION CASE (MANUAL)	l					
1	-309	1710	TRANSMISSION GEARS(MANUAL)						
1	-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)						
1	-M10	1800	ENGINE ELECTRICAL SYSTEM	1			i		
1	-811	1830	ALTERNATOR		1				
				<u> </u>	_ <b>_</b>		<u> </u>	<u> </u>	l

CATLOG-NO= AUFA02-06


- ]

15

IN THE OWNER WATCHING TO BE A DECIDENT

01. THE



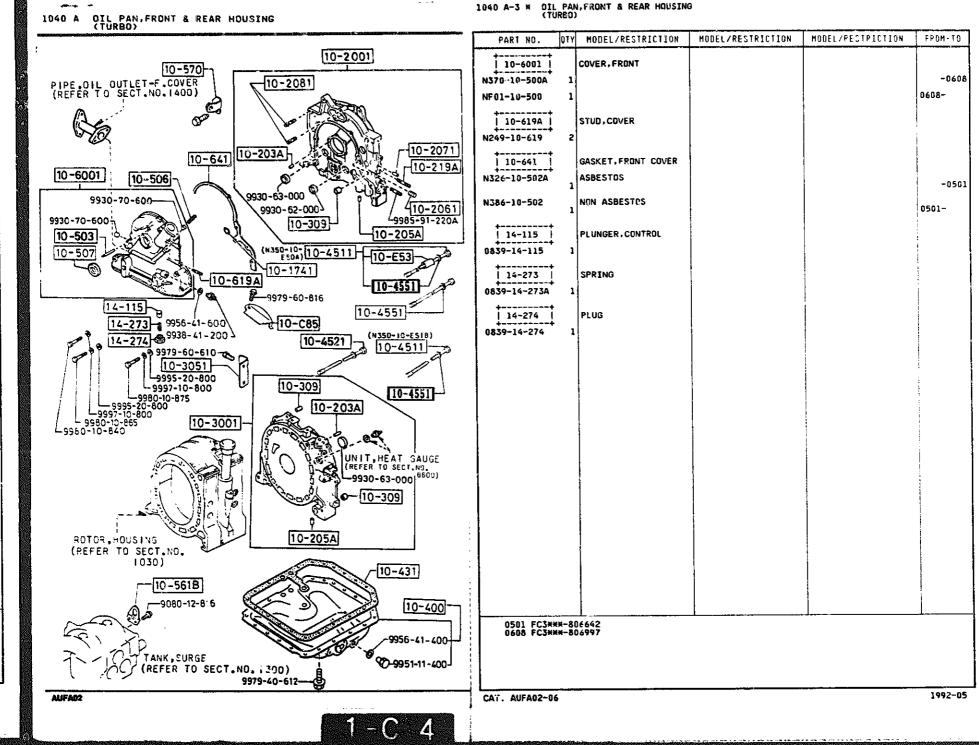


·9A01

-9A01

ļ

2-05

\*

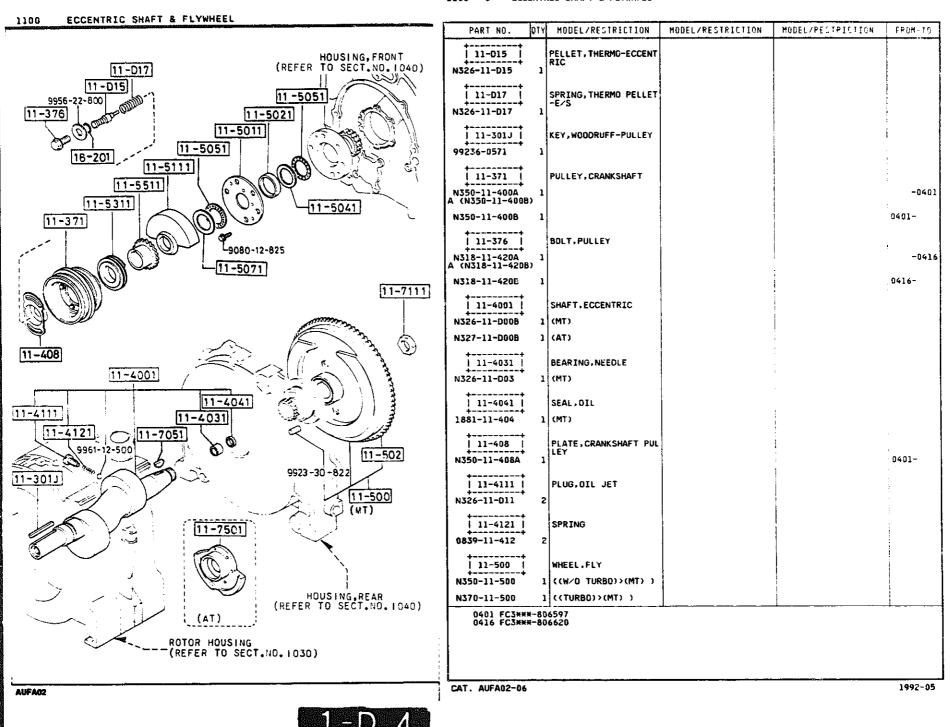

10


A01

-05

1100 -3 ECCENTRIC SHAFT & FLYWHFEL


\* 1

AU

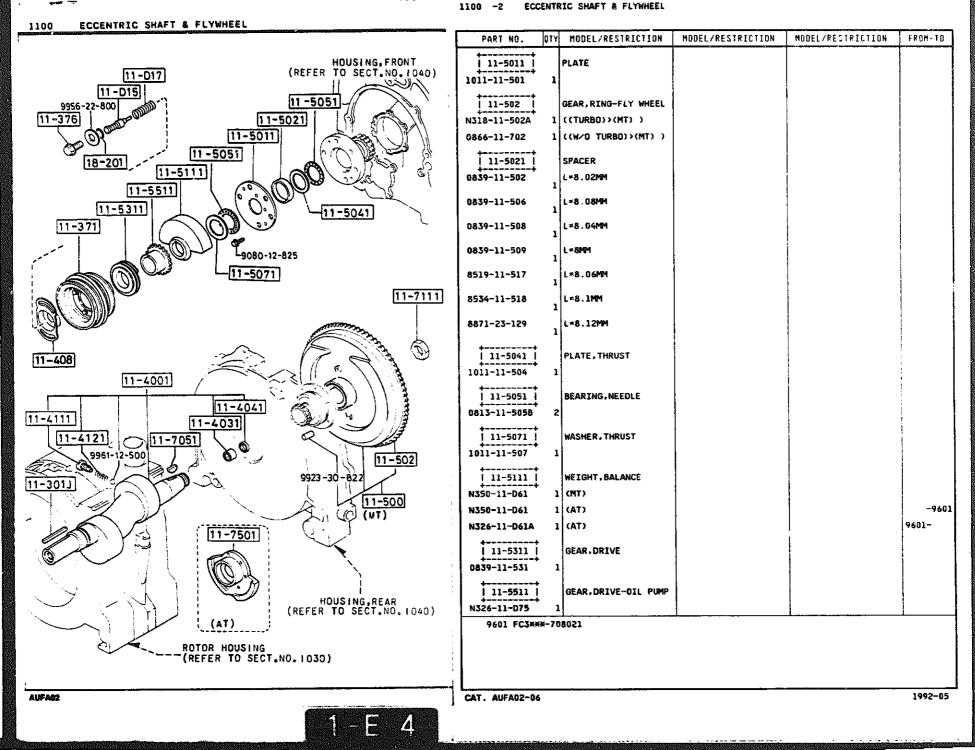


. . .

-05

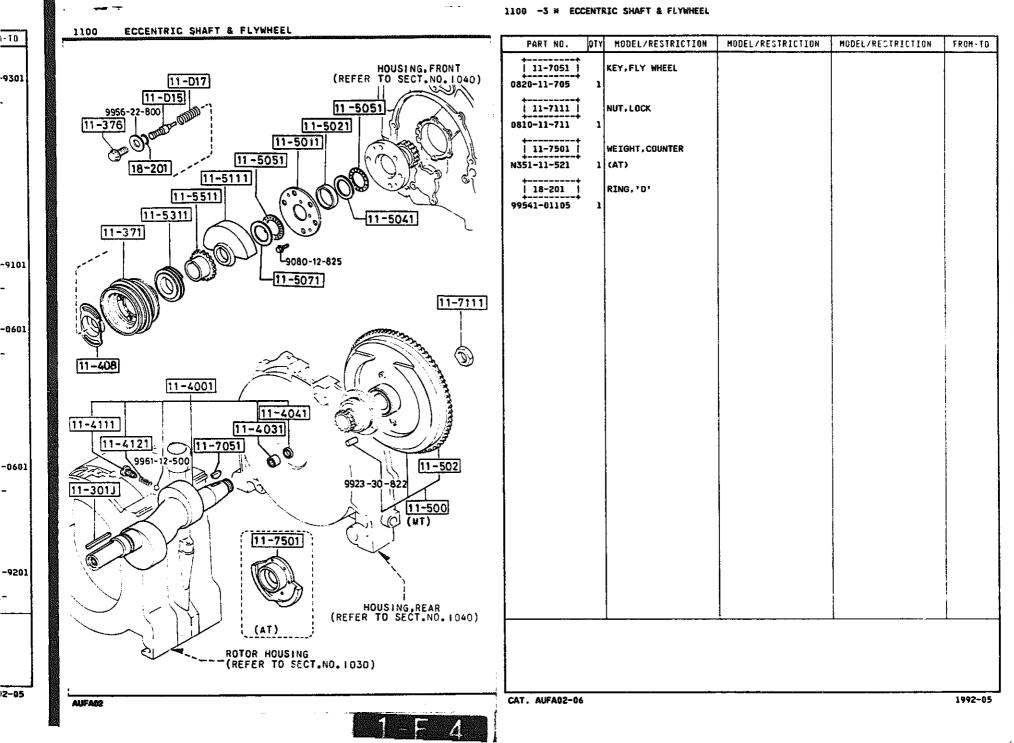


4


-

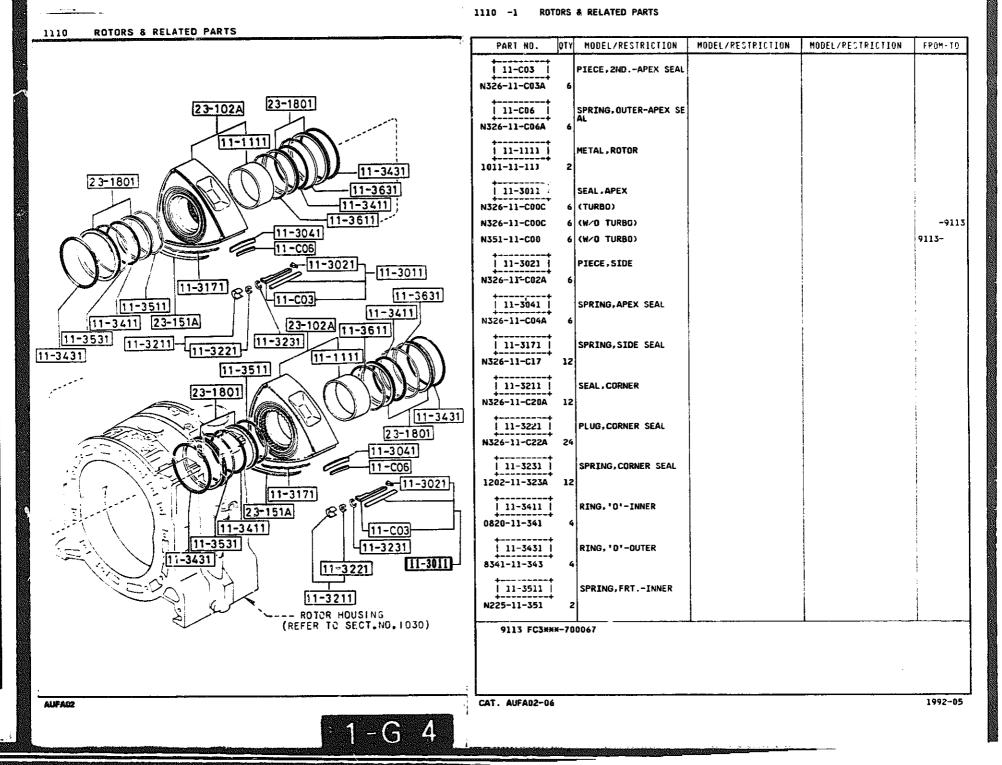

2-05


f

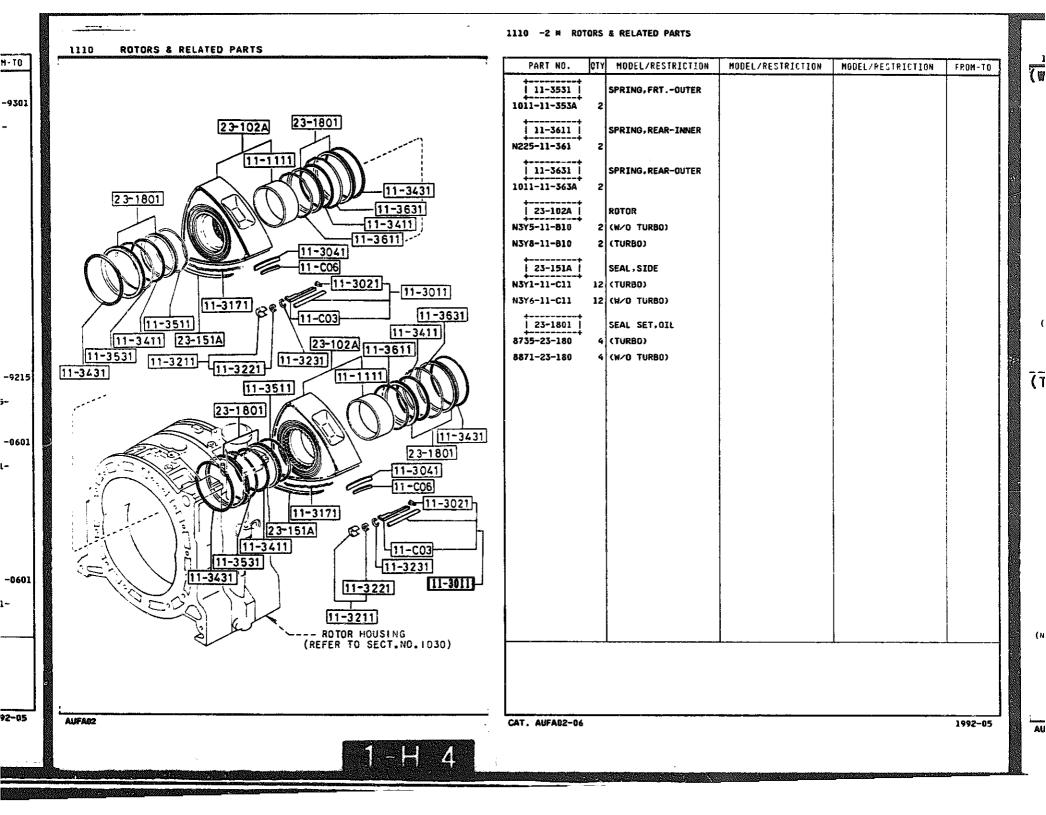


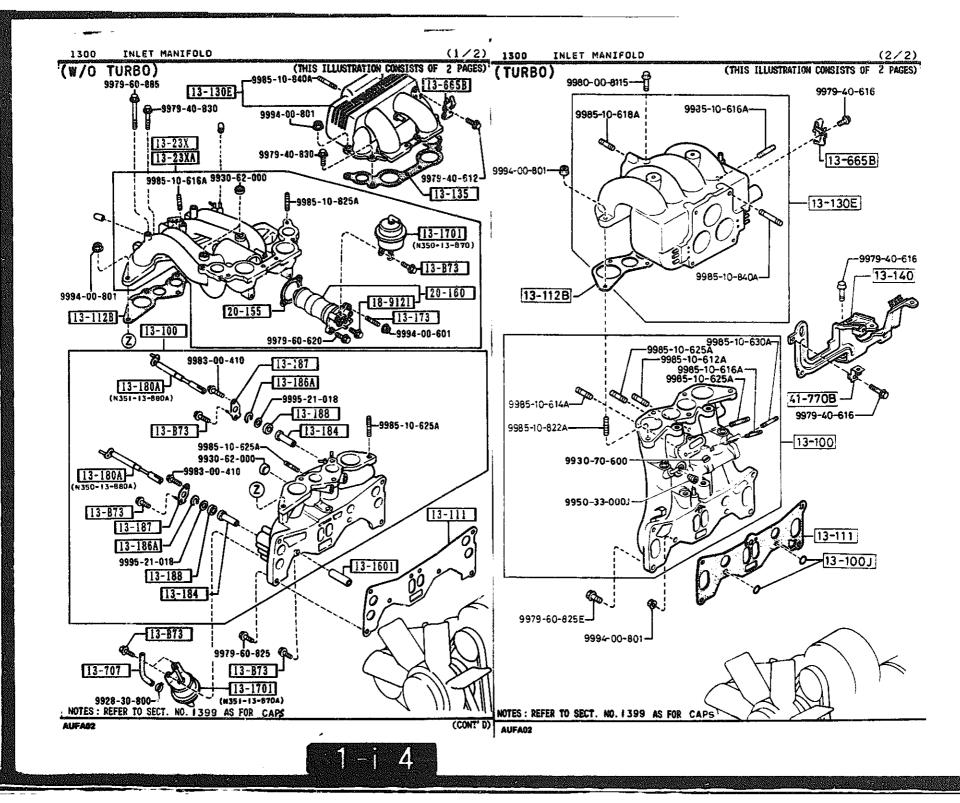


M-TO

92-05

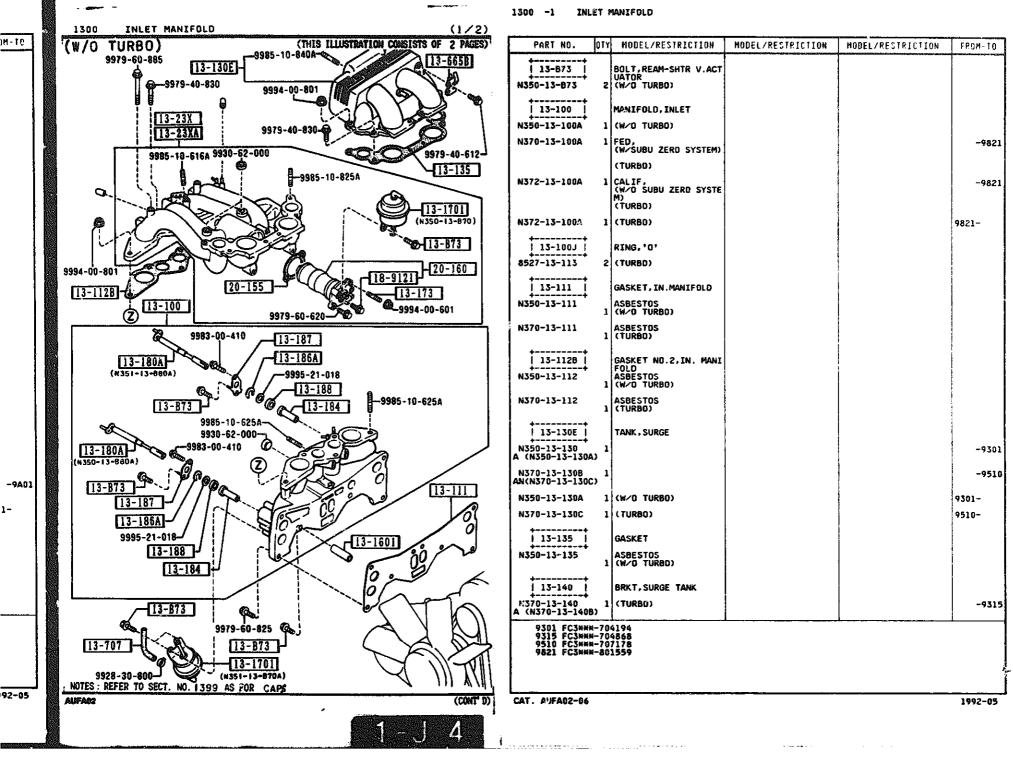


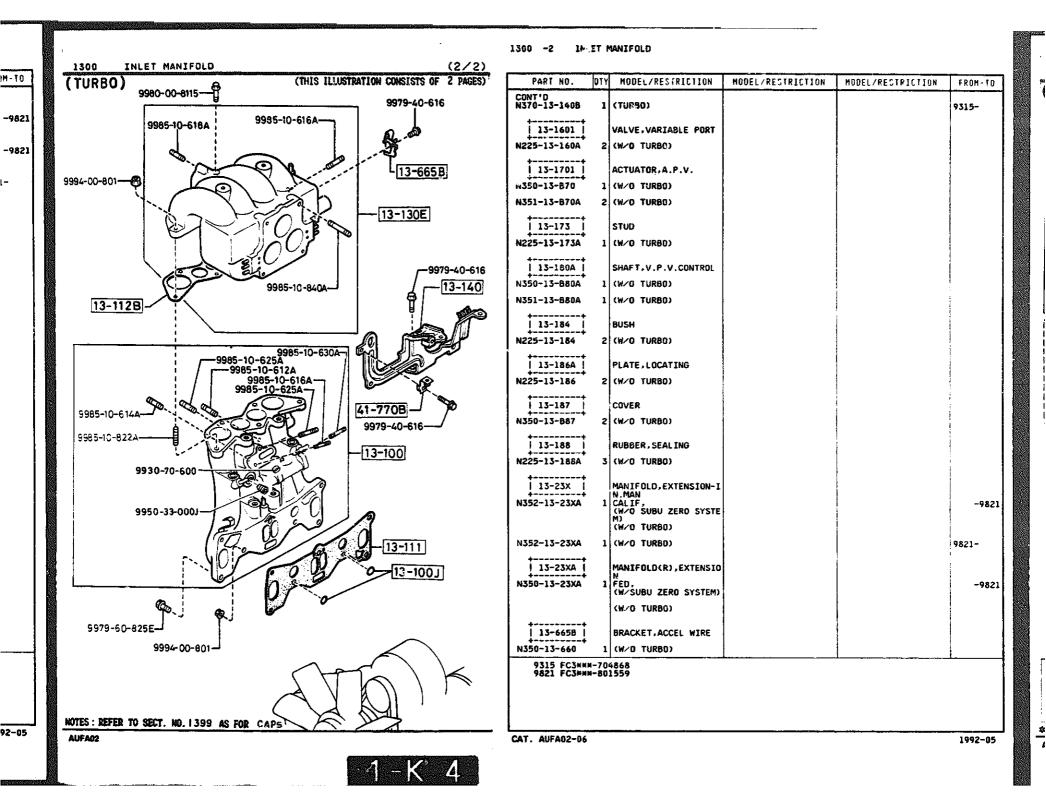

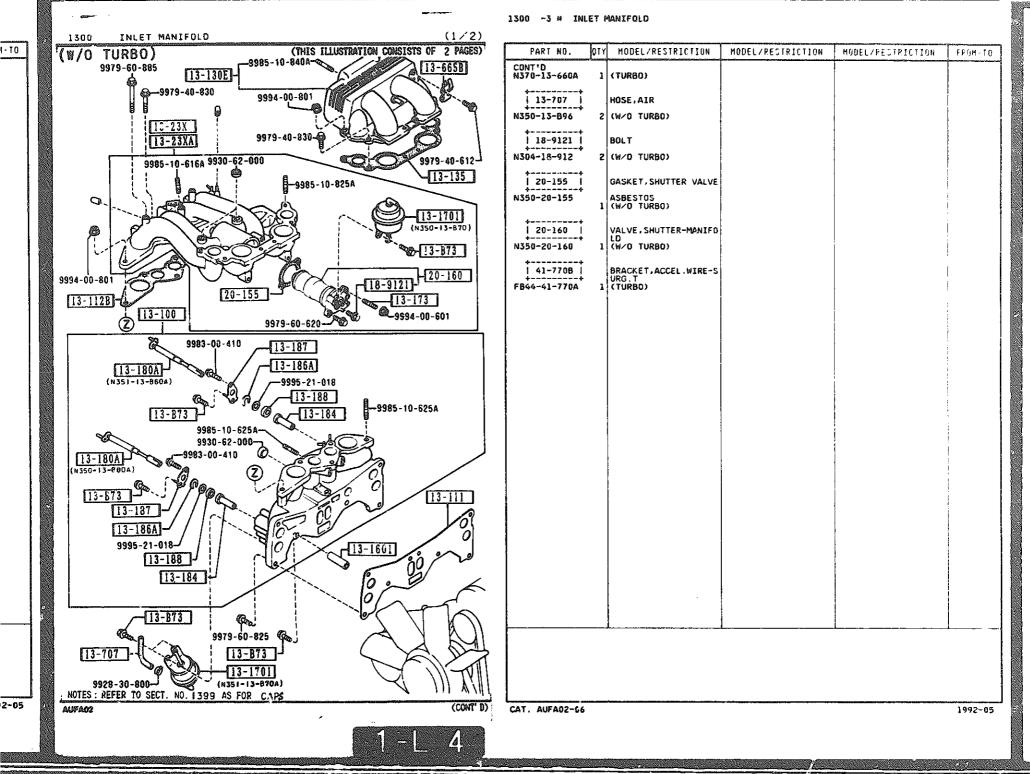


T

1-TO

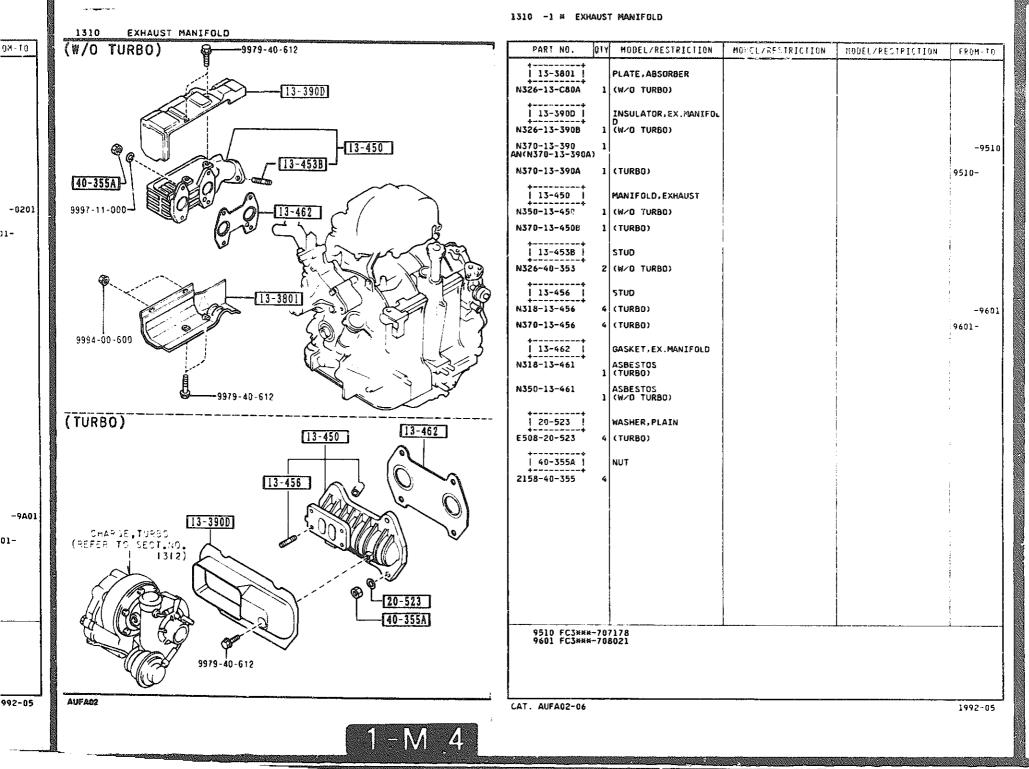

A

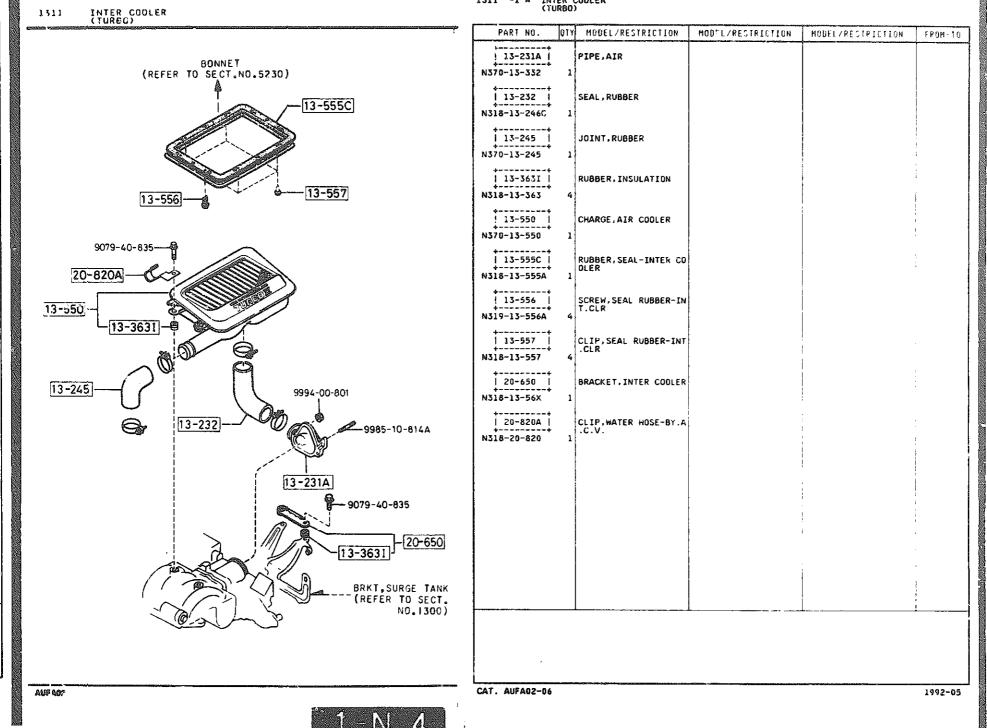

1311 -1 M INTER COOLER (YURBO)

M-10

-9821

-9821

-01.

92-05

	SECTION NAME INDEX (ENGINE)									
ſ	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LG.NO	SEC.NO	SECTION NAME	
	1-003	1000	SHORT ENGINE & GASKET SETS (W/O TURBO)	1-G11	1840	STARTER				
	1-003	1200 A	SHORT ENGINE & GASKET SETS	1-J11	1850	BATTERY	Ì			
	3-003	1000 Å	(TURBO)	1-К11	1910	TCRQUE CONVERTER, OIL PUMP & PI PINGS (AUTOMATIC)				
	1-203	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR OL SYSTEM (AUTOMATIC)				
	1-603	1030 A	ROTOR HOUSINGS (Turbo)	1-112	1925	CONTROL VALVE (AUTOMATIC)				
	1-J03	1040	OIL PAN,FRONT & REAR HOUSING (W/O TURBO)	1-D13	1930	CLUTCHES & PLANETARY GEARS (AU TOMATIC)				
	1-M03	1040 A	OIL PAN,FRONT & REAR HOUSING (TURBD)	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON				
	1-004	1100	ECCENTRIC SHAFT & FLYWHEEL	1-C14	1950	MANUAL LINKAGE SYSTEM (AUTOMAT				
	1-604	1110	ROTORS & RELATED PARTS	1 514	10/0			-		
	1-104	1300	INLET MANIHOLD	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)				
i	1-M04	1310	EXHAUST MANIFOLD		ļ					
	1-N04	1311	INTER COOLER (TURBO)							
	1-005	1312	TURBO CHARGER (TURBO)							
	1-F05	1320	FUEL SYSTEM							
	1-но5	1325	FUEL DISTRIBUTOR							
	1-105	1330	AIR CLEANER							
	1-M05	1350	STARTING ASSIST SYSTEM							
	1-N05	1364	THROTTLE BODY	S						
Щ	1-F06	1371	AIR PUMP & AIR CONTROL VALVE	B)	17					
	1-106	1380	EMISSION CONTROL SYSTEM		9					
	1-D07	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)							
	1-F07	1400	DIL PUMP & FILTER (W/O TURBO)							
	1-107	1400 A	OIL PUMP & FILTER (TURBO)							
	1-M07	1500	COOLING SYSTEM		ĺ					
	1-F08	1580	BRACKET, PULLEY & BELT							
1	1-009	1600	CLUTCH DISC & COVER (MANUAL)							
	1-F09	1700	TRANSMISSION CASE (MANUAL)							
	1-J09	1710	TRANSMISSION GEARS(MANUAL)							
Ì	1-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)							
ļ	1-M10	1800	ENGINE ELECTRICAL SYSTEM							
	1-E11	1830	ALTERNATOR		l					
l		l				<u> </u>				

SECTION NAME INDEX (ENGINE)


CATLOG-NO= AUFA02-06


DATE. 1992-05




05

\_

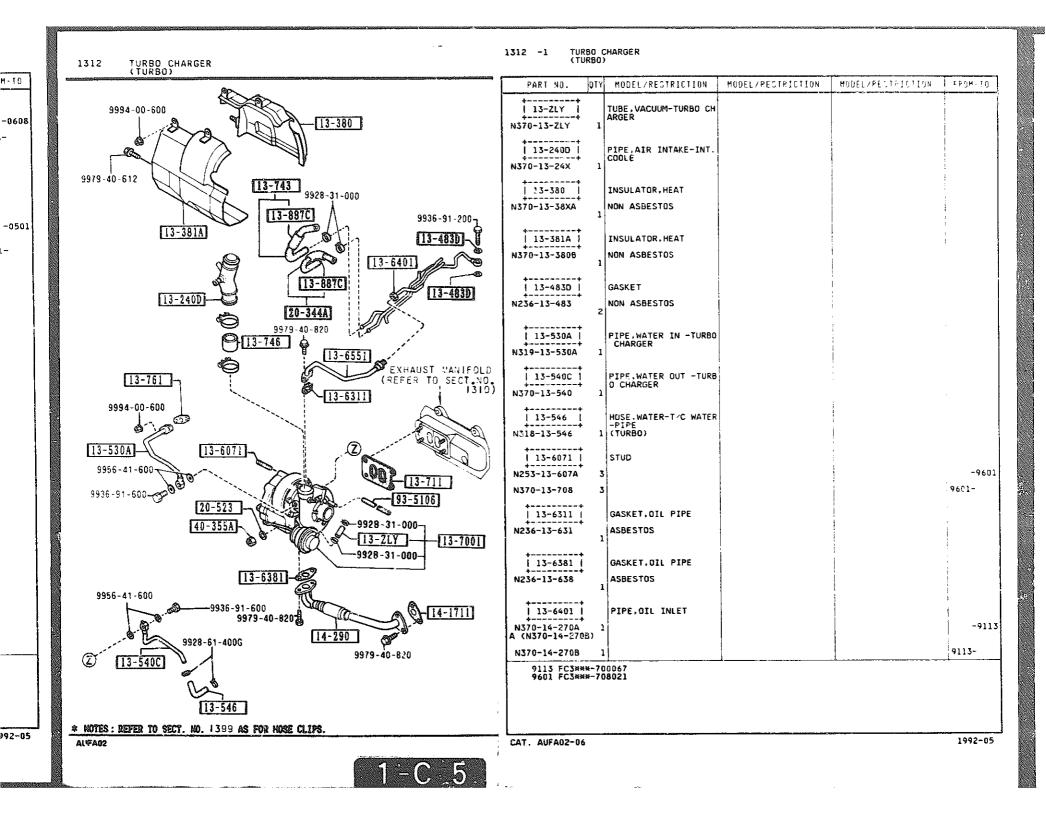

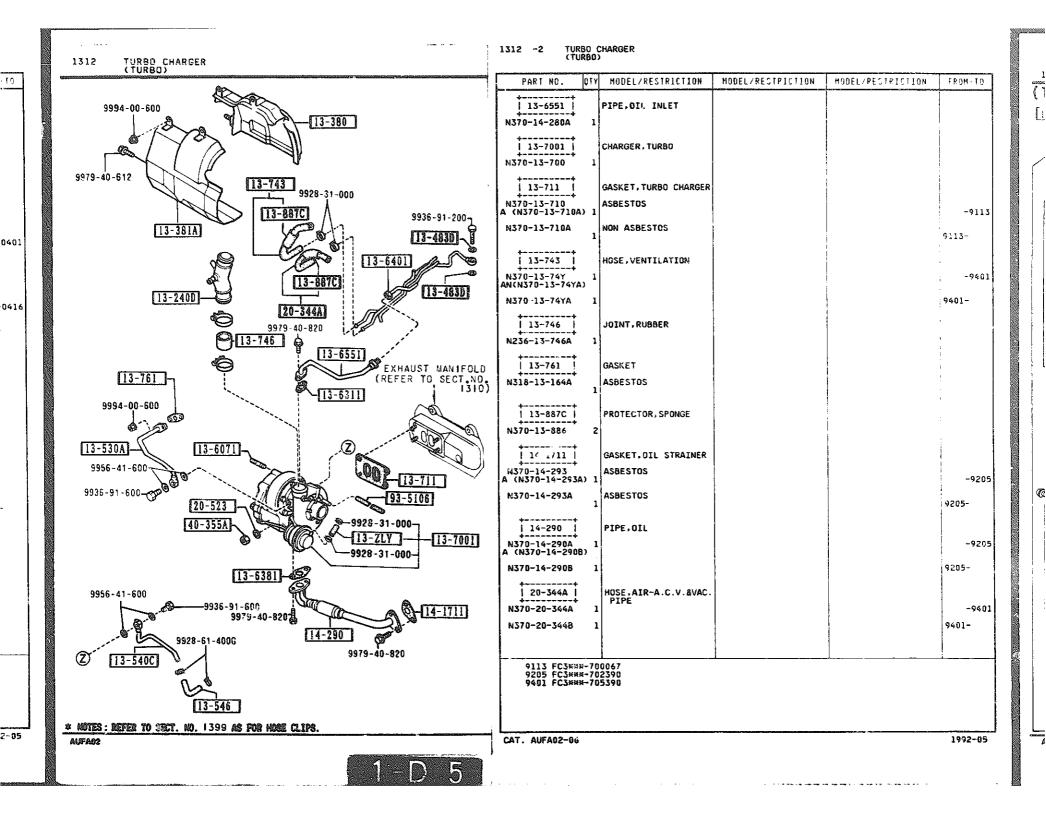

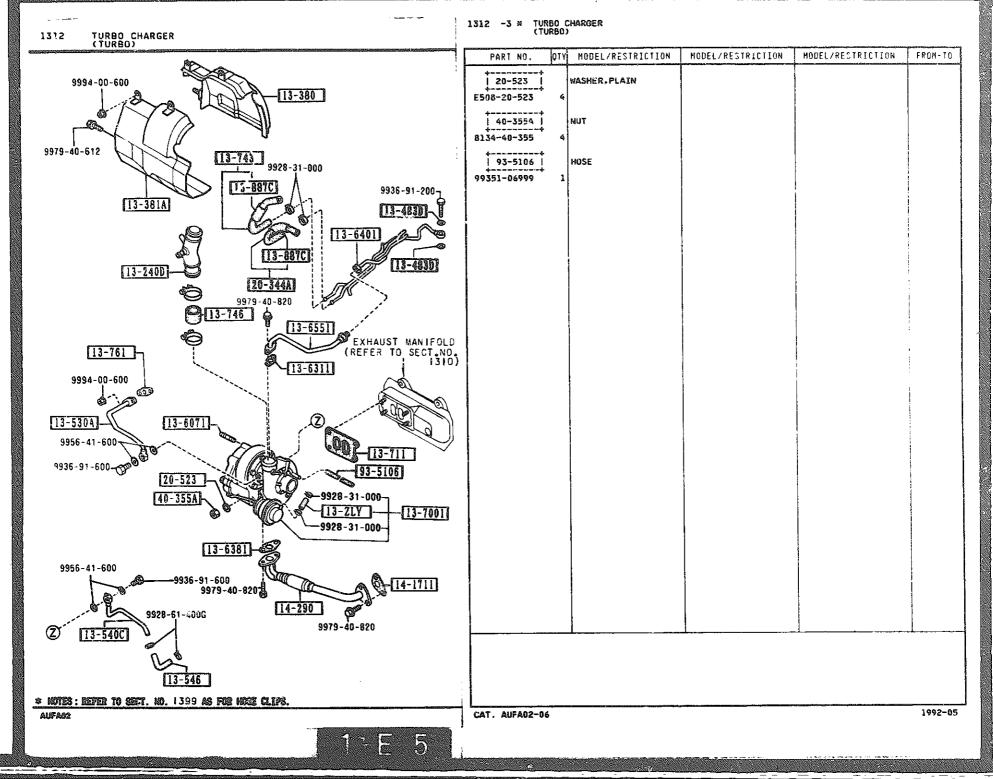


9601

ŤÐ


\_\_\_\_\_

(1

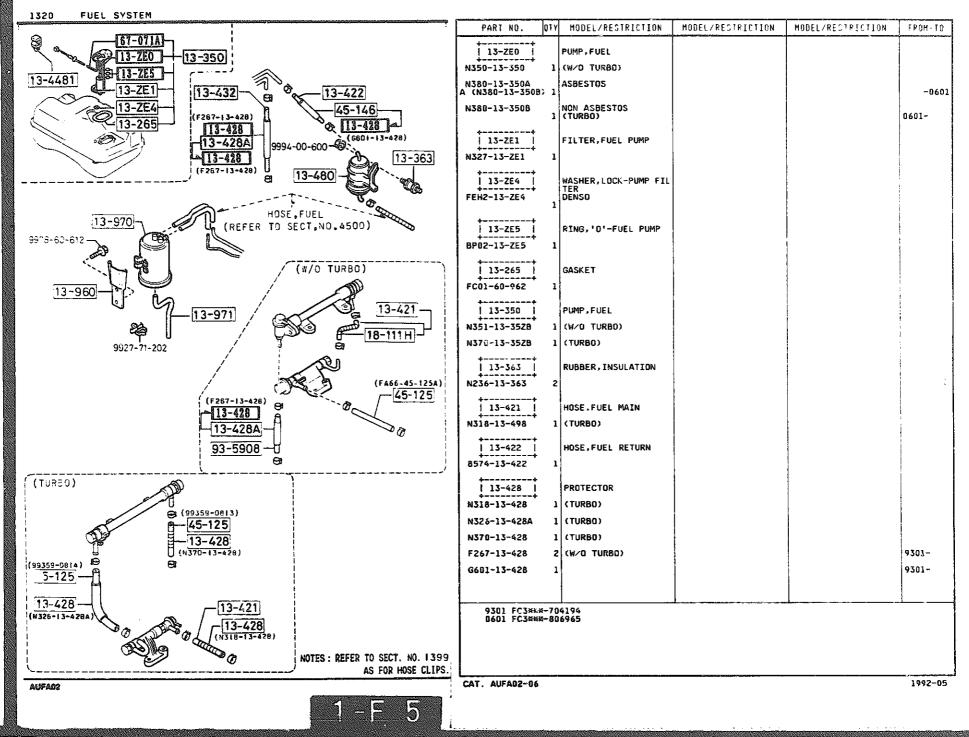

1320 -1 FUEL SYSTEM

- T 0

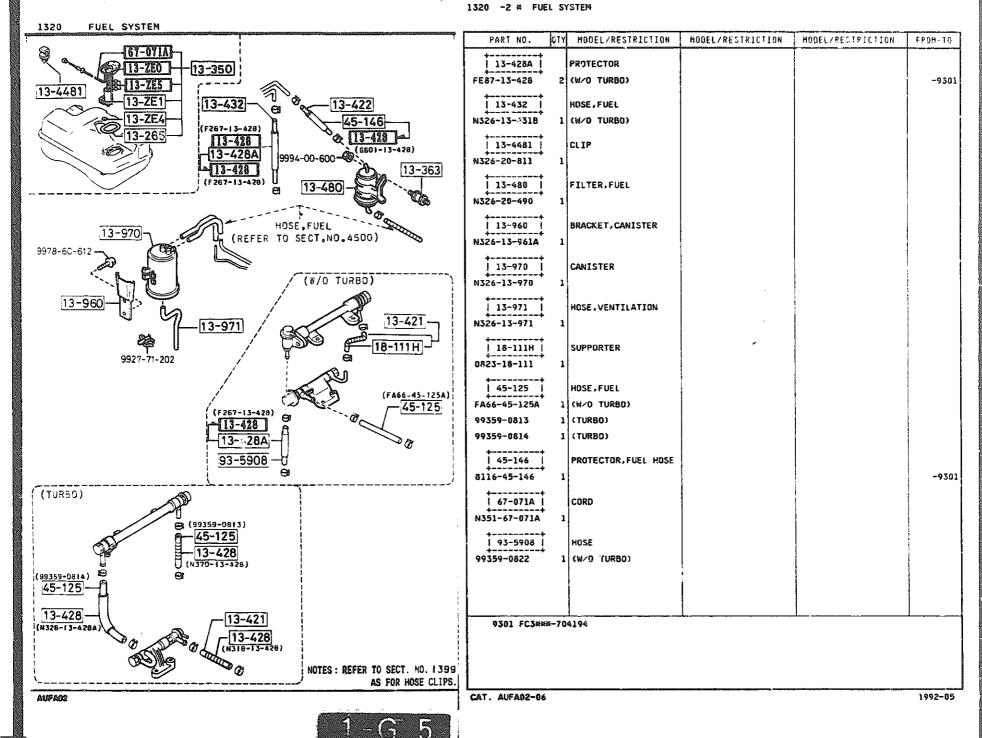


9113

2-05

1

<u>а</u>и


NC

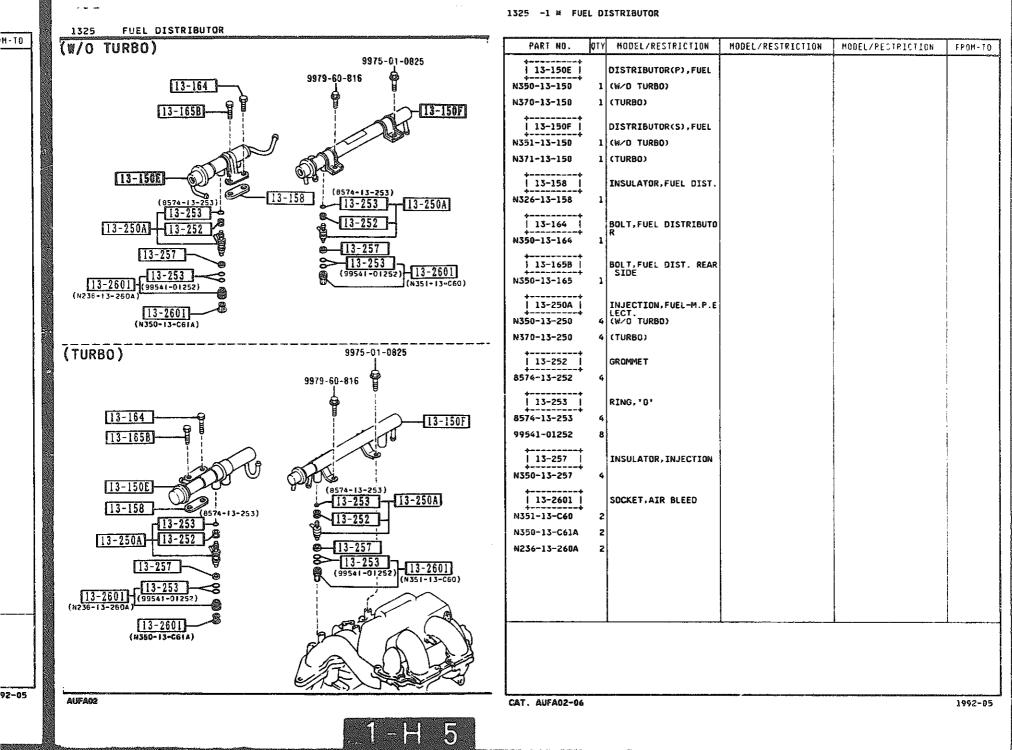



위 - T Đ

NO

7

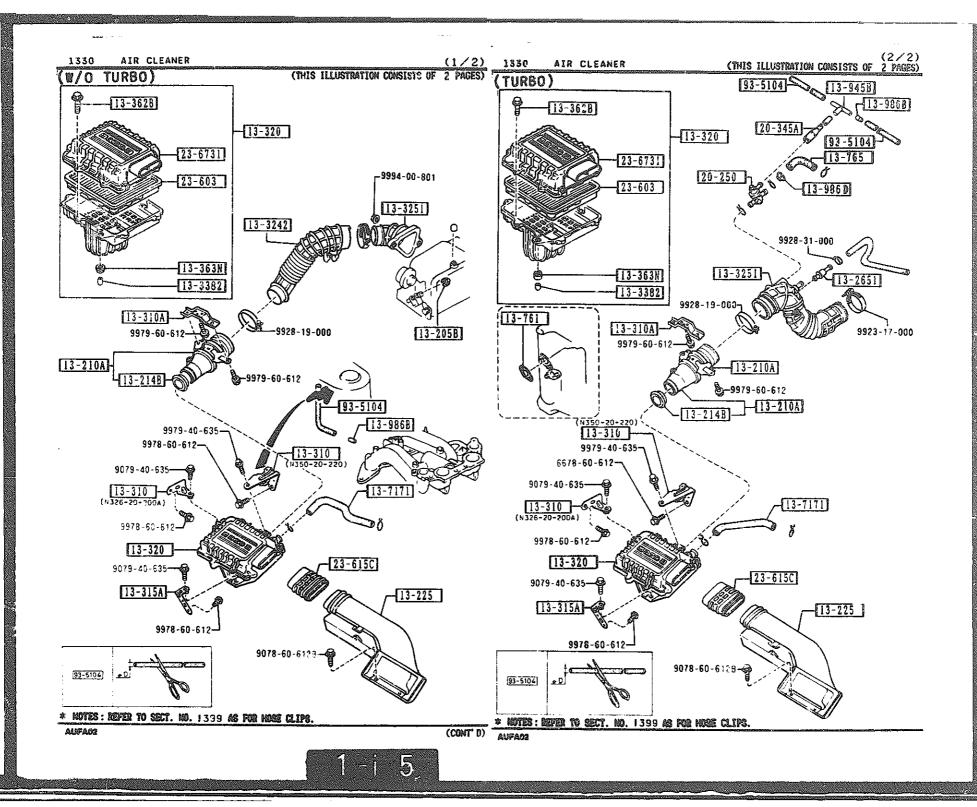

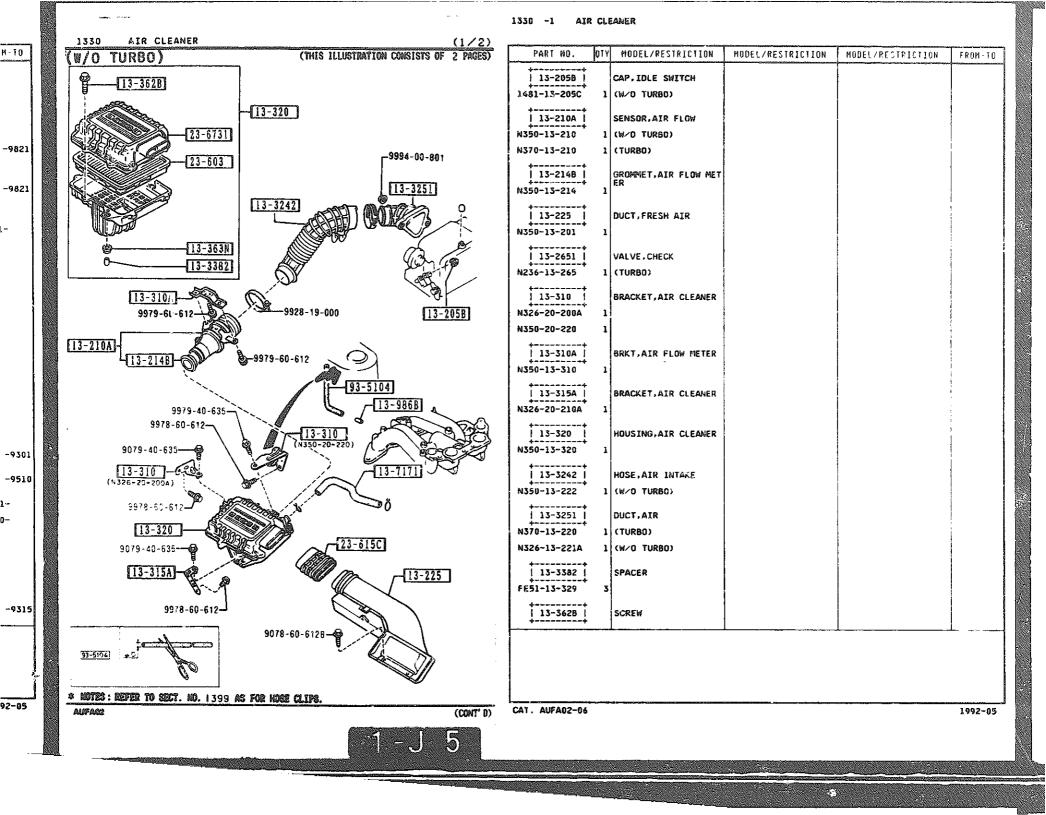

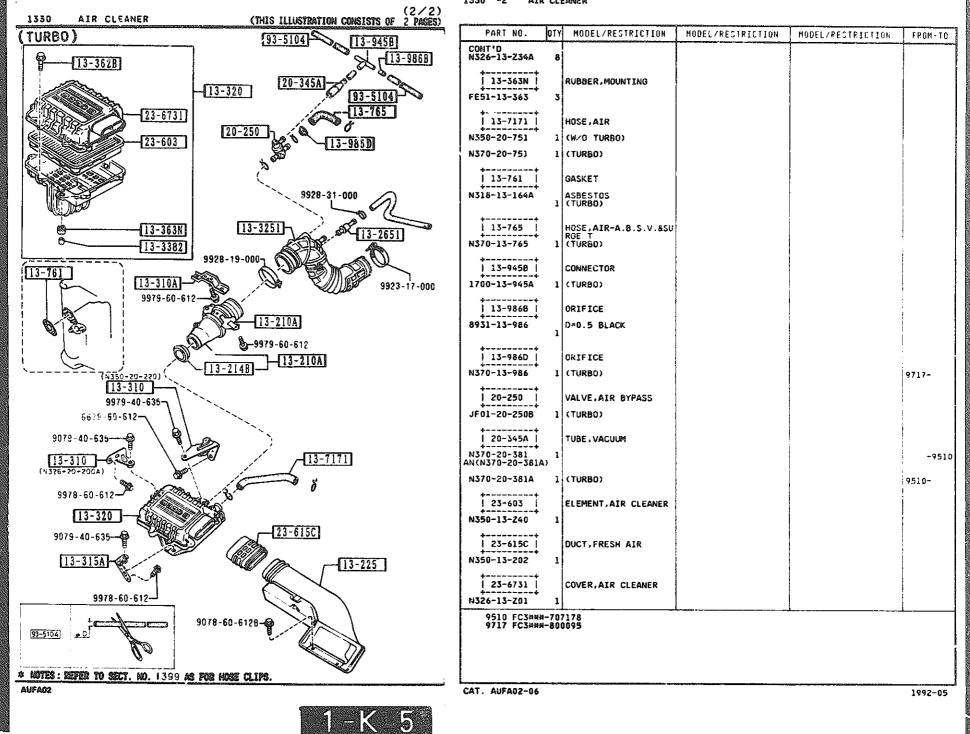


Ŧ0


9821


9821

-05

auf

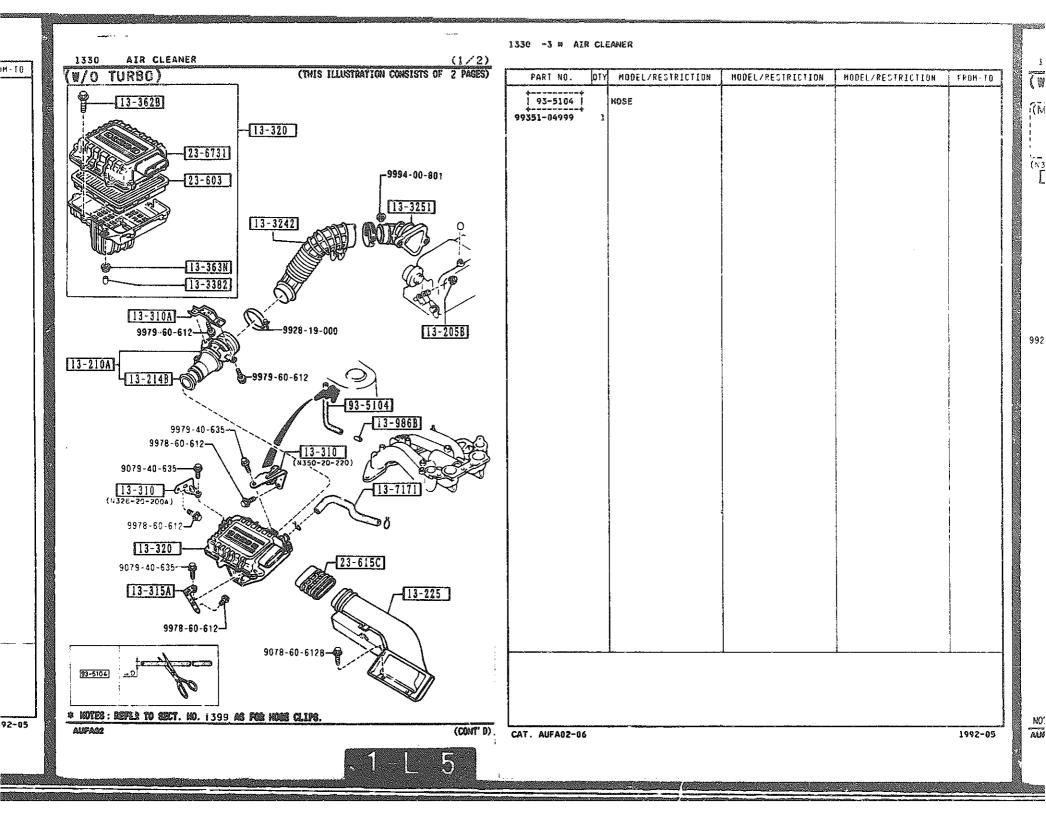

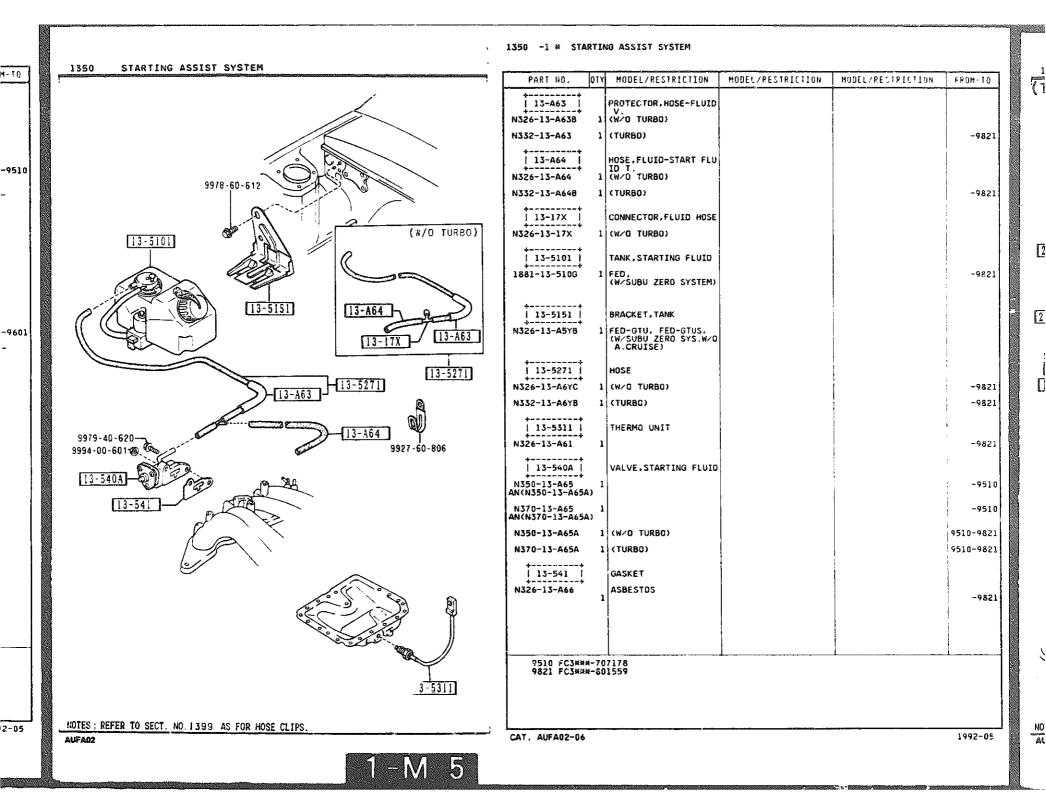

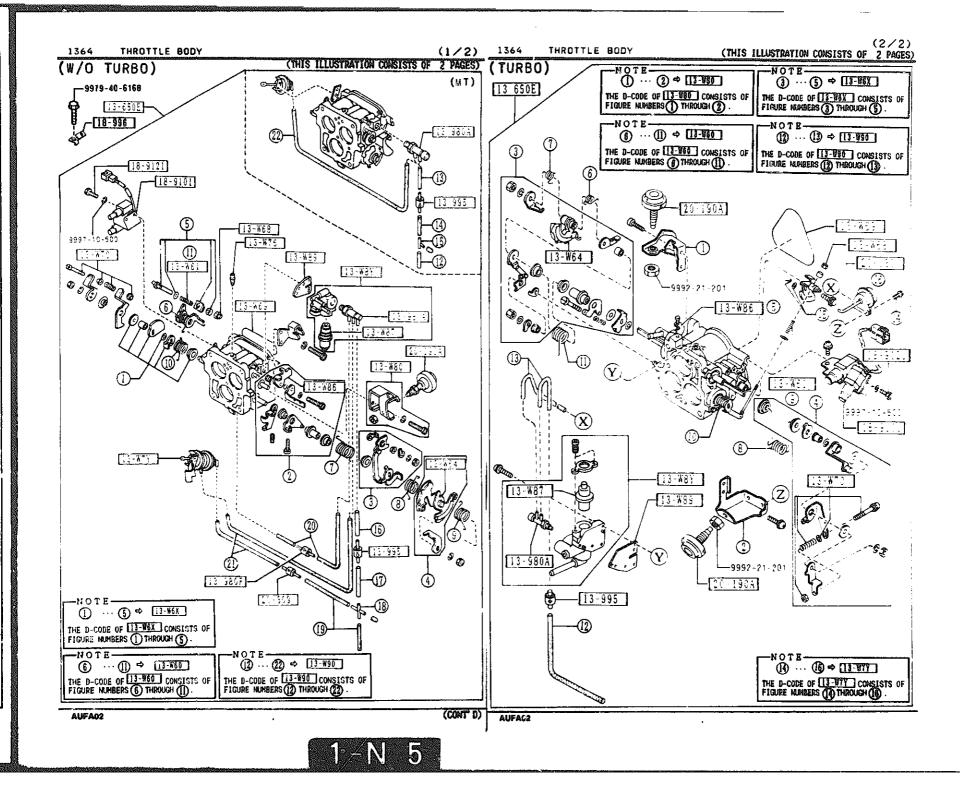

AUP

M-10

	SECTION NAME INDEX (ENGINE)								
[	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME
	1-003	1000	SHORT ENGINE & GASKET SETS	1-G11	1840	STARTER		[ <b></b>	
	1-003	03 1000 A SHORT ENGINE & GASKET SETS	1-311	1850	BATTERY		ļ		
			(TURBO)	1-611	1910	TORQUE CONVERTER, DIL PUMP & PI PINGS (AUTOMATIC)			
	1-E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR			
	1-603	1030 A	ROTOR HOUSINGS			OL SYSTEM (AUTOMATIC)			
	1-J03	1040	(TURBO) VIL PAN,FRONT & REAR HOUSING	1-112	1925	CONTROL VALVE (AUTOMATIC)		:	
	1-505	1040	(W/O TURBO)	1-015	1930	CLUTCHES & PLANETARY GEARS (AU Tomatic)			
	1-M03	1040 A	OIL PAN, FRONT & REAR HOUSING (TURBO)	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON			
	1-004	1100	ÉCCENTRIC SHAFT & FLYWHEEL	1-014	1950	MANUAL I INKAGE SYSTEM (AUTOMAT	l	í	
	1-G04	1110	ROTORS & RELATED PARTS		1960	IC) GASKE" & SEAL KIT (AUTOMATIC)		-	
	1-104	1300	INLET MANIFOLD	1-E14					
	1-M04	1310	EXHAUST MANIFOLD						
	1-N04	1311	INTER COOLER (Turbo)						
	1-C05	1312	TURBO CHARGER (TUREO)						
	1~F05	1320	FUEL SYSTEM						
	1-H05	1325	FUEL DISTRIBUTOR						
	1-105	1330	AIR CLEANER		ł				
0000	1-M05	1350	STARTING ASSIST SYSTEM						
	1-N05	1364	THROTTLE BODY						
	1-F06	1371	AIR PUMP & AIR CONTROL VALVE						
	1-106	1380	EMISSION CONTROL SYSTEM						
	1-007	1399	CAP & HOSE CLIP (INLF) & EXHAU ST SIDE)	Ð	7				
	1-F07	1400	DIL PUMP & FILTER (W/D TURBO)						
	1-107	1400 A	OIL PUMP & FILTER (TURBO)						
	1-M07	1500	CODLING SYSTEM	i					
	1-F08	1580	BRACKET, PULLEY & BELT						
	1-009	1600	CLUTCH DISC & COVER (MANUAL)						
	1-F09	1700	TRANSMISSION CASE (MANUAL)						
	1-J09	1710	TRANSMISSION GEARS(MANUAL)						
	1-410	1720	CHANGE CONTROL SYSTEM (MANUAL)						
	1-M10	1800	ENGINE ELECTRICAL SYSTEM						
	1-E11	1830	ALTERNATOR					ļ	
L									


SECTION NAME INDEX (ENGINE)


CATLOG-NO= AUFA02-06

the second to

 
DATE. 1992-05






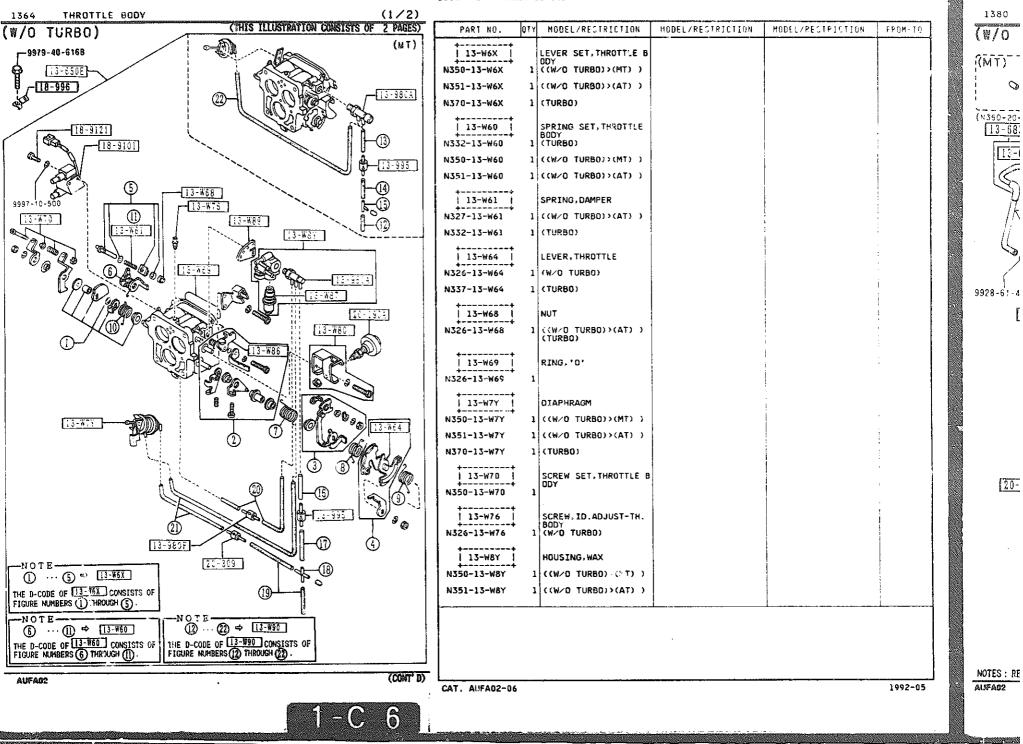


Ø

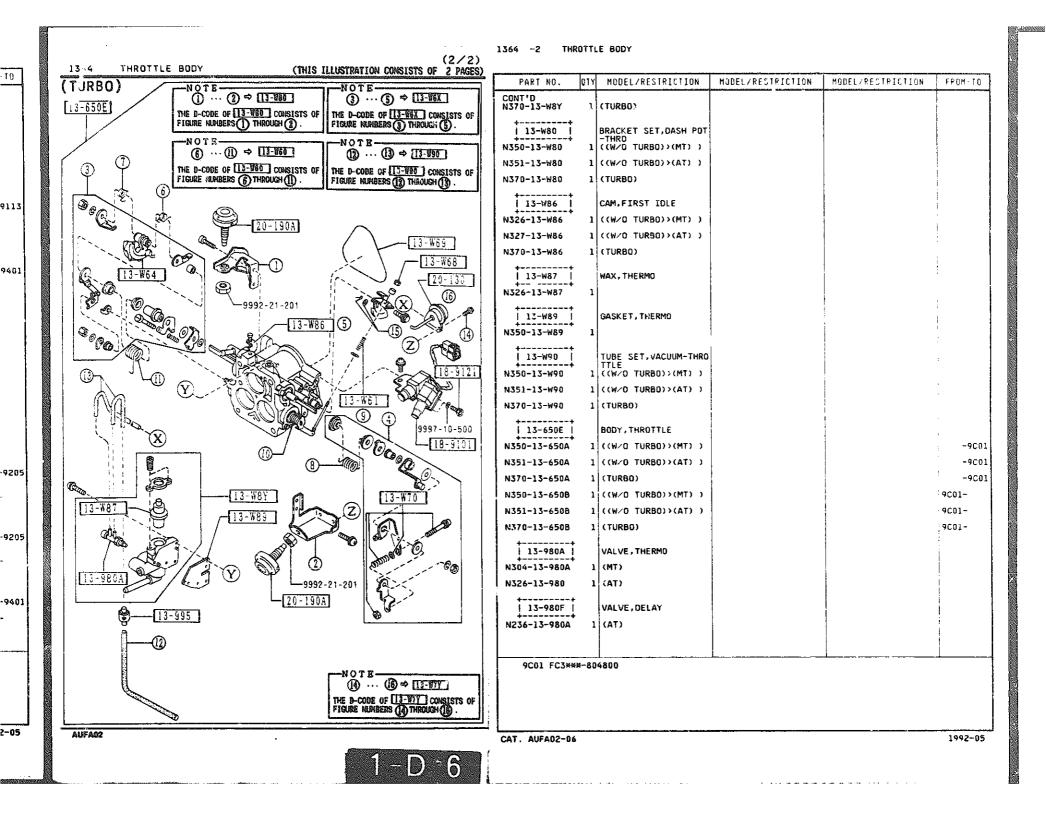

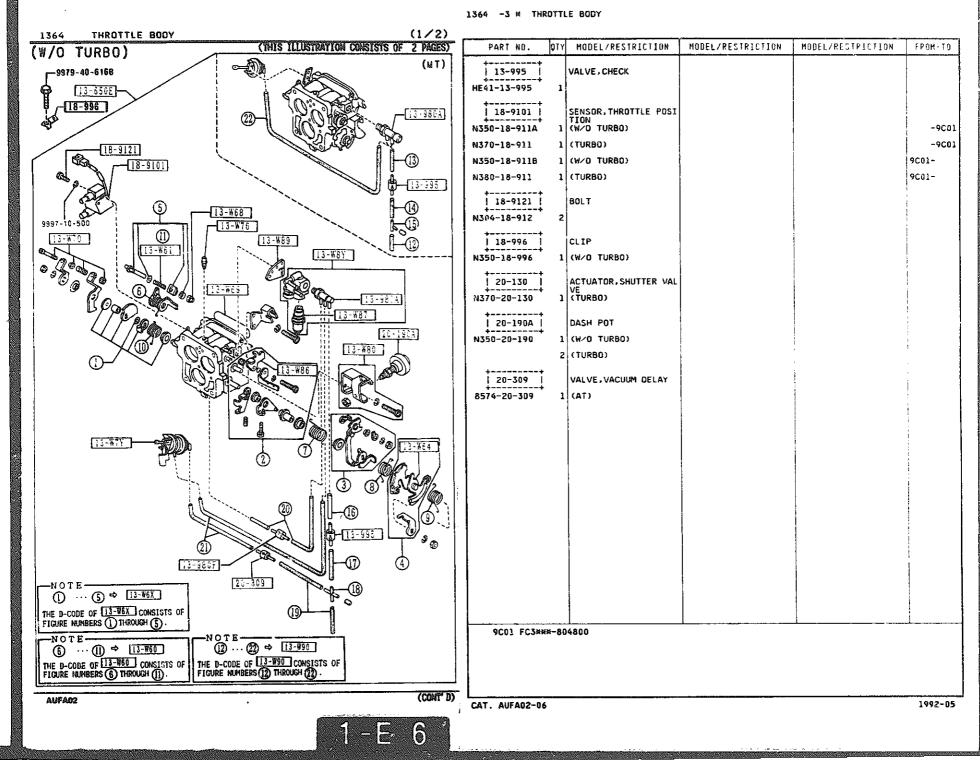

\_\_\_\_\_

92-05

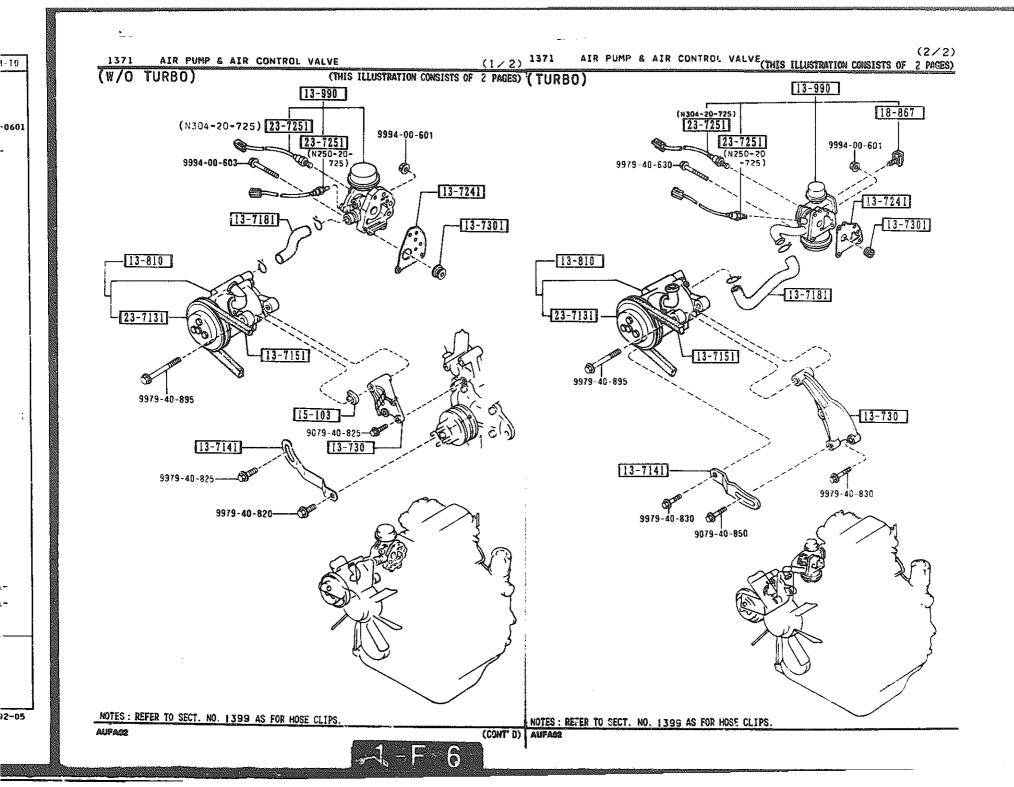


1-10


99

1


99


 $\zeta$ 

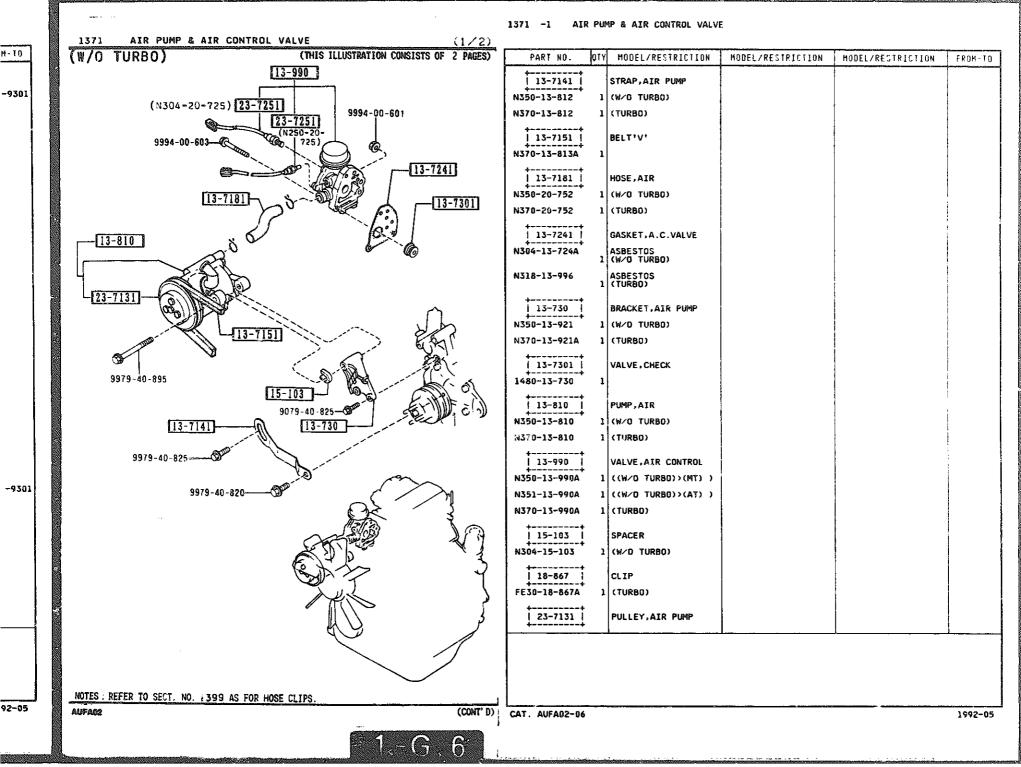


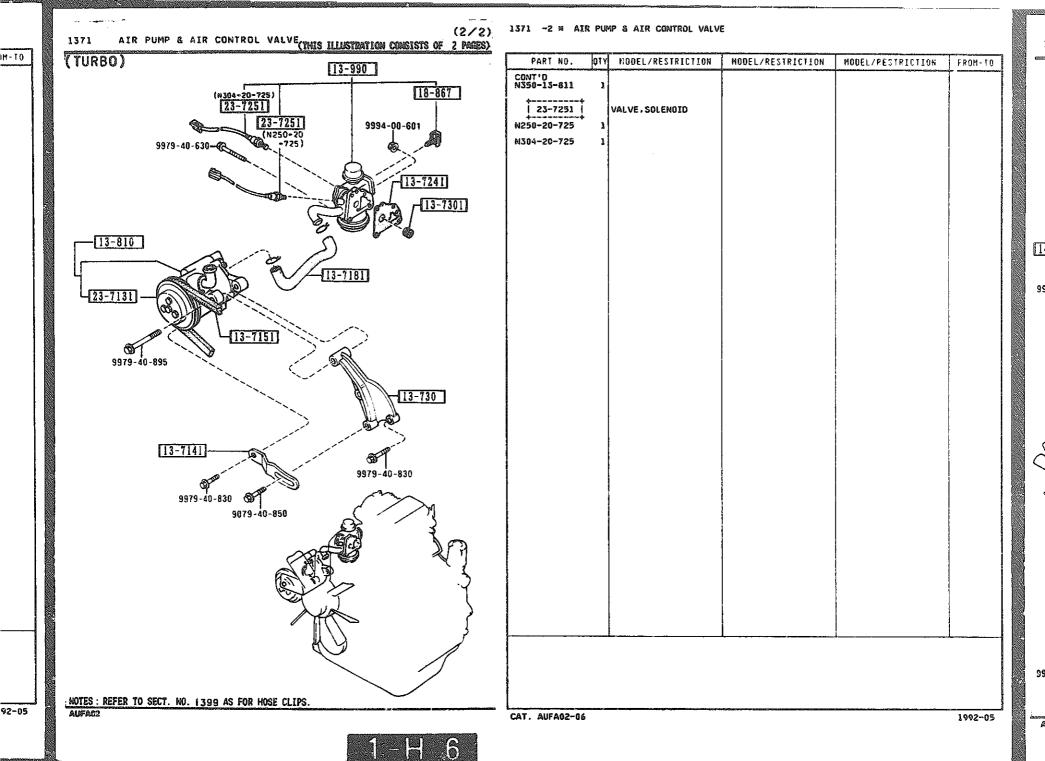



ß

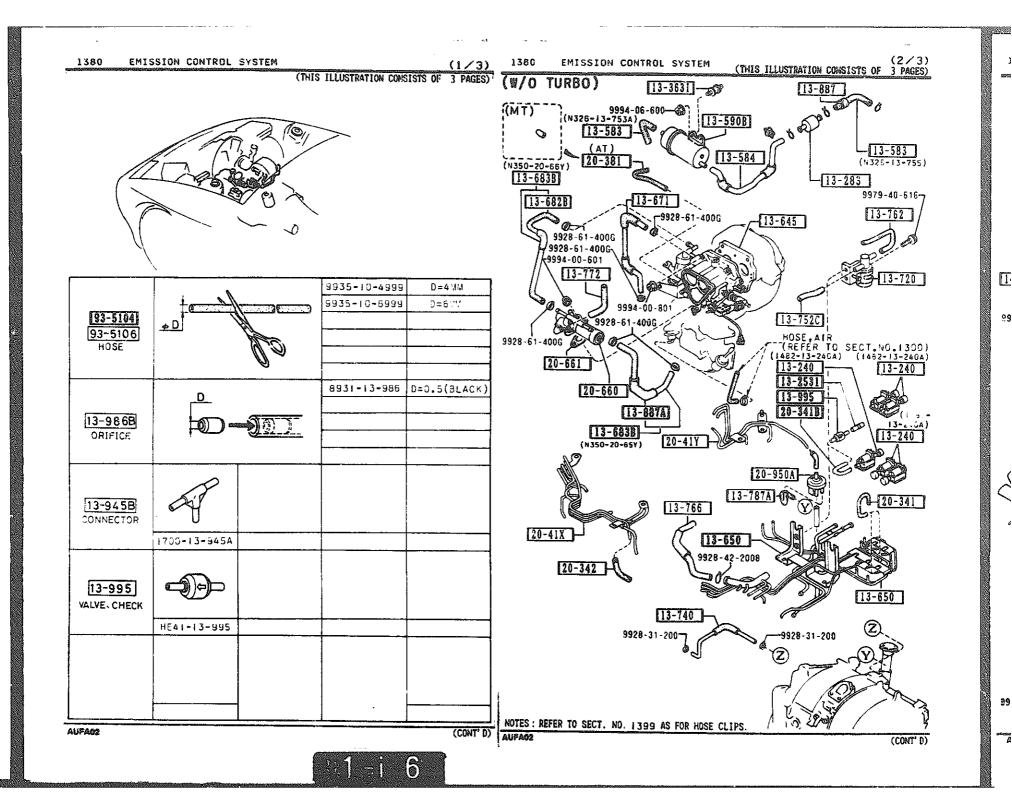

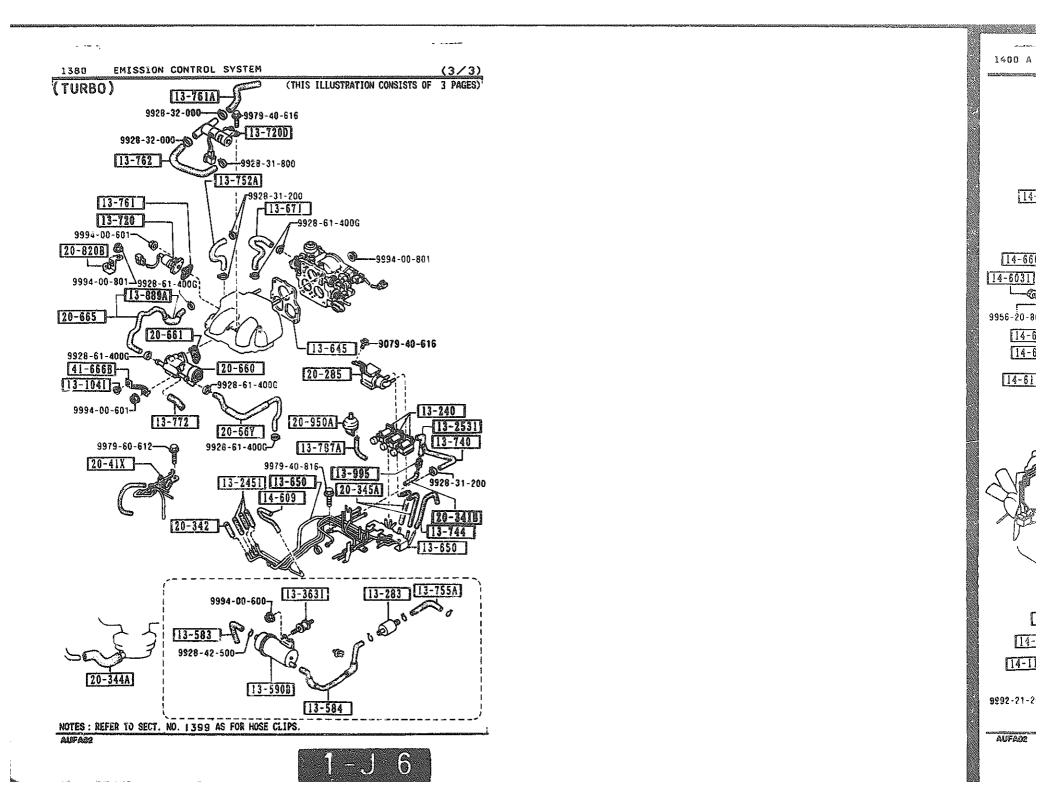

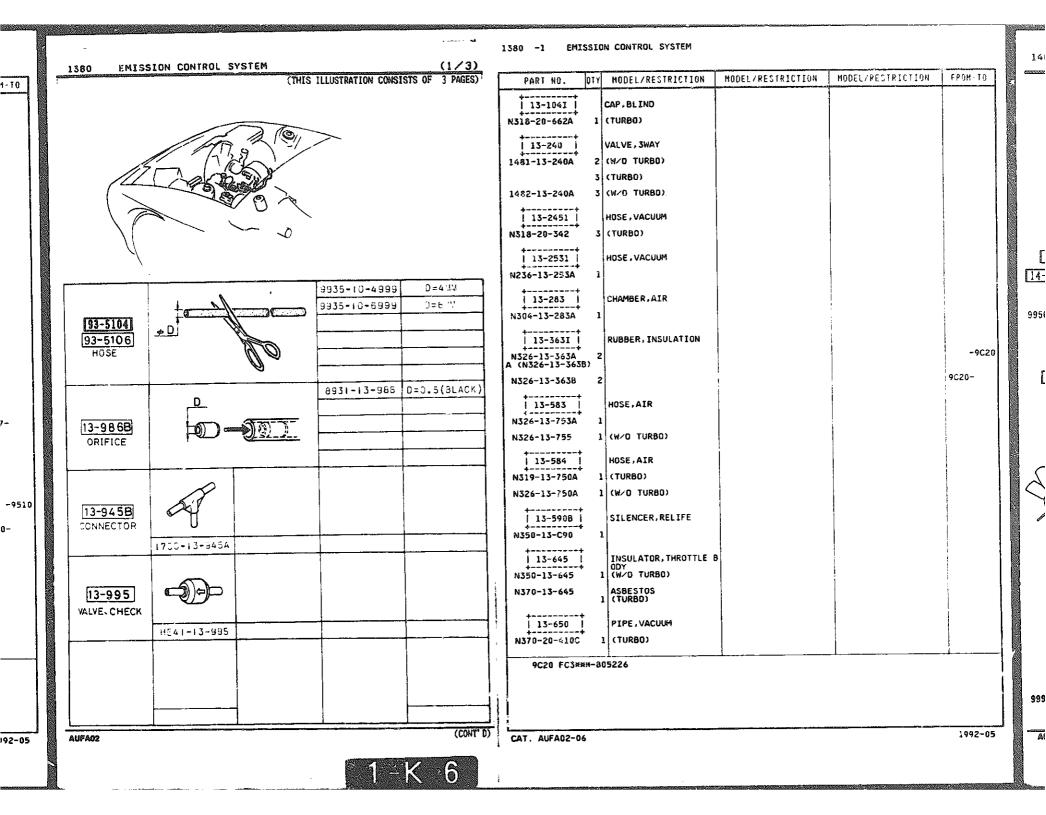

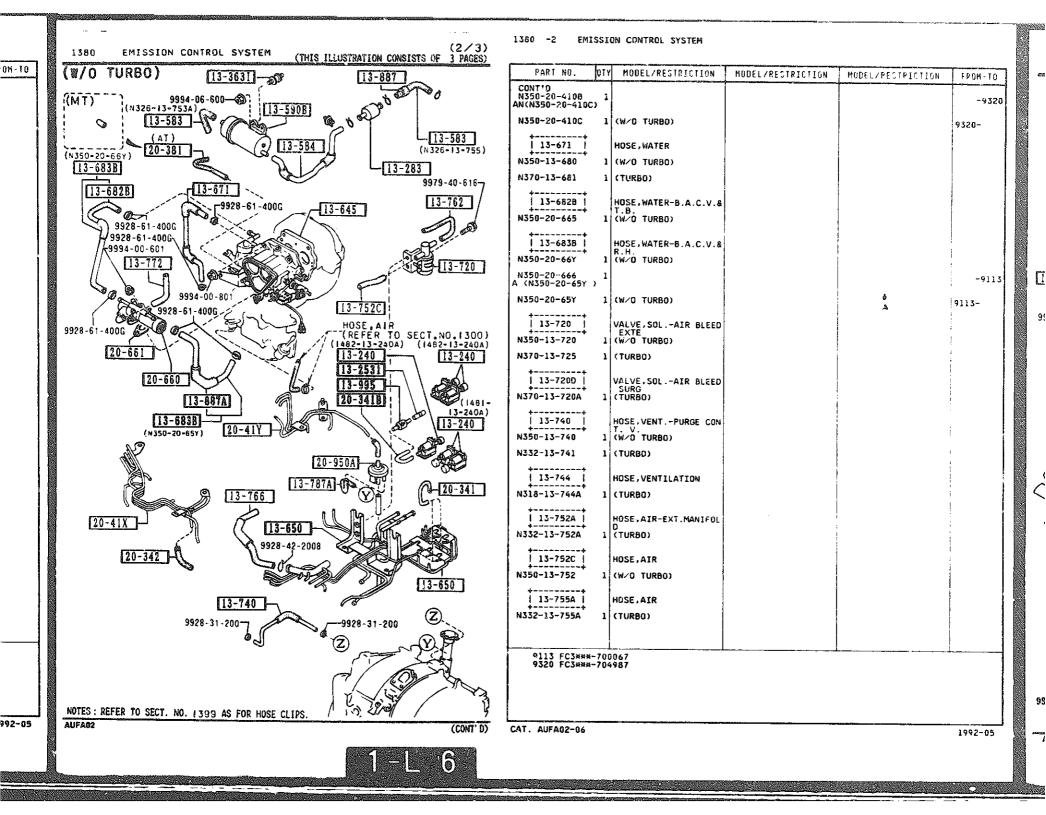

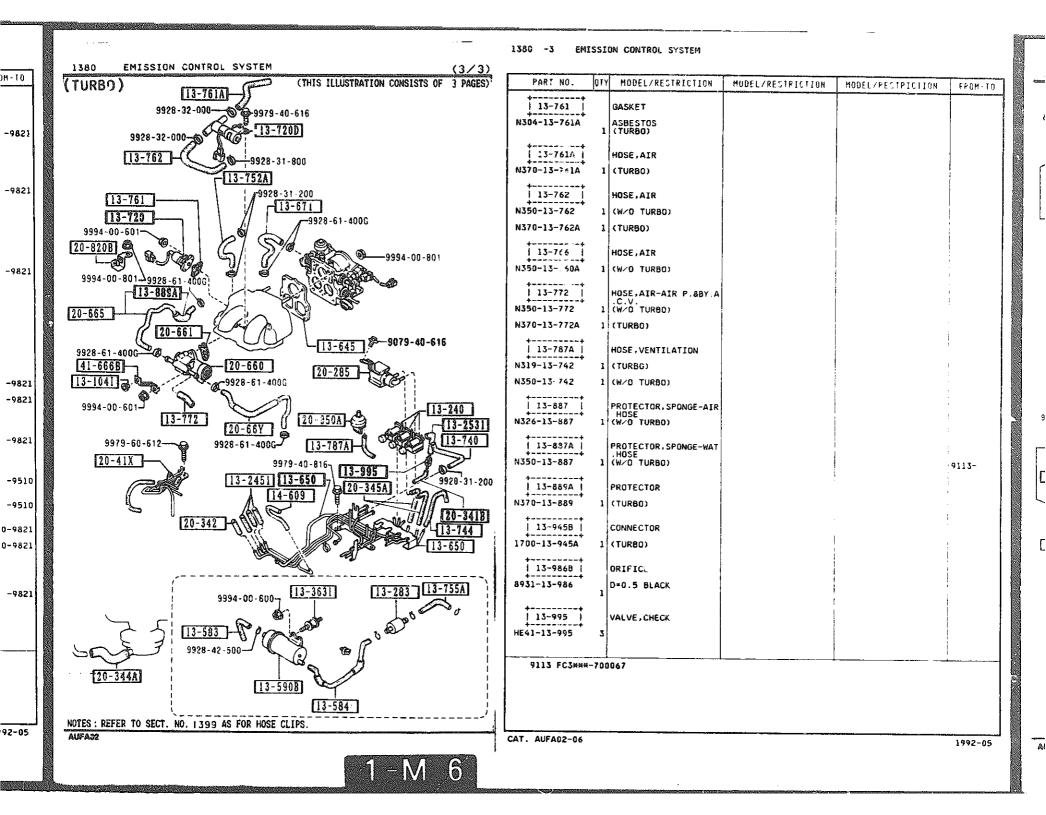

1380 EMISSION CONTROL SYSTEM		N CONTROL SYSTEM			
(THIS ILLUSTRATION CONS	(1/3) ISTS OF 3 PAGES) PART NO. OTY	MODEL/RESIRICTION	MODEL/RESTRICTION	HODEL/PESTPICTION	FPOM-TO
	++	TUBE NO.4,AIR (Turbo)			
	**	VALVE,DUTY SOLENOID (TURBO)			
	++	HOSE,VACUUM (W/O TURBO)			
	++   20-341B   ++ B305-20-341 1	TUBE,VACUUM-SOL. VAL VE			
9935-10-4999	0=4 W.4 0=4 W.4 N332-20-342A 1	HOSE, VACUUM			
93-5104 93-5106 ¢D	<u>)=6.W</u> <u>i 20-344A i</u> i	HOSE,AIR-A.C.V.&VAC PIPE (TURBO)			
HOSE	20-345A	TUBE,VACUUM (TURBO)			
8931-13-965	N370+20-3450 2	(TURBO)			-9221 9221-
	**********	TUBE, VACUUM		، 	
	N351-20-381 1	(AT)			
	20-41X   1	PIPE NO.2,VACUUM			
	N350-20-41XA 1 A (N350-20-41XB)	,			-9413
13-945B		FED. (W/SUBU ZERO SYSTEM)			-9821
1707-13-9454	N372-20-41XA 1	(TURBO) CALIF, (W/O SUBU ZERO SYSTE M) (TURBO)			-9821
	N350-20-41X8 1	(W/O TURBO)			9413-
	N372-20-41XA 1	(TURBO)			9821-
VALVE- CHECK	20-41¥	PIPE,AIR-VALVE ACTUA			
HE41-13-995	A (N350-20-41YB)				-9301
	N350-20-41YB 1 9221 FC3HHH-703 9301 FC3HHH-704 9320 FC3HHH-704 9413 FC3HHH-704 9821 FC3HHH-B01	987		L	9301-9320
AUFA02	(CONT'D) CAT. AUFA02-06				1992-05
<u>[]</u>	V 6 )			<u></u>	2775- <b>U</b> J


SECTION NAME INDEX (ENGINE)								
LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME
1-C03	1000	SHORT ENGINE & GASKET SETS	1-G11	1840	STARTER			
1-003	1000 A	SHORT ENGINE & GASKET SETS	1-J11	1850	BATTERY			
	(TURBO)	(TURBO)	1-611	1910	TURQUE CONVERTER, OIL PUMP & PI PINGS (AUTOMATIC)	1		
1-E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR			
1-603	1030 A	ROTOR HOUSINGS			OL SYSTEM (AUTOMATIC)			
			1-112	1925	CONTROL VALVE (AUTOMATIC)			
1-703	1040	OIL PAN,FRONT & REAR HOUSING (W/O TURBO)	1-D13	1930	CLUTCHES & PLANETARY GEARS (AU Tomatic)			
1-M03	1040 A	OIL PAN,FRONT & REAR HOUSING (Turbo)	1-113	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)			
1-004	1100	ECCENTRIC SHAFT & FLYWHEEL	1-014	1950	MANUAL LINKAGE SYSTEM (AUTOMAT			
1-G04	1110	ROTORS & RELATED PARTS	1-514	1960				
1-104	1300	INLET MANIFOLD	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)			
1-M04	1310	EXHAUST MANIFOLD						
1-N04	1311	INTER COOLER (TURBO)		1				
1-C05	1312	TURBO CHARGER (Turbo)						
1-F05	1320	FUEL SYSTEM						
1-405	1325	FUEL DISTRIBUTOR						
1-105	1330	AIR CLEANER						
1-M05	1350	STARTING ASSIST SYSTEM						
1-N05	1364	THROTTLE BODY						
1-F06	1371	AIR PUMP & AIR CONTROL VALVE						
1-106	1380	EMISSION CONTROL SYSTEM						
1-D07	1399	CAP & HOSE CLIP (INLET & EXHAU St Side)	1	ļ				
1-F07	1400	OIL PUMP & FILTER (W/O TURBO)						
1-107	1400 A	OIL PUMP & FILTER (TURBO)						
1-M07	1500	COOLING SYSTEM	<i>fee</i>					
1-F08	1580	BRACKET, PULLEY & BELT		57				
1-C09	1600	CLUTCH DISC & COVER (MANUAL)		$\omega$				
1-F09	1700	TRANSMISSION CASE (MANUAL)					ľ	
1-J09	1710	TRANSMISSION GEARS(MANUAL)						
1-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)						
1-M10	1800	ENGINE ELECTRICAL SYSTEM						
1-E11	1830	ALTERNATOR						
L	I		L	1				


SECTION NAME INDEX (ENGINE)

CATLOG-NO= AUFA02-06

DATE. 1992-05



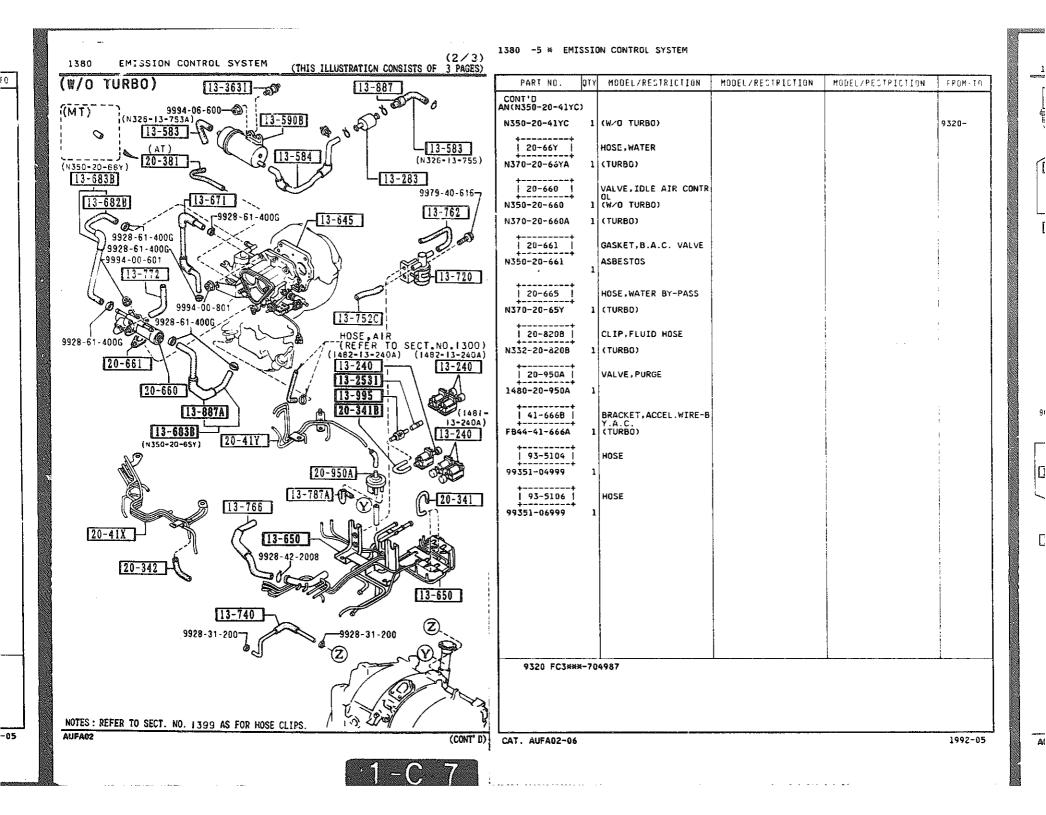


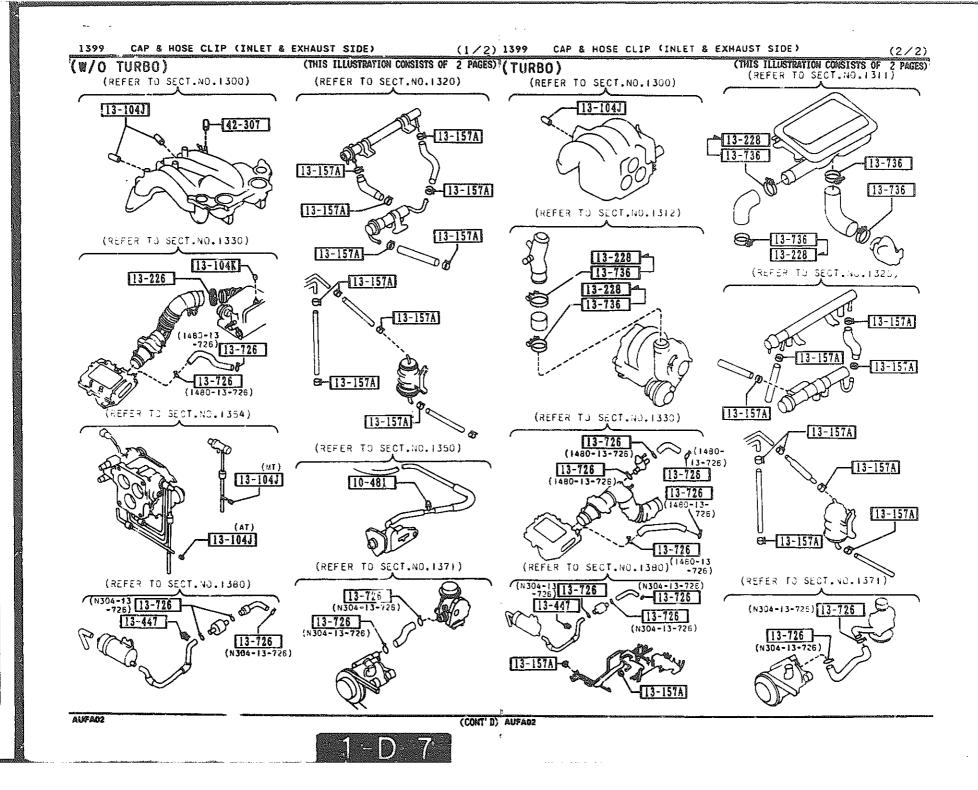

1 - T O

-9C01 -9C01 L-

-9001

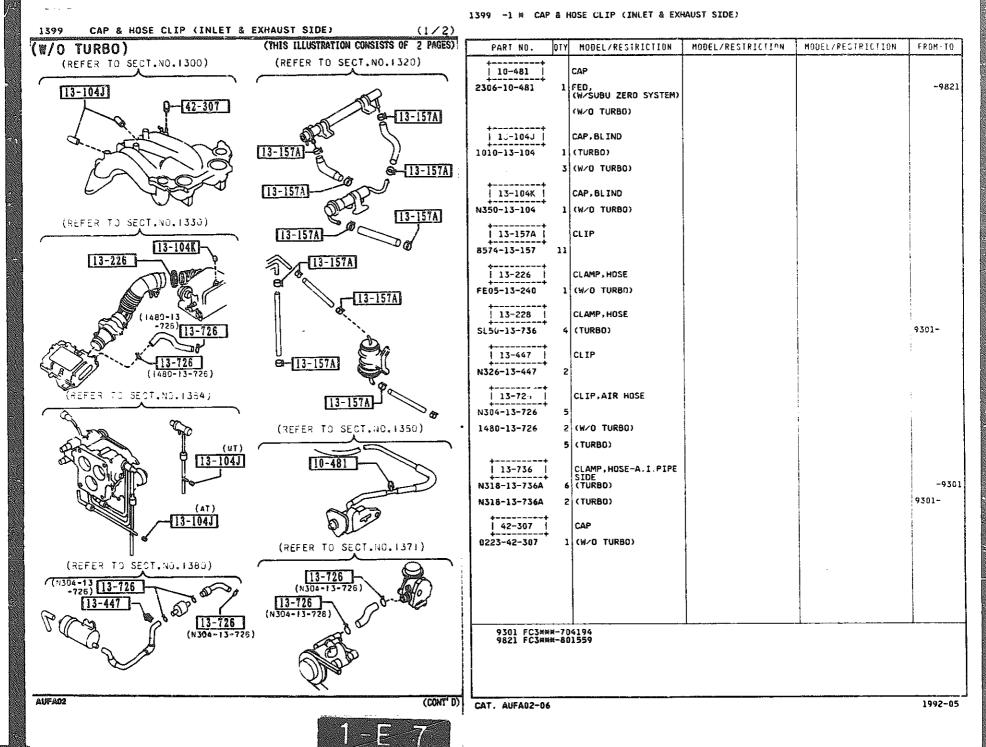



ŦO

C01

C01

A

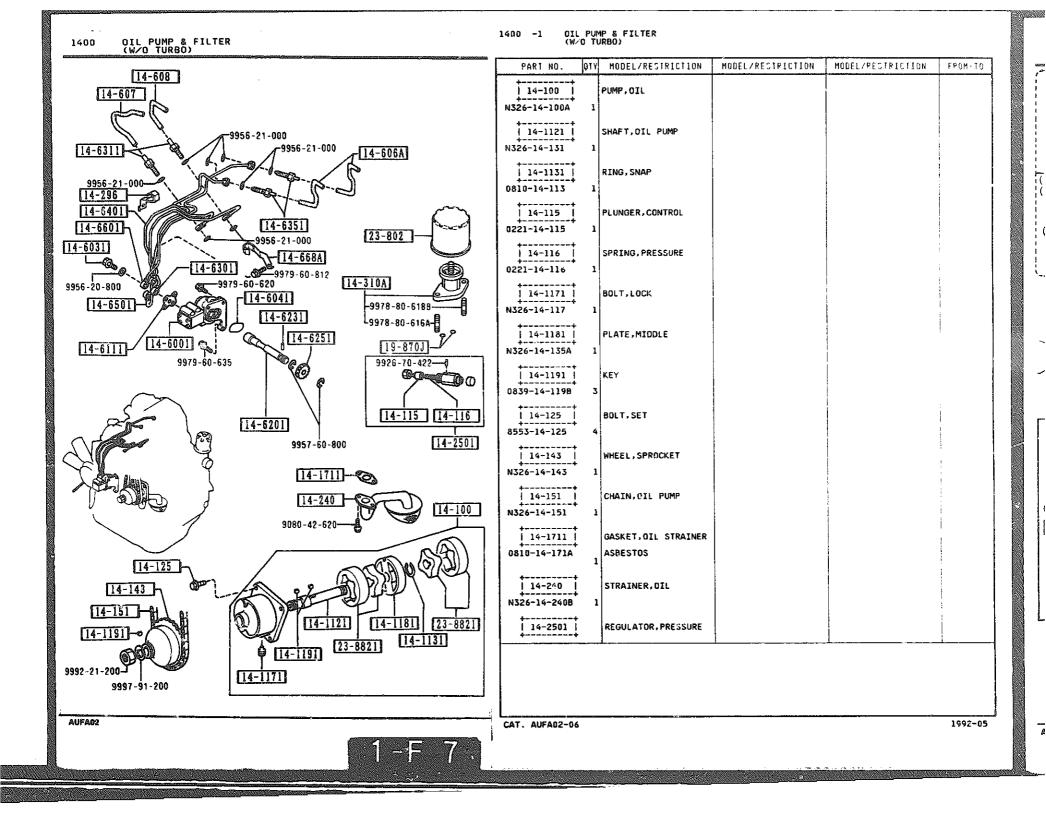

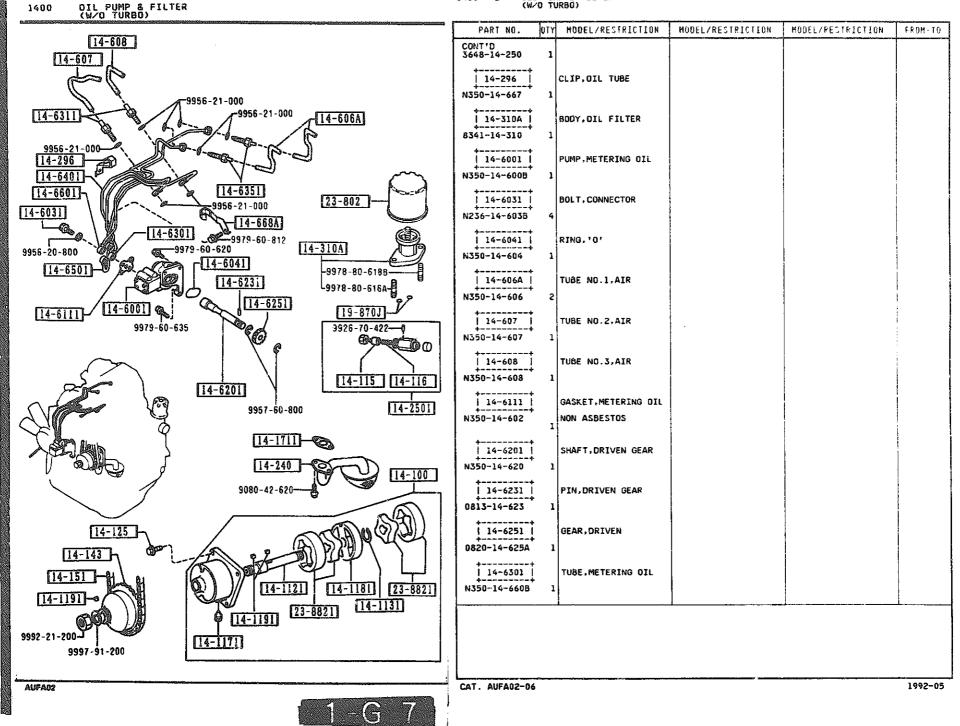


7


OIL PUMP & FILTER 1400 -2 (W/O TURBO)


2-05

τo


. .

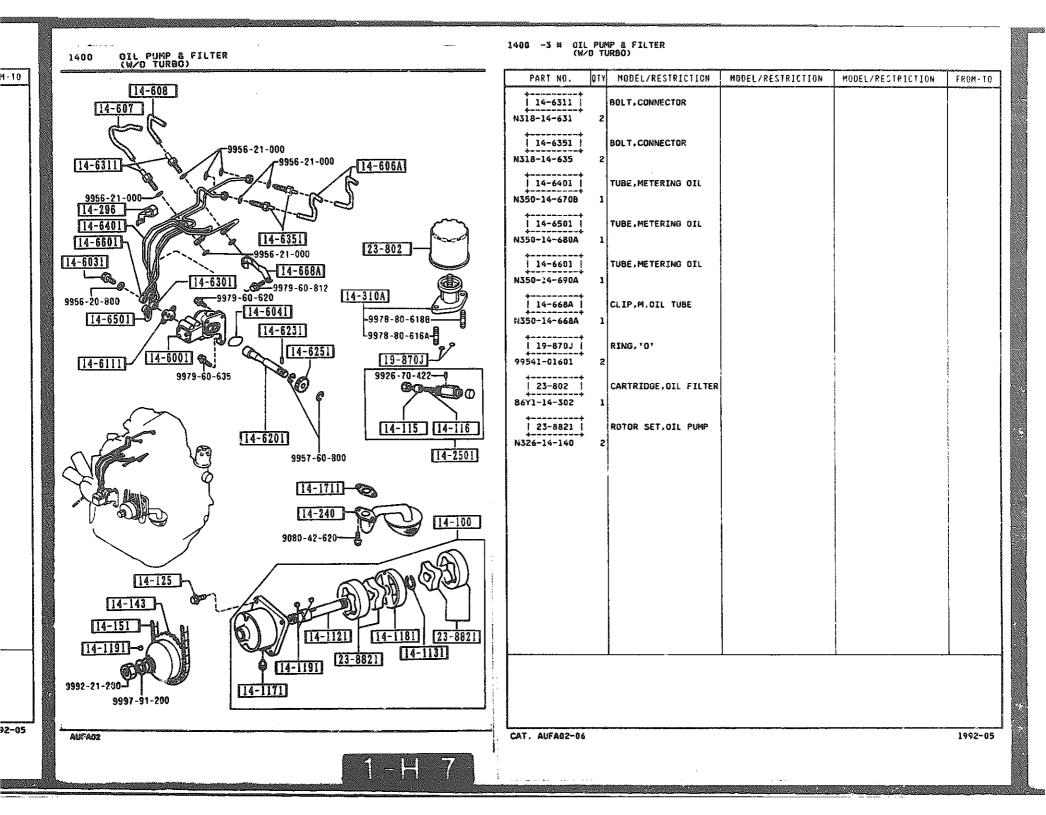


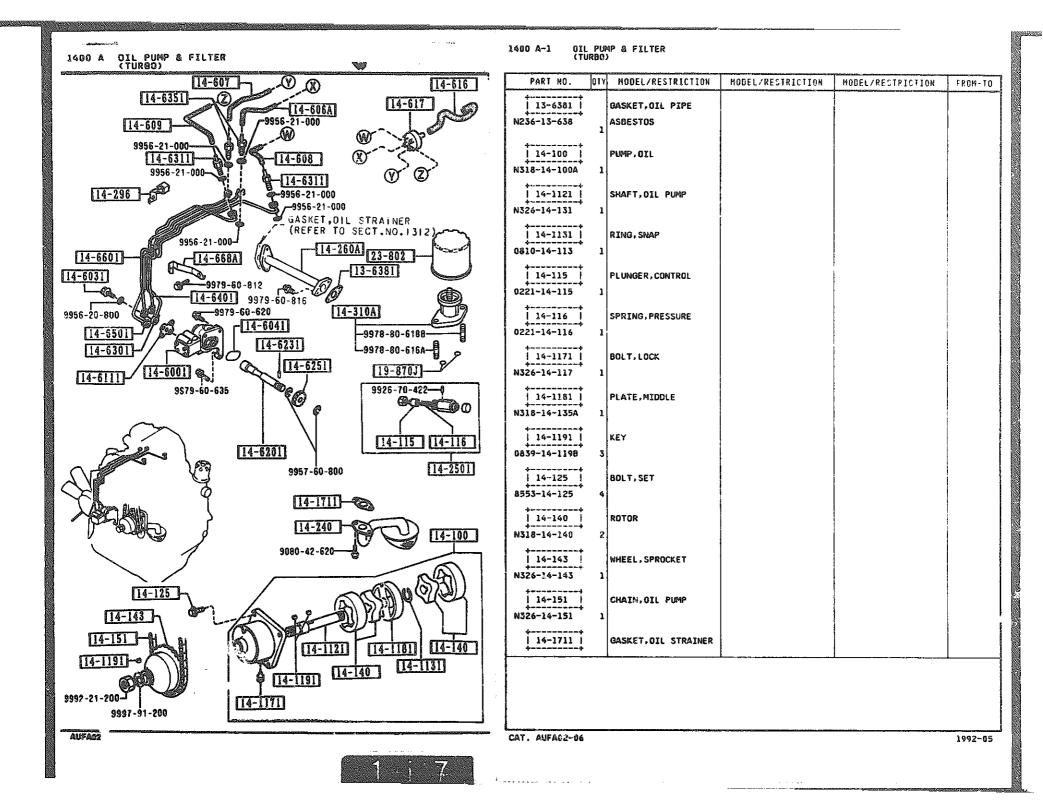


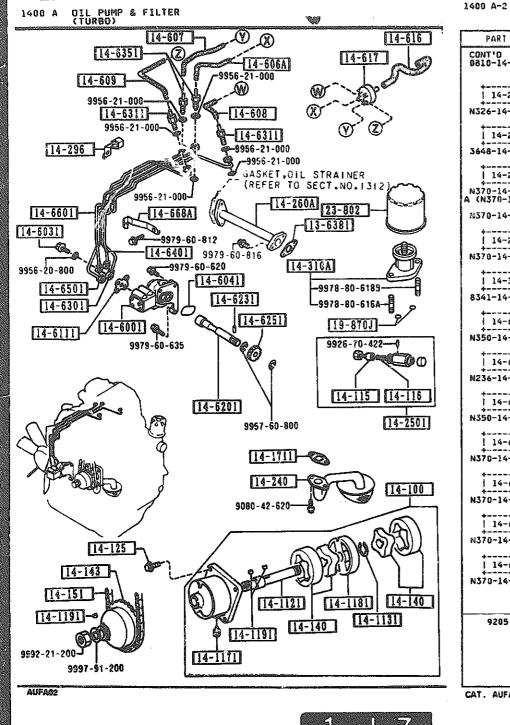

OIL PUMP & FILTER (TURBO) PART NO. Q1Y MODEL/RESTRICTION MODEL/RESTRICTION MODEL/RECTRICTION FROM-TO CONTID 0810-14-171A ASBESTOS 14-240 STRAINER, OIL N326-14-240B 14-2501 REGULATOR, PRESSURE 3648-14-250 | 14-260A | PIPE,OIL OUTLET-F.CO VER N370-14-260A A (N370-14-2608) ~9205 N370-14-260B 9205-| 14-296 | CLIP, OIL TUBE N370-14-667 | 14-310A | 80DY,01L FILTER 8341-14-310 | 14-6001 | PUMP, METERING OIL N350-14-6008 14-6031 BOLT, CONNECTOR N236-14-603B 14-6041 RING, 'O' N350-14-604 | 14-606A | TUBE NO.1,AIR N370-14-606 14-607 TUBE NO.2, AIR N370-14-607 14-608 TUBE NO.3.AIR N370-14-608 14-609 TUBE NO.4.AIR N370-14-609 9205 FC3###~702390 CAT. AUFA02-06 1992-05

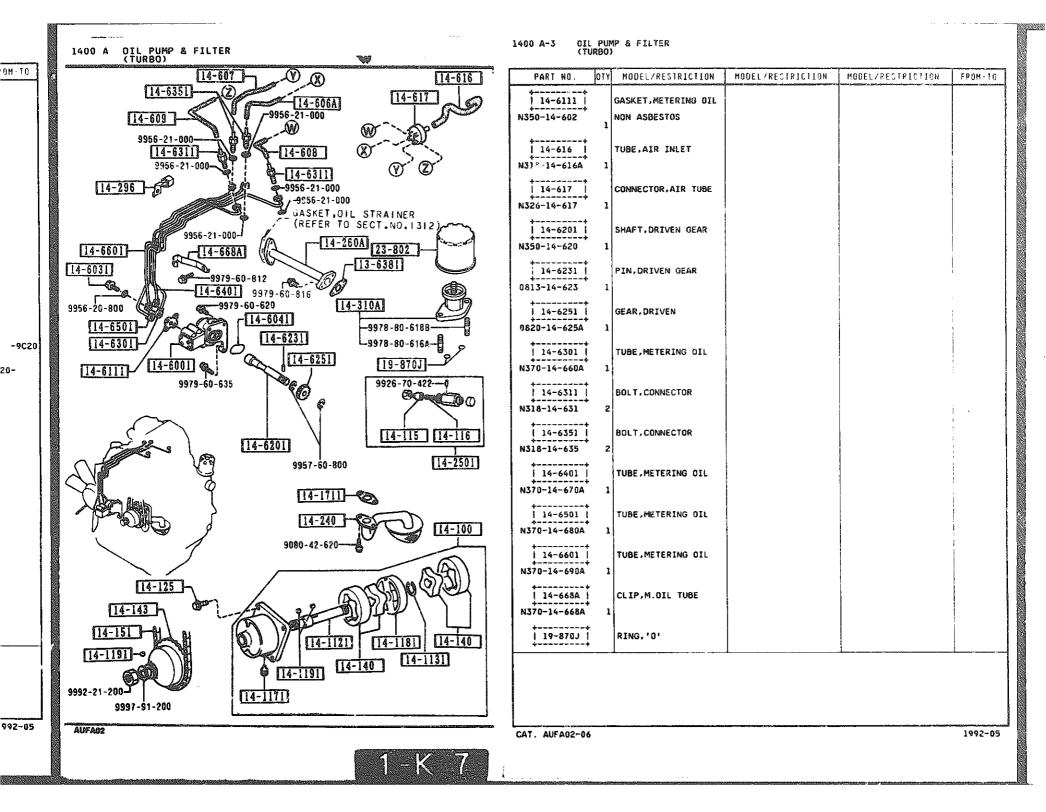

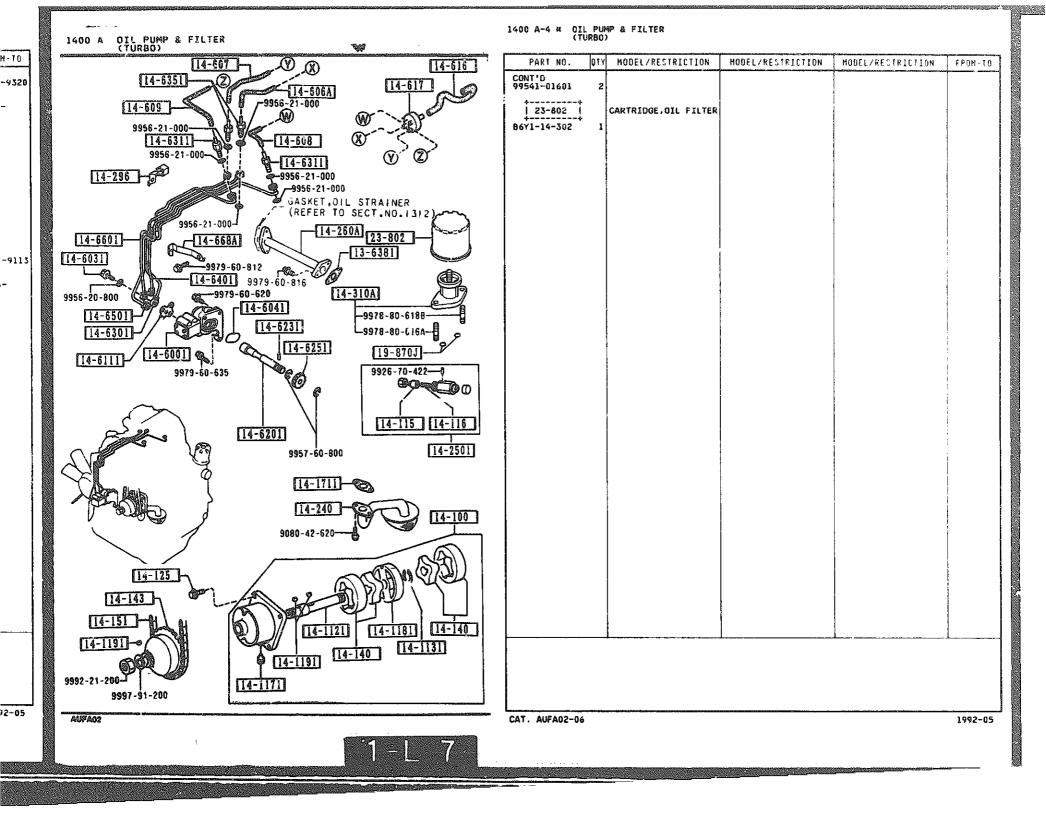

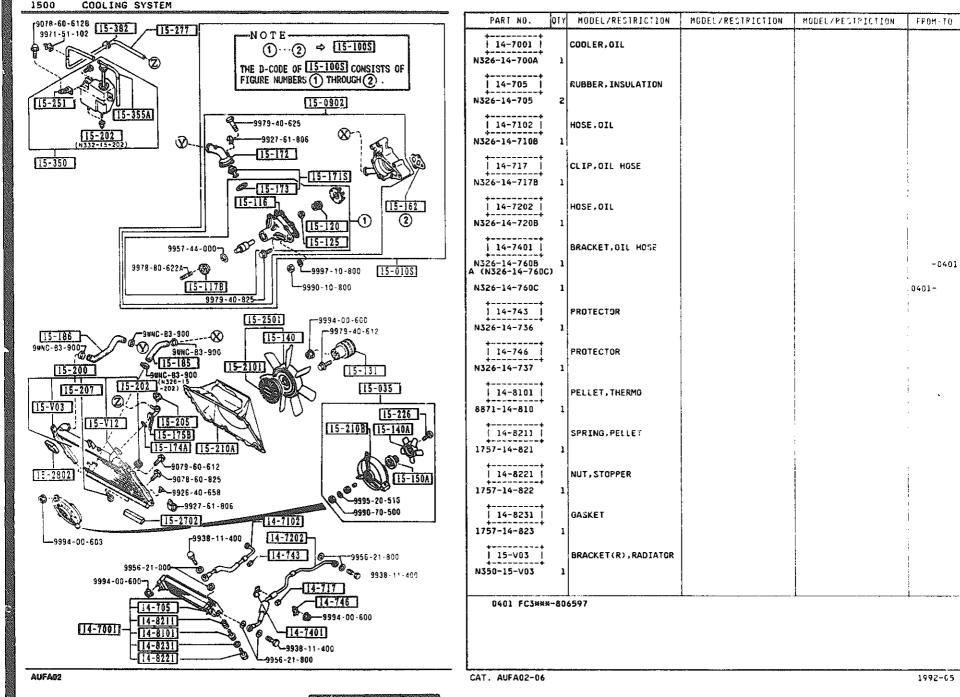


1 - M

1500 -1

COOLING SYSTEM

0M-10

 13-



OT MC

-9221

-9413

-9821

-9821

-9301


11-9320

92-05

3-

1-



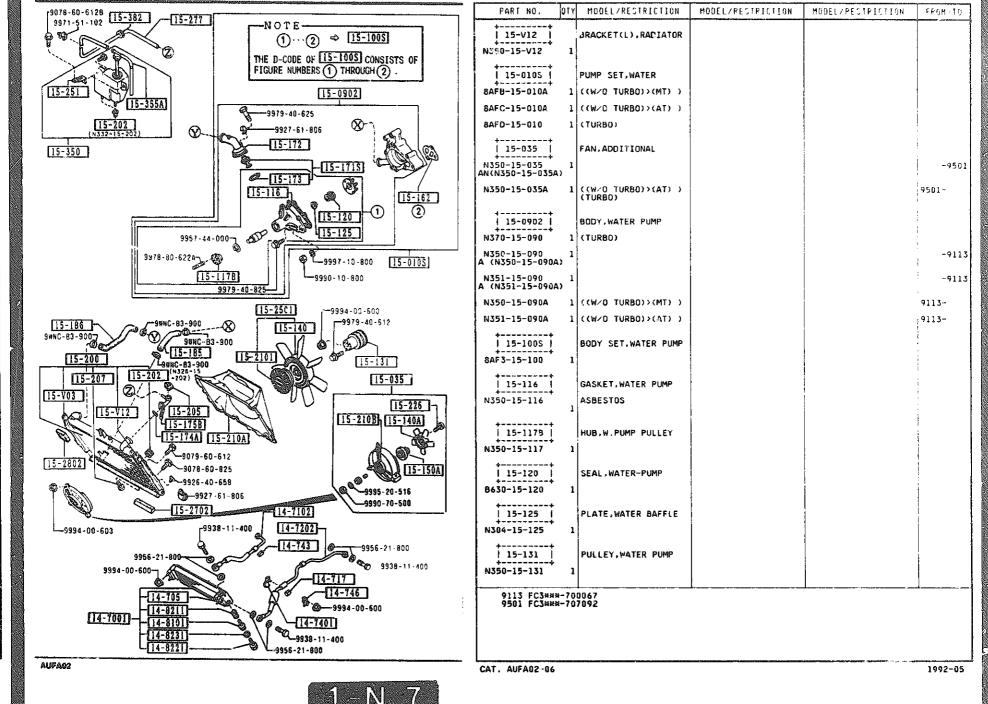

	SECTION NAME INDEX (ENGINE)								
Γ	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LU.NO	SEC.NO	SECTION NAME
	1-03	1000	SHORT ENGINE & GASKET SETS (W/O TURBO)	1-G11	1840	STARTER		[ <b>.</b> [	
1	1-003	1000 A	SHORT ENGINE & GASKET SETS	1-J11	1850	BATTERY			
		1000 4	(TURBO)	1-к)1	1910	TORQUE CONVERTER,OIL PUMP & PI PINGS (AUTOMATIC)			
	1-E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR			
	1-G03	1030 A	RDTOR HOUSINGS (Turbo)	1-112	1925	OL SYSTEM (AUTOMATIC) CONTROL VALVE (AUTOMATIC)			
	1-J03	1040	OIL PAN, FRONT & REAR HOUSING (W/O TURBO)	1-D13	1930	CLUTCHES & PLANETARY GEARS (AU			
	1-M03	1040 A	OIL PAN, FRONT & REAR HOUSING (TURBO)	1-613	1940	GOVERNOR, LOW & REVERSE PISTON			
	1-004	1100	ECCENTRIC SHAFT & FLYWHEEL	1-014	1950	MANUAL LINKAGE SYSTEM (AUTOMAT			
	1-604	1110	ROTORS & RELATED PARTS		-	IC)		-	
	1-104	1300	INLET MANIFOLD	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)			
	1-M04	1310	EXHAUST MANIFOLD						
	1-N04	1311	INTER COOLER (Turbo)						
	1-005	1312	TURBO CHARGER (TURBO)						
	1-F05	1320	FUEL SYSTEM						
	1-H05	1325	FUEL DISTRIBUTOR						
	1-105	1330	AIR CLEANER						
	1-M05	1350	STARTING ASSIST SYSTEM		l				
	1-N05	1364	THROTTLE BODY						
	1-F06	1371	AIR PUMP & AIR CONTROL VALVE				:		
	1-106	1380	EMISSION CONTROL SYSTEM					(	
	1-007	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)						
	1-F07	1400	QIL PUMP & FILTER (₩/O TURBO)						
	1-107	1400 A	OIL PUMP & FILTER (TURBO)						
	1-M07	1500	COOLING SYSTEM						
	1-F08	1580	BRACKET, PULLEY & BELT		ł				
	1-009	1600	CLUTCH DISC & COVER (MANUAL)	(An					
	1-F09	1700	TRANSMISSION CASE (MANUAL)	2					
	1-J09	1710	TRANSMISSION GEARS(MANUAL)		Ĩ				
	1-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)						
	1-M10	1800	ENGINE ELECTRICAL SYSTEM						
	1-E11	1830	ALTERNATOR						
		l		<u> </u>	1	<u>)</u>			


1-88

SECTION NAME INDEX (ENGINE)


CATLOG-NO= AUFA02-06

5

DATE. 1992-05

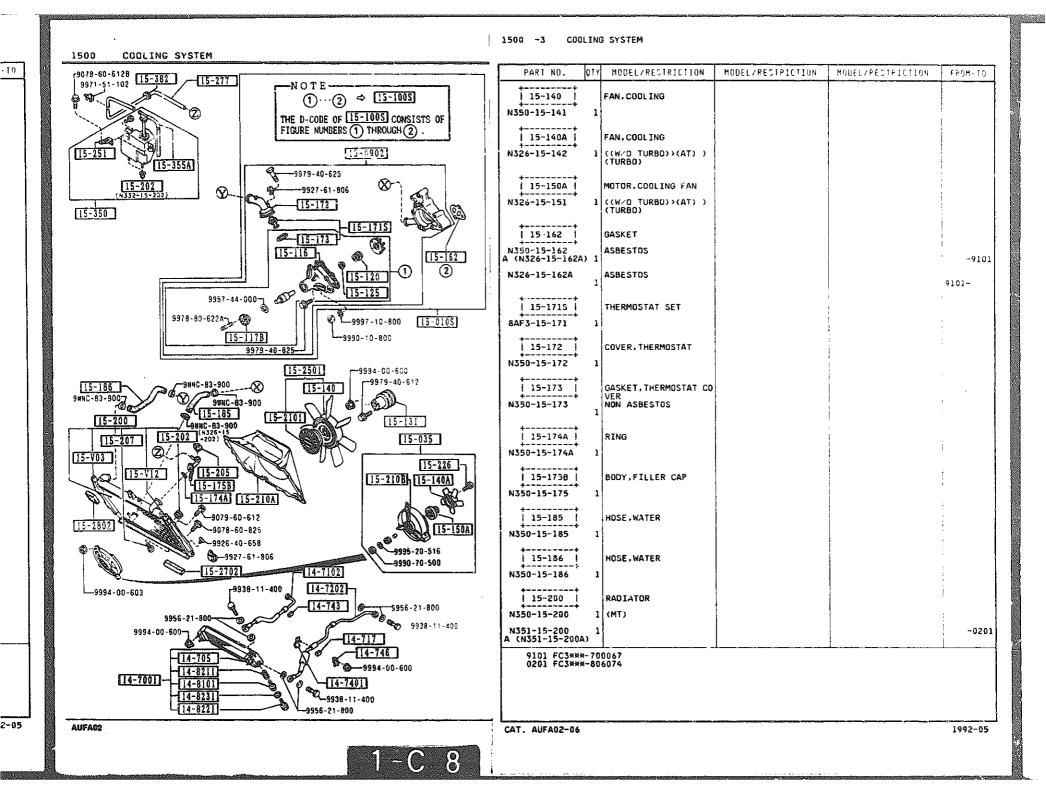


## 1500 -4 COOLING SYSTEM

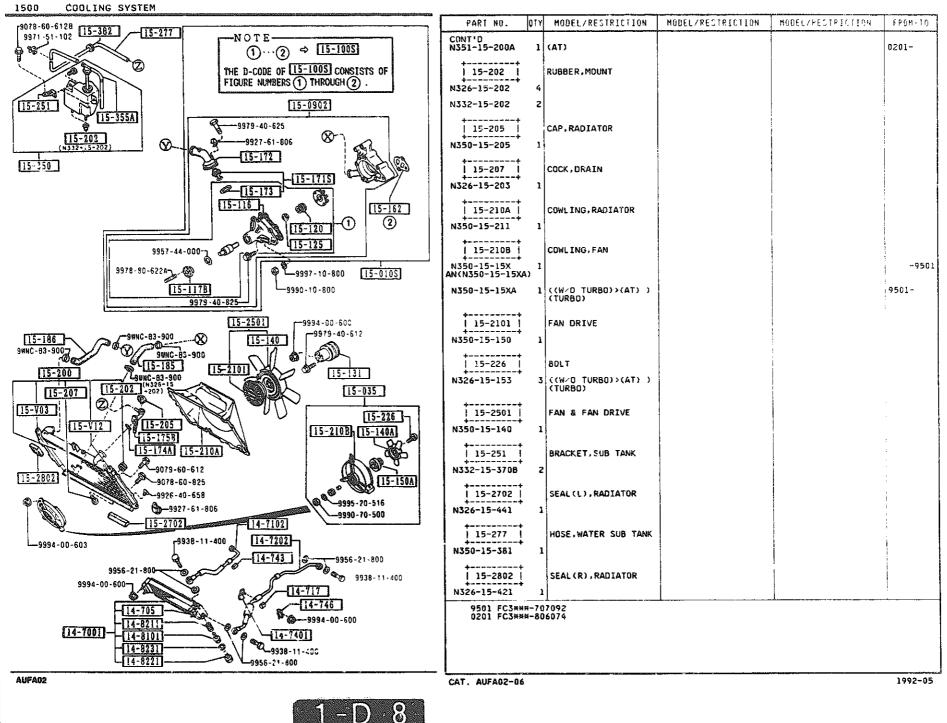



A ...

(

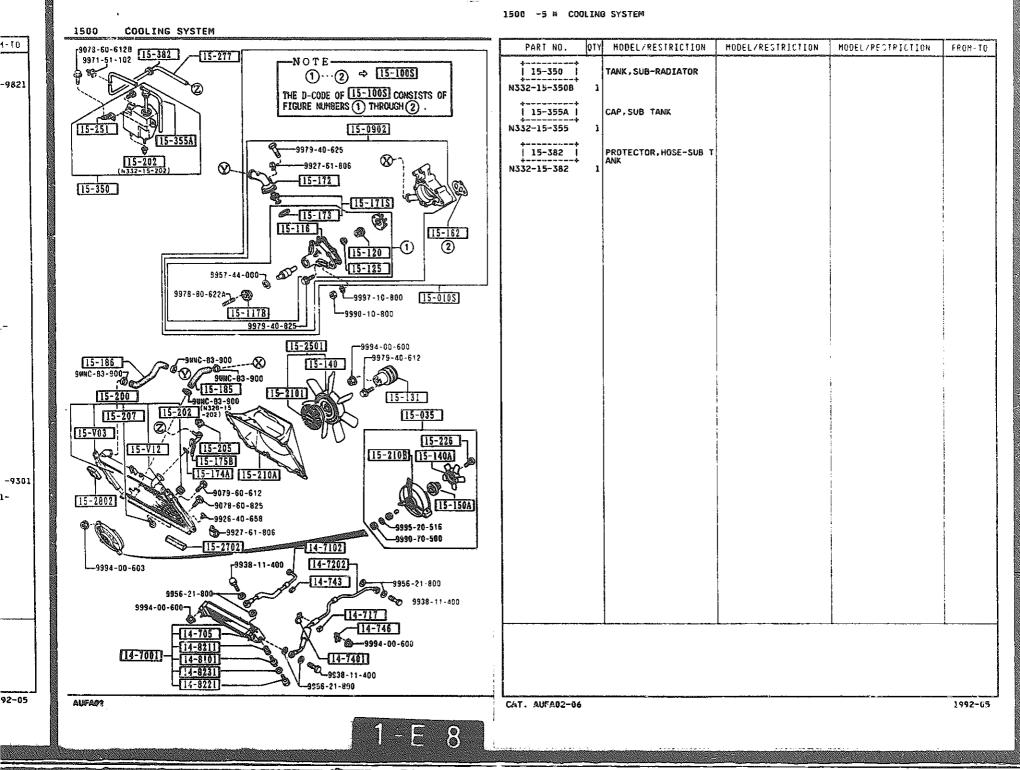

A

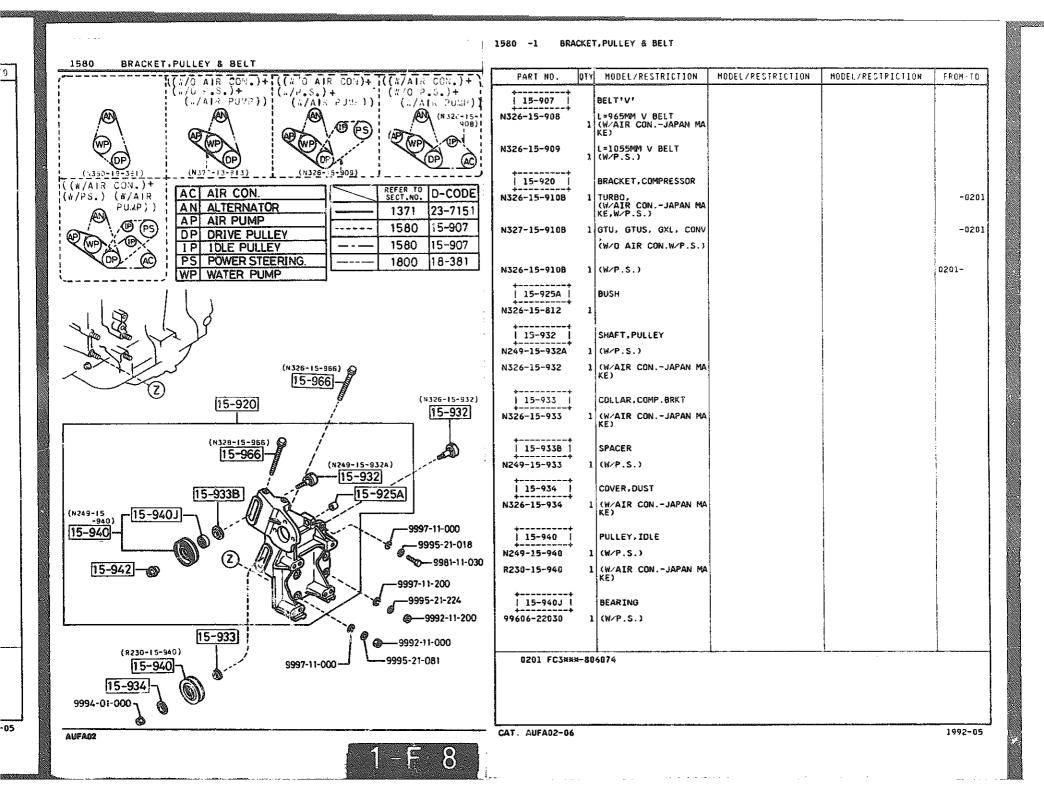

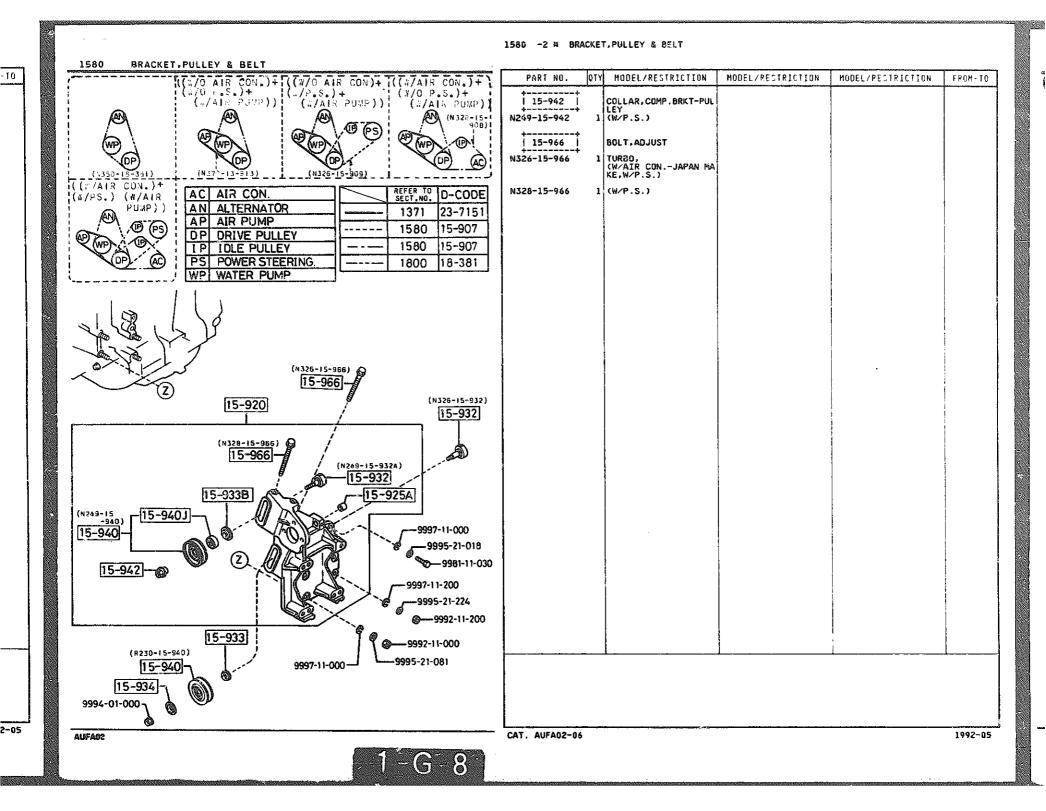

SECTION NAME INDEX (ENGINE)

SECTION NAME INDEX (ENGINE)										
LO.NO	SEC.NO	SECTION NAME	LO.ND	SEC.NO	SECTION NAME	L0.N0	SEC.NO	SECTION NAME		
1-C03	1000	SHORT ENGINE & GASKET SETS (W/O TURBO)	1-G11	1840	STARTER					
IN DOT	07 1000 A	SHORT ENGINE & GASKET SETS	1 - J 1 1	1850	BATTERY					
1-003		(TURBO)	1-K11	1910	TORQUE CONVERTER, OIL PUMP & PI PINGS (AUTOMATIC)					
1-E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR DL SYSTEM (AUTOMATIC)					
1-603	1030 A	ROTOR HOUSINGS (Turbo)	1-112	1925	CONTRUL VALVE (AUTOMATIC)	:				
1-J03	1040	OIL PAN,FRONT & REAR HOUSING (W/O TURBO)	1-013	1930	CLUTCHES & PLANETARY GEARS (AU Tomatic)					
1-M03	1040 A	OIL PAN,FRONT & REAR HOUSING (Turbo)	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)					
1-D04	1100	ECCENTRIC SHAFT & FLYWHEEL	1-014	1950	MANUAL LINKAGE SYSTEM (AUTOMAT					
1-G04	1110	RUTORS & RELATED PARTS	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)					
1-104	1300	INLET MANIFOLD		[						
1-M04	1313	EXHAUST MANIFOLD								
1NC4	1311	INTER COOLER (TURBO)								
1-005	1312	TURBO CHARGER (TURBO)								
1-F05	1320	FUEL SYSTEM		-						
1-HO5	1325	FUEL DISTRIBUTOR				ļ				
1-105	1330	AIR CLEANER	•	ŀ						
1-M05	1350	STARTING ASSIST SYSTEM								
1-N05	1364	THROTTLE BODY								
1-F06	1371	AIR PUMP & AIR CONTROL VALVE								
1-106	1380	EMISSION CONTROL SYSTEM				1				
1-007	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)								
1-F07	1400	OIL PUMP & FILTER (W/O TURBO)				Į				
1-107	1400 A	OIL PUMP & FILTER (TURBO)								
1-1407	1500	COOLING SYSTEM								
1-F08	1580	BRACKET, PULLEY & BELT					-			
1-09	1600	CLUTCH DISC & COVER (MANUAL)	1							
1-F09	1700	TRANSMISSION CASE (MANUAL)	2			1				
1-J09	1710	TRANSMISSION GEARS(MANUAL)		1		1	ļ			
1-810	1720	CHANGE CONTROL SYSTEM (MANUAL)	1 Br	13						
1-M10	1800	ENGINE ELECTRICAL SYSTEM				i				
1-E11	1830	ALTERNATOR		Ţ						
L	<u></u>	1		1	<u> </u>	1	L	l		

·- - -----

- -


\_

CATLOG-NO= AUFA02-06

15

1-B 9


DATE, 1992-05

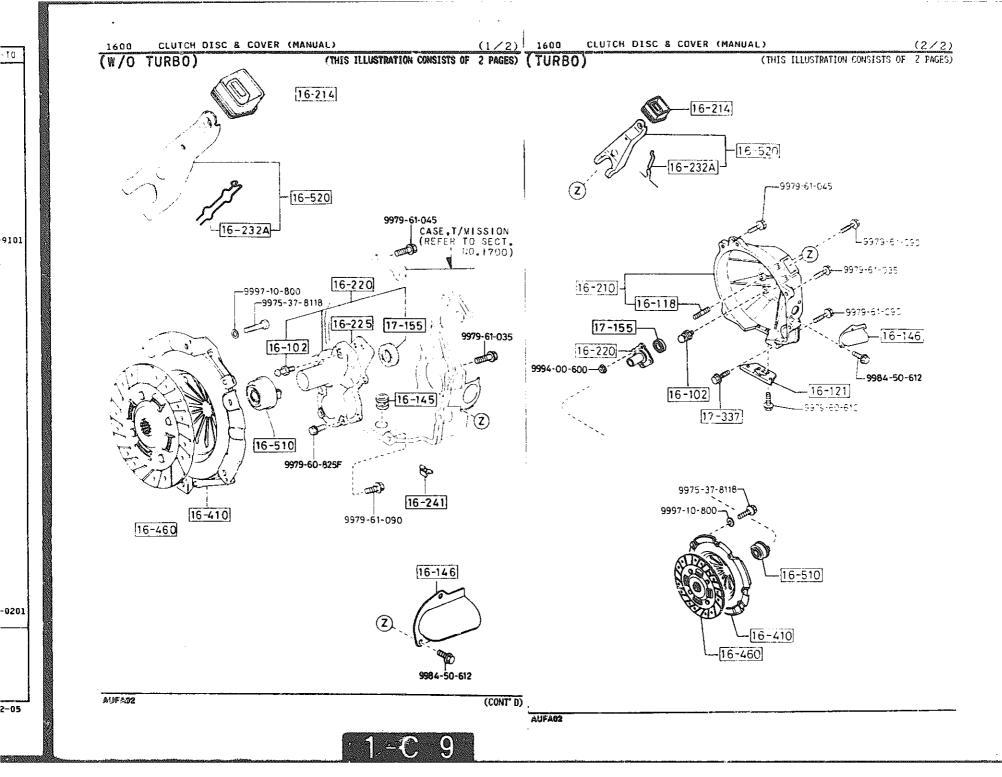

816 M

(1

9101

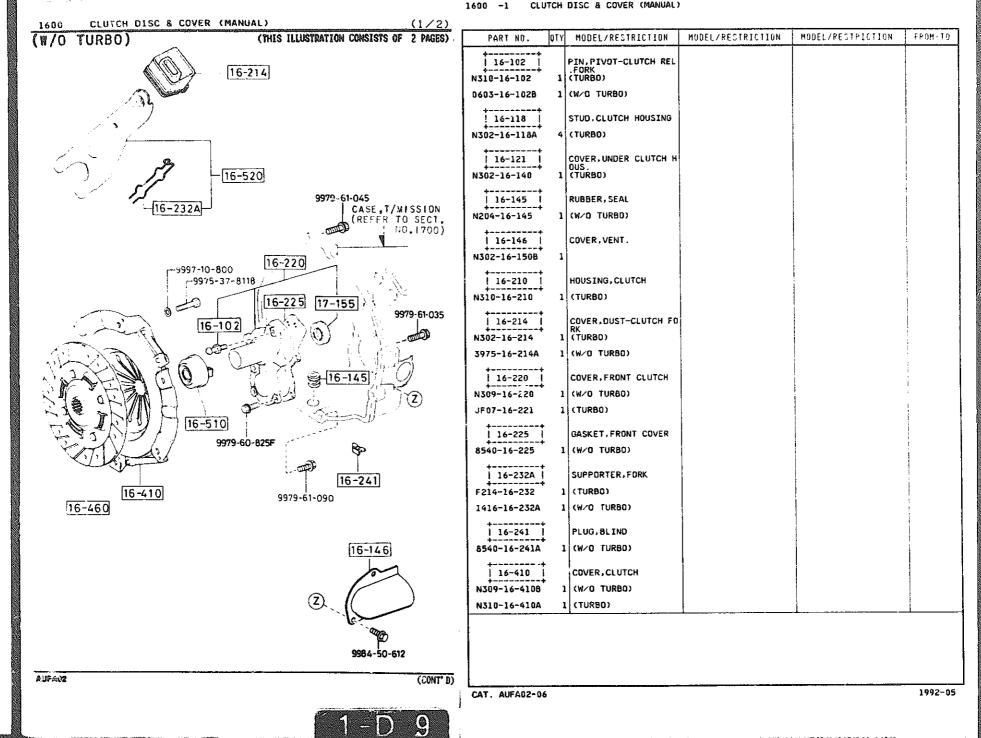



(1

ļ

- 10

9501

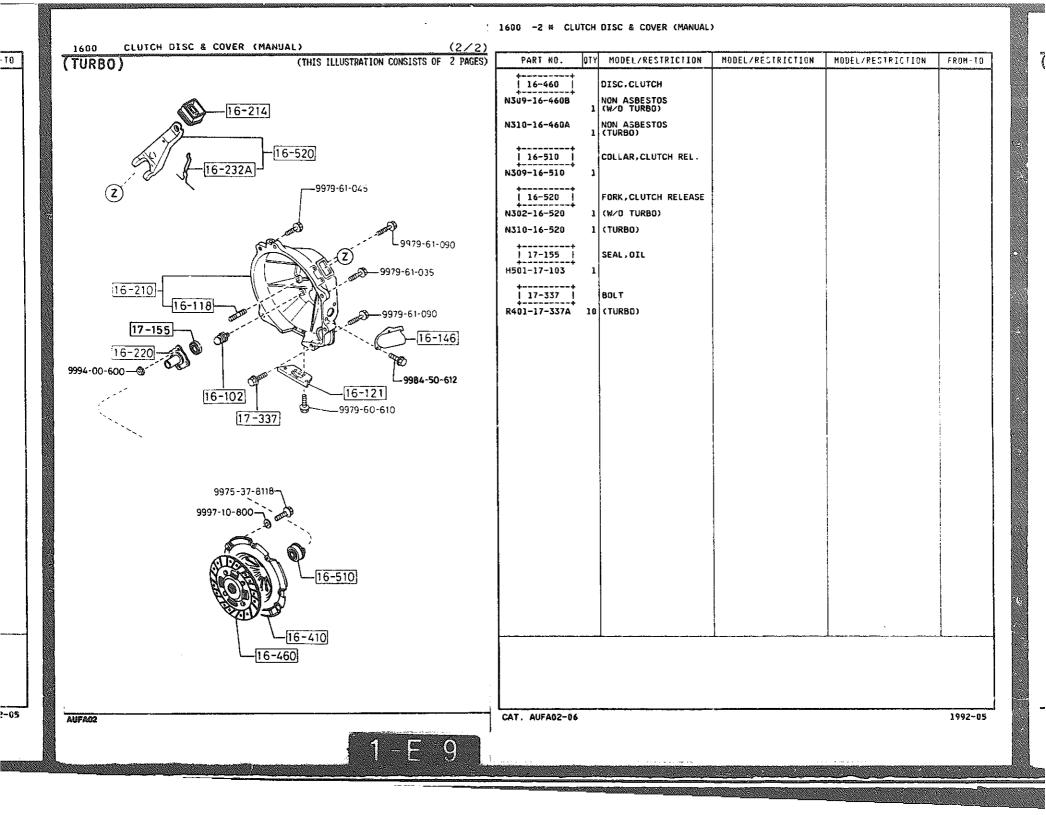

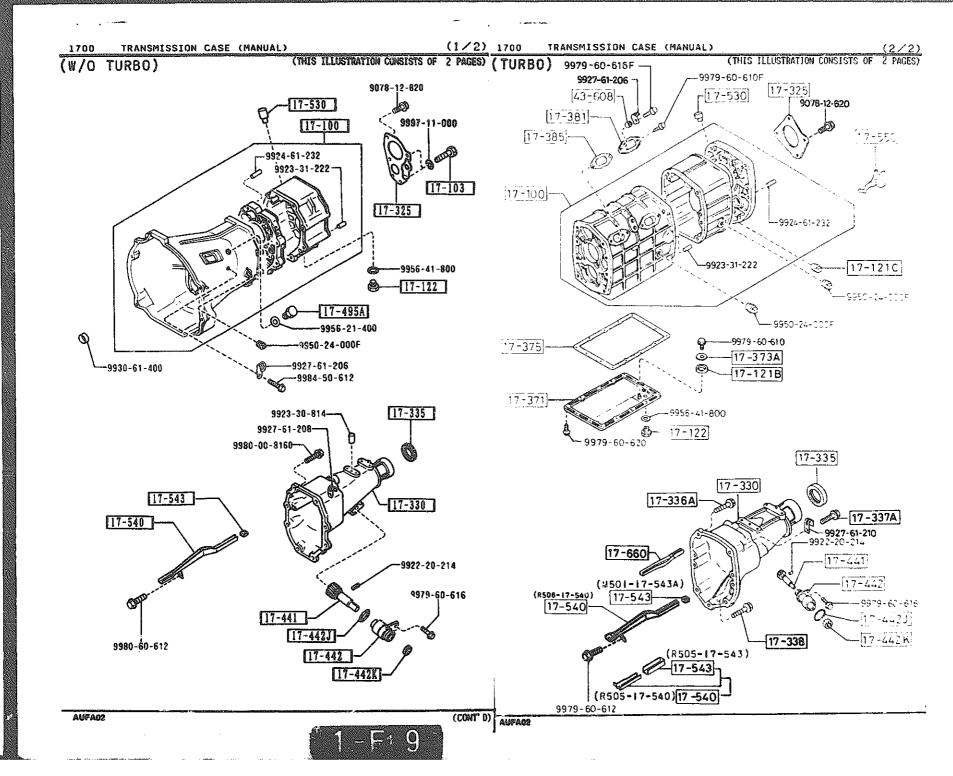


?-05

ΤÐ

0201

0201

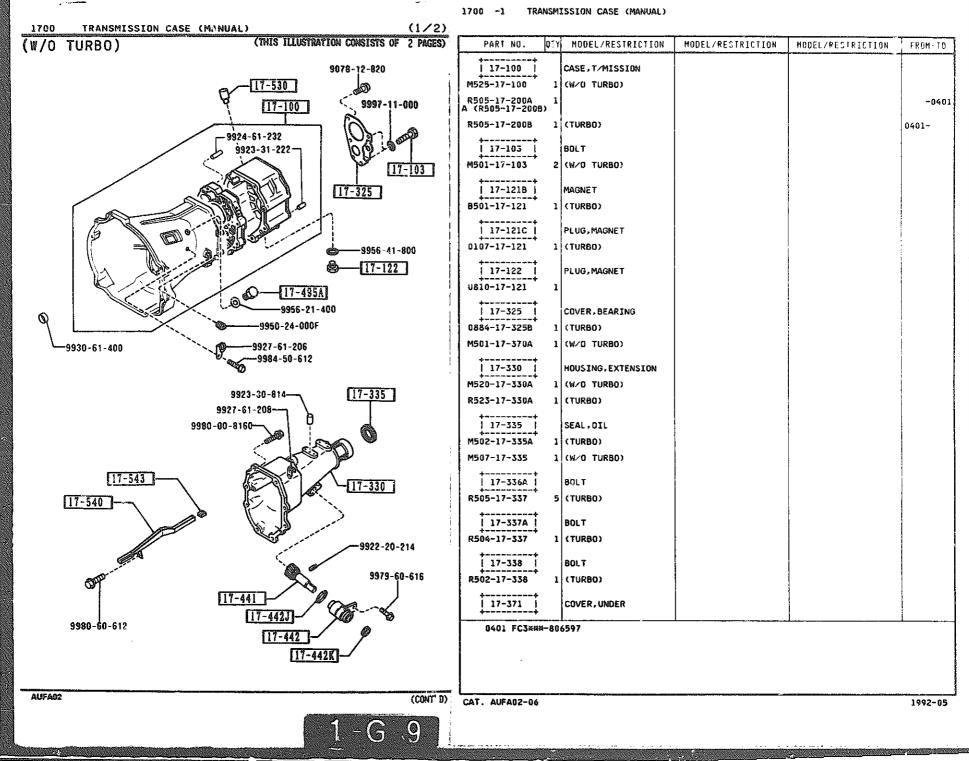



ΤO

-05


ħ

( 1

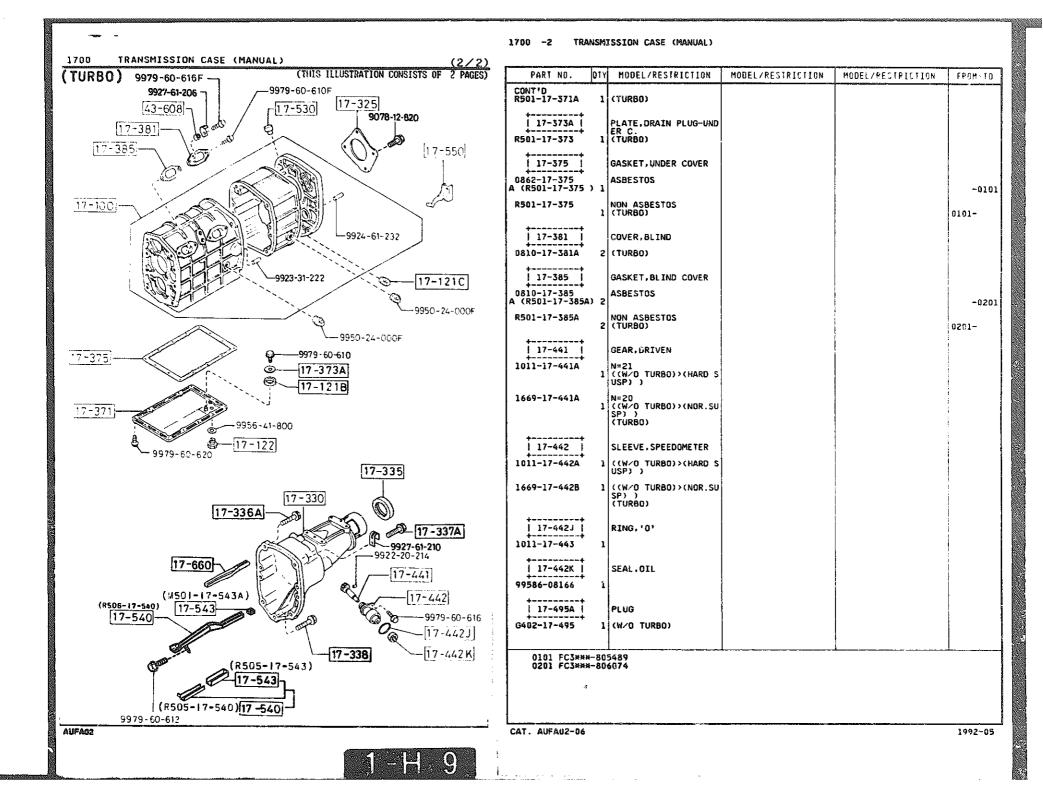

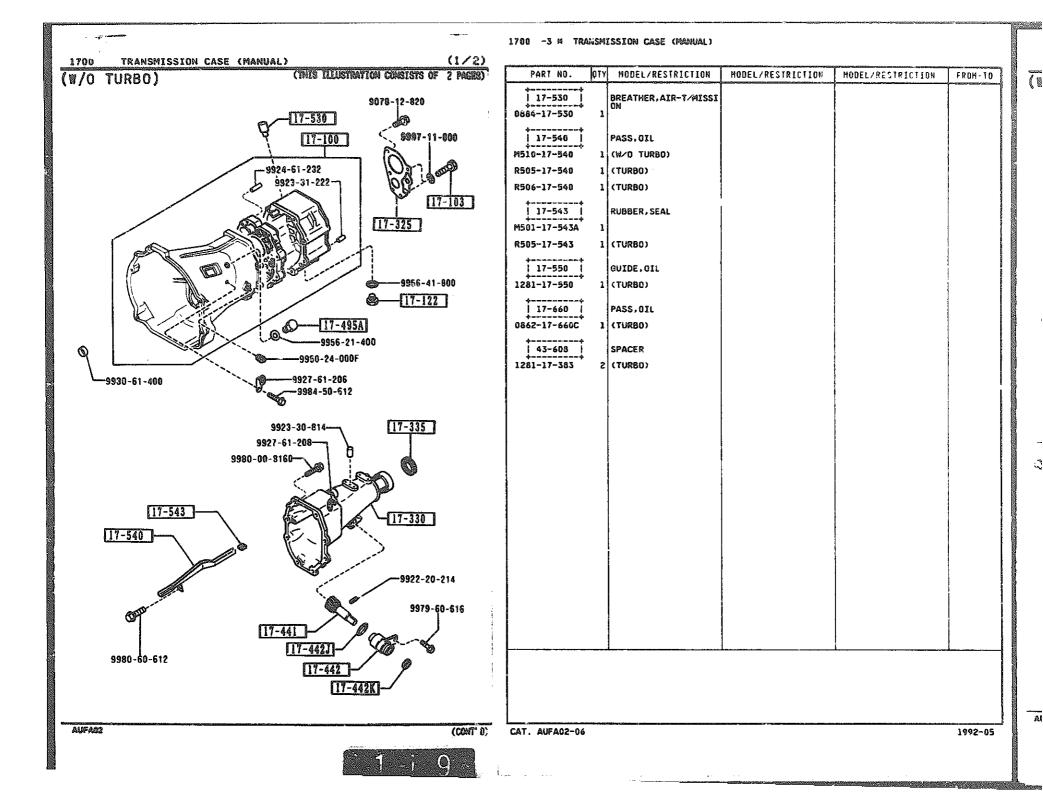



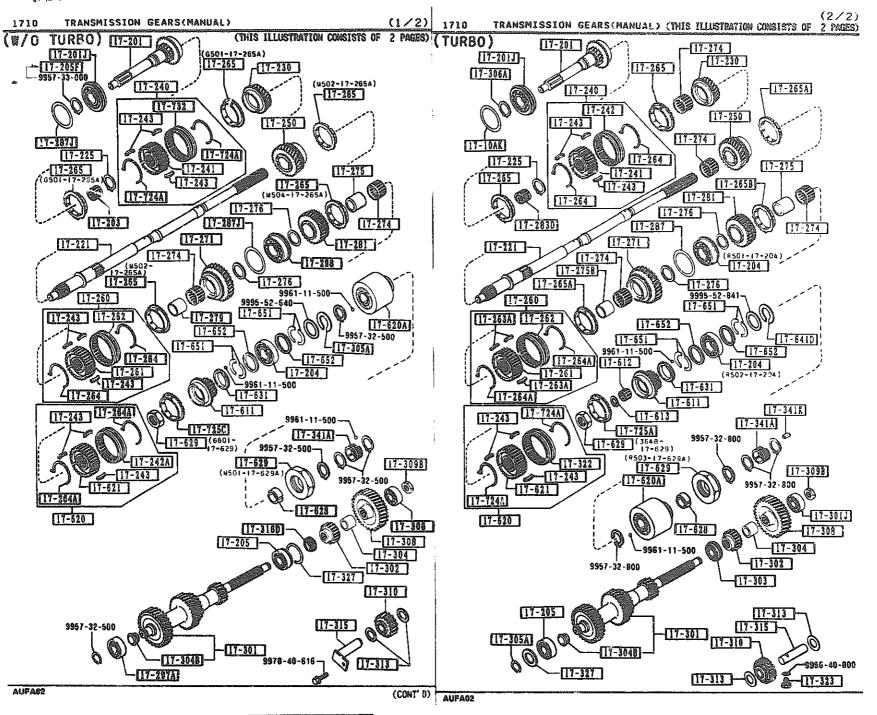

(1


99


17

( ::

995

[]

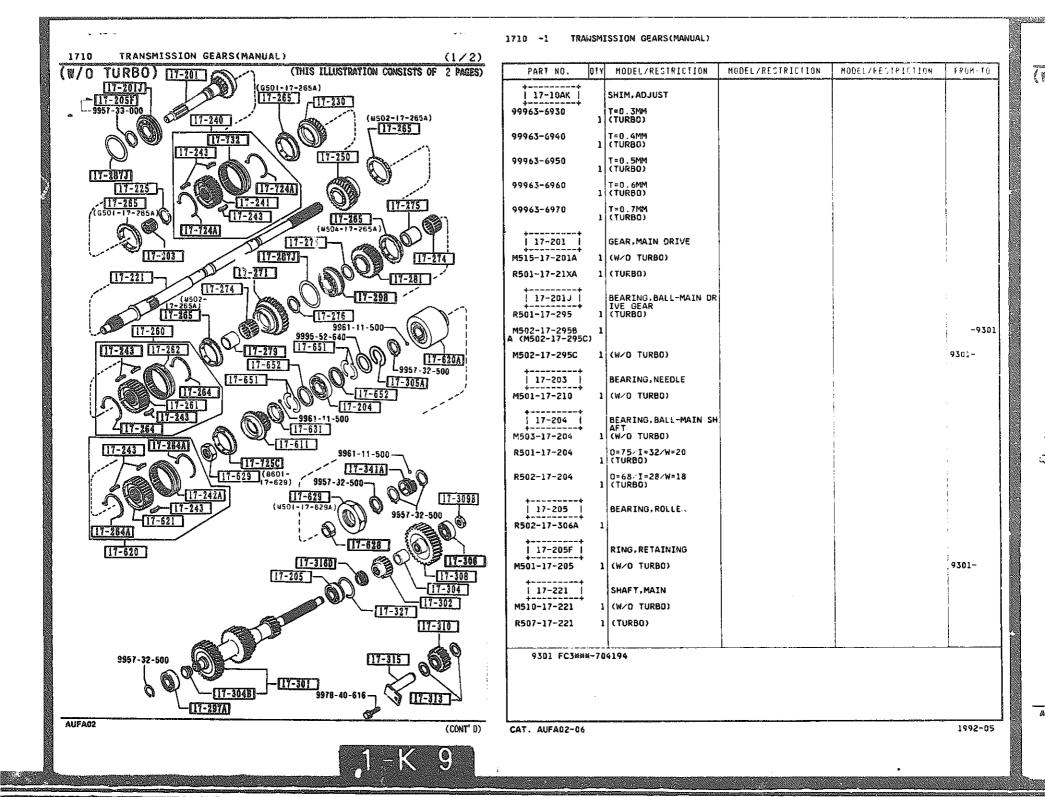

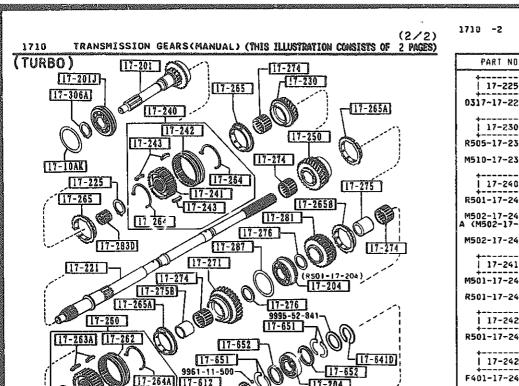

17-261

17-322

17-327

17-243

TTT-263A

17-724A

17-621

17-205

0 0

[17-305A]

AUFA02

-17-264A

17-243

17-724A

17-620

17-204

(R502-17-204)

17-341A

9957-32-800

17-302

17-313 17-315

17-303

17-341K

17-309B

6)

17-304

-17-301J

-2956-40-800

-117-323

9

17-308

17-631

9957-32-800

61 6

17-310

17-313 -

17-611

17-628

-17-301

-9961-11-500

17-613

17-725A

-629 (3648-(R503-17-629A)

17-620A

9957-32-800

7-3048

	NO.	QTY	MODEL/RESTRICTION	MODEL/RESTRICTION	MODEL/RESTRICTION	FROM-TO
17-3	225		RING, SNAP			
0317-17	+	1				
	+					
17- 	+		GEAR, 3RD			
R505-17			(TURBO)			
M510-17		1	(₩/O TURBO)			
1 17-	240		HUB SET, CLUTCH-3RD &			
R501-17	-240A	1	4TH (TURBO)			
M502-17 (M502-	-2408 17-2400	» <sup>1</sup>				-970]
M502-17	-240C	1	(W/O TURBO)			9701-
17-	261		HUB.CLUTCH			
M501-17	+	1	(W/D TURBO)			1
R501-17			(TURBO)			
	+	•				
	242		SLEEVE, CLUTCH HUB			
R501-17	-242	1	(TURBO)			
	242A		SLEEVE, CLUTCH HUB			
	+		(W/O TURBO)			
<b>*</b>	+	-				
+	•		KEY, SYNCHRONIZER			
F401-17	-24 <b>3A</b>		(TURBD)	:		
		9	(W/O TURBO)			
+   17-	250		GEAR, 2ND			
+ M501-17	-250	1	((W/D_TURBO)>(CONVER			
			TIBLE) )			
R517-17			(TURBO)			
M501-17			((W/O TURBO)>(CPE) )			-970]
M508-17		1	((W/O TURBO)>(CPE) )			9701-
	260 1		HUB SET. CLUTCH-1ST &			
M505-17	-260A	1	2ND (W/O TURBO)			
R501-17	~260A	1	(TURBO)			
	+					
+	261		HUB, CLUTCH			
M502-17	-261	1	(W/O TURBO)	······································	l	<u> </u>


TRANSMISSION GEARS (MANUAL)

CAT. AUFA02-06

1992-05


9

i.

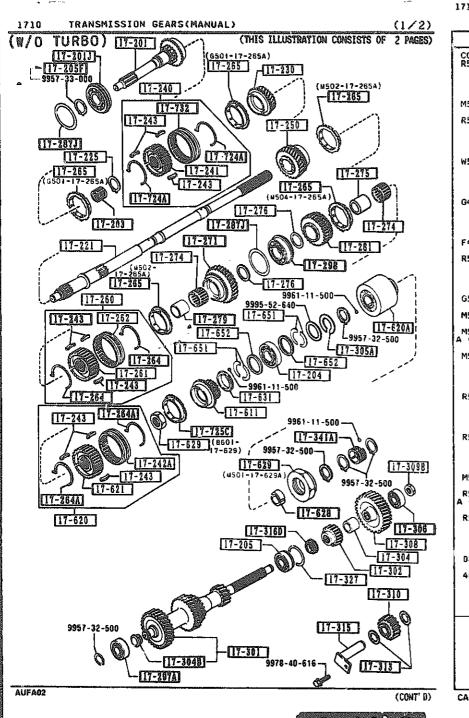

PART NO.	OTY	MODEL/RESTRICTION	MODEL/RESTRICTION	MODEL/RESTRICTION	FPOM-TO
CONT'D R501-17-261	1	(TURBO)	₩-0147		
+					
17-262	,	SLEEVE,CLUTCH HUB (W/O TURBD)			
M503-17-262 R501-17-262		(TURBO)			
+	7				
17-263A		KEY, SYNCHRONIZER			
W501-17-263A	3	(TURBO)			
17-264		SPRING, SYNCHRO. KEY			
G401-17-264	2				
17-264A		SPRING, SYNCRONIZER			
F401-17-264A	2	(W/O TURBO)			
R501-17-264		(TURBO)			
··+					
17-265	~	RING, SYNCHRONIZER			
G501-17-265A M502-17-265A	2	(W/O TURBO)			
M504-17-265	1				-0101
A (M504-17-265	ю <sup>1</sup>				-0101
M504-17-265A	1	(W/O TURBO)			0101-
17-265A		RING, SYNCHRONIZER		2	
++ R502-17-265A	2	(TURBO)			i I
↓   17-265B		RING.SYNCHRONIZER		1	
R503-17-265A	1	(TURBO)			
++	•				
17-271		GEAR,1ST			
M510-17-271		(W/O TURBO)			
R513-17-270 A (R513-17-270)	4) <sup>1</sup>				-0501
R513-17-270A	1	(TURBO)			0501-
17-274		BEARING, NEEDLE			
0884-17-274	4	(TURBO)			
4069-17-283A		(W/D TUR80)			
++					
17-275   ++		RACE, INNER			
0101 FC3##	#-80	5489		<u></u>	<u> </u>
0501 FC3¤×	~~0Ų	2404			
CAT. AUFA02-06				-,,	1992-05

## 1710 -3 TRANSMISSION GEARS(MANUAL)

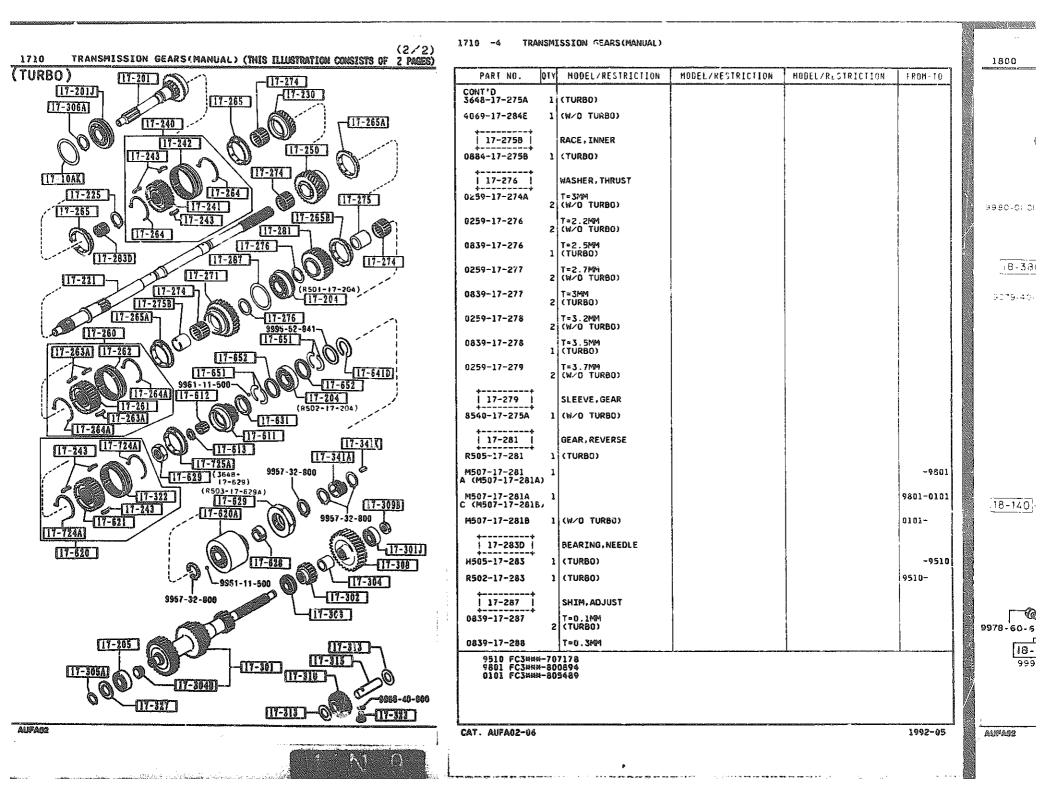



----

CATLOG-NO= AUFA02-06

DATE. 1992-05

10.00   SEC.100		D NO SECTION NAME LO.NO SECTION NAME LO.NO SECTION NAME LO.NO SECTION NAME									
1-003   1000 A   TUPO TUPEO T   1-11   1850   BATTERY     1-013   1000 A   GUTOR HOUSINGS   1-411   1910   TUPOS CONFETTER OIL PUMP & PI     1-023   1030 A   GUTOR HOUSINGS   1-411   1920   TUPOS CONFETTER OIL PUMP & PI     1-023   1030 A   GUTOR HOUSINGS   1-411   1920   TUPOS CONFETTER OIL PUMP & PI     1-023   1030 A   GUTOR HOUSINGS   1-113   1920   TUPOS CONFETTER OIL PUMP & PI     1-023   1040 A   GUTOR PAUFERNIK   FRAMMINSSION CASE - MAIN CONFE   GUTOR TOURING     1-024   1040 A   GUTOR PAUFERNIK   1-014   1930   CUTATERS & PLANETARY GEARS (AU     1-043   1040 A   GUTOR S & RELATED PARTS   1-014   1950   TUPEOSCONFOLOUR & REVERSE PISTON     1-040   1100   ECCENTRIC SHAFT & FLYWHEEL   1-014   1950   TARUST MAIFOLD     1-040   1311   INTER COLER   1-014   1950   TARUST MAIFOLD     1-040   1311   INTER COLER   1-014   1950   SAKET & SEAL KIT (AUTOMAILC)     1-050   1322   FUEL DISTRIBUTOR   1-135   SAKET & SEAL KI	LO.NC	SEC.NO	SECTION NAME			+					
1-003   1000 4   SWITT ENGINE & GASKET SETS   1+K11   1910   TORQUE CONVERTED OLL PUMP & PI     1-603   1030 A   RUTR HUUSINGS   1-N11   1920   TRANSMISSION CASE - MAIN CONTR     1-003   1040 A   SWITT ENGINE ALL   1-112   1922   TRANSMISSION CASE - MAIN CONTR     1-004   1040 A   OTL PAN-REDUT & REAR HOUSING   1-112   1922   CONTROL VALVE (AUTOMATIC)     1-w03   1040 A   OTL PAN-REDUT & REAR HOUSING   1-L13   1940   GUERNOR, LOW & REVEPSE PISTON     1-004   1100   ECCENTRIC SHAFT & FLYNHELL   1-C14   1950   MAUUAL LINKAGE SYSTEM (AUTOMATIC)     1-004   1100   ECCENTRIC SHAFT & FLYNHELL   1-C14   1950   GASKET & SEAL KIT (AUTOMATIC)     1-004   1100   ECCENTRIC SHAFT & FLYNHELL   1-C14   1950   GASKET & SEAL KIT (AUTOMATIC)     1-105   1300   EXMAJST MANIFOLD   1-C14   1950   GASKET & SEAL KIT (AUTOMATIC)     1-105   1300   IXANUST MANIFOLD   1-C14   1950   GASKET & SEAL KIT (AUTOMATIC)     1-004   1310   IXER COOLER   1-C14   1960   GASKET & SEAL KIT (AUTOMATIC) <tr< td=""><td>1-003</td><td>1000</td><td>(W/O TURBO)</td><td></td><td></td><td></td><td></td><td></td><td></td></tr<>	1-003	1000	(W/O TURBO)								
1-E03   1030   PDT0R HUUSINGS (W/G UNBAD)   1-N11   1920   TRANSMISSION CASE - MAIN CONTR (LSYSTEM CAUTOMATIC)     1-003   1060   OLL PAN, FRONT & REAR HOUSING   1-D13   1930   CONTROL VALVE (AUTOMATIC)     1-003   1064   OLL PAN, FRONT & REAR HOUSING   1-D13   1930   CONTROL VALVE (AUTOMATIC)     1-004   1064   OLL PAN, FRONT & REAR HOUSING   1-L13   1940   CONTROL VALVE (AUTOMATIC)     1-064   1100   ECCENTRIC SAFT & FLYWHEEL   1-C14   1950   AUTOMATIC)     1-064   1100   ECCENTRIC SAFT & FLYWHEEL   1-C14   1950   GASKET & SEPL KIT (AUTOMATIC)     1-064   1100   EXANJY MANFOLD   1-E14   1960   GASKET & SEPL KIT (AUTOMATIC)     1-064   1101   EXANJY MANFOLD   1-E14   1960   GASKET & SEPL KIT (AUTOMATIC)     1-064   1300   INLET MANFOLD   1-E14   1960   GASKET & SEPL KIT (AUTOMATIC)     1-064   1310   INLET MANFOLD   1-E14   1960   GASKET & SEPL KIT (AUTOMATIC)     1-065   1320   FUEL SYSTEM   1-E14   1960   GASKET & SEPL KIT (AUTOMATIC)     1-065	1-003	1000 A	SHORT ENGINE & GASKET SETS (TURBO)			TORQUE CONVERTER, OIL PUMP & PI					
1-G031030A BOTOR MOUSINGS TTURBON1-1121925CONTROL VALVE (AUTOMATIC)1-J031040OIL PAN.FRONT & REAR HOUSING1-D131930CLUTCHES & "LANETARY GEARS (AU TOMATIC)1-m031040A OIL PAN.FRONT & REAR HOUSING1-L131940CURNOR, LOW & REVEASE PISTON (AUTOMATIC)1-0041100ECCENTRIC SHAFT & FLYWHEL TIGE OF THE MANIFOLD1-C141950MANUAL LINKAGE SYSTEM (AUTOMATIC)1-n041310RNLATED PARTS TIGE OF THANIFOLD1-E141950MANUAL LINKAGE SYSTEM (AUTOMATIC)1-n051310INLET MANIFOLD TURBOD1-E141960GASKET & SEPL KIT (AUTOMATIC)1-n041311INTER COOLER TURBOD CHARGER TURBOD CHARGER TURBOD1-E1419601-n051325FUEL DISTRIBUTOR 	1-E03	1030		1-N11	1920	TRANSMISSION CASE & MAIN CONTR					
10:00	1-603	1030 A	ROTOR HOUSINGS (Turbo)	1-112	1925						
1-004   1100   ECCENTRIC SHAFT & FLYWHEEL   1-C14   1950     1-004   1100   ROTORS & RELATED PARTS   1-C14   1950     1-104   1300   INLET MANIFOLD   1-E14   1960     1-004   1310   EXHAUST MANIFOLD   1-E14   1960     1-004   1310   EXHAUST MANIFOLD   1-E14   1960     1-004   1311   INTER COOLER   (UURDO)     1-005   1322   FUEL SYSTEM   1-E14     1-005   1325   FUEL OISTRIBUTOR   1     1-005   1325   FUEL SYSTEM   1     1-005   1325   FUEL SYSTEM   1     1-005   1325   STARTING ASIST SYSTEM   1     1-005   1350   STARTING ASIST SYSTEM   1     1-007   1399   GAP BASE CLIP (INLET & EXHAUS   1     1-007   1399   GAP BASE CLIP (INLET & EXHAUS   1     1-007   1400   GULUPMP & FILTER   1     1-007   1400   GULUPMP & FILTER   1     1-009   1600   CLUTCH DISC & COVER (MANUAL)   1	1-J03	1040		1-013	1930						
1-G04   110   ROTORS & RELATED PARTS   1-E14   1960     1-104   1300   INLET MANIFOLD   1-E14   1960     1-N04   1310   EXHAUST MANIFOLD   1-E14   1960     1-N04   1310   EXHAUST MANIFOLD   1-E14   1960     1-N04   1311   INTER COLLER   GASKET & SEPL KIT (AUTOMATIC)     1-N04   1311   INTER COLLER   GASKET & SEPL KIT (AUTOMATIC)     1-N05   1325   FUEL SYSTEM   1     1-H05   1325   FUEL SYSTEM   1     1-N05   1350   STARTING ASSIST SYSTEM   1     1-N05   1350   STARTING ASSIST SYSTEM   1     1-N05   1350   FUELE ONTROL VALVE   1     1-F06   1371   AIR PUMP & AIR CONTROL VALVE   1     1-F06   1371   AIR PUMP & FILTER   (IMAUST)     1-F07   1400   OLL PUMP & FILTER   (IMAUAL)     1-F08   1500   RACKET, PULLEY & BELT   1     1-F09   1600   CLUTCH DISC & COVER (MANUAL)   1     1-F09   1600   CLUTCH DISC SYSTEM	1-M03	1040 A	OIL PAN,FRONT & REAR HOUSING (TURBO)	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)					
1-004   110   NOTORS & RELATED PARTS   1-E14   1960   GASKET & SEAL KIY (AUTOMATIC)     1-104   1300   INLET MANIFOLD   1-E14   1960   GASKET & SEAL KIY (AUTOMATIC)     1-M04   1311   INTER COOLER   1   1   1   1     1-005   1312   TURBO CMARGER   1   1   1   1     1-F05   1320   FUEL SYSTEM   1   1   1   1     1-H05   1325   FUEL OISTRIBUTOR   1   1   1   1   1   1   1     1-H05   1326   STARTING ASSIST SYSTEM   1   <	1-004	1100	ECCENTRIC SHAFT & FLYWHEEL	1-014	1950						
1-104   1300   INLET MANIFOLD     1-m04   1310   EXHAUST MANIFOLD     1-m04   1311   INTER COOLER     1-G05   1312   TURBO.CHARGER     1-G05   1320   TURBO.CHARGER     1-H05   1320   FUEL SYSTEM     1-H05   1320   FUEL DISTRIBUTOR     1-H05   1350   STARTING ASSIST SYSTEM     1-H05   1350   STARTING ASSIST SYSTEM     1-H05   1364   THROTILE BODY     1-F06   1371   AIR PUMP & AIR CONTROL VALVE     1-F06   1371   AIR PUMP & AIR CONTROL VALVE     1-F07   1400   OIL PUMP & FILTER     1-F07   1400   OIL PUMP & FILTER     1-H07   1500   COOLING SYSTEM     1-F07   1400   OIL PUMP & FILTER     1-H07   1500   COOLING SYSTEM     1-F08   1580   BRACKET, PULLEY & BELT     1-C09   1600   CLUTCH DISC & COVER (MANUAL)     1-F09   1700   TRANSMISSION GEAS (MANUAL)     1-F09   1700   TRANSMISSION GEAS (MANUAL)     1-F010   1800 <td>1-604</td> <td>1110</td> <td>ROTORS &amp; RELATED PARTS</td> <td>1</td> <td>1940</td> <td>1</td> <td></td> <td></td> <td></td>	1-604	1110	ROTORS & RELATED PARTS	1	1940	1					
1-N04   1311   INTER COOLER     1-C05   1312   TURBO CHARGER     (TURBO)   120   FUEL SYSTEM     1-H05   1320   FUEL DISTRIBUTOR     1-H05   1350   STARTING ASSIST SYSTEM     1-H05   1350   STARTING ASSIST SYSTEM     1-H05   1350   STARTING ASSIST SYSTEM     1-H05   1364   THROTTLE BODY     1-F06   1371   AIR PUMP & AIR CONTROL VALVE     1-F06   1380   EMISSION CONTROL SYSTEM     1-F07   1400   GLL PUMP & FILTER     1-F07   1400   OIL PUMP & FILTER     1-F07   1400 A   OIL PUMP & FILTER     1-F08   1580   BRACKET.PULLEY & BELT     1-C09   1600   CLUTCH DISC & COVER (MANUAL)     1-F09   1700   TRANSMISSION CASE (MANUAL)     1-H01   1720   CHANGE CONTROL SYSTEM     1-H02   1500   BCACKET.PULLEY & BELT     1-C09   1600   CLUTCH DISC & COVER (MANUAL)     1-H03   1700   TRANSMISSION CASE (MANUAL)     1-H04   1720   CHANGE CONTROL SYSTEM	1-104	1300	INLET MANIFOLD	7614	1780	GASKET & SEPE KIP (AUTOGATIO)					
1-C05   1312   (TURBO)     1-F05   1320   FUEL SYSTEM     1-H05   1325   FUEL DISTRIBUTOR     1-H05   1350   STARTING ASSIST SYSTEM     1-H05   1350   STARTING ASSIST SYSTEM     1-H05   1350   STARTING ASSIST SYSTEM     1-H05   1364   THROTTLE BDDY     1-F06   1371   AIR CUEANER     1-F06   1371   AIR CONTROL SYSTEM     1-D07   1399   CAP & HOSE CLIP (INLET & EXHAU     ST SIDE   OIL PUMP & FILTER     (WBO)   TURBO)     1-F07   1400     01L PUMP & FILTER     (WBO)   TURBO)     1-F08   1580     BRACKET,PULLEY & BELT     1-F09   1700     1-F09   1800   ENGRE CONTROL S	1-M04	1310	EXHAUST MANIFOLD				1				
1-F05   1320   FUEL SYSTEM     1-H05   1325   FUEL DISTRIBUTOR     1-I05   1350   AIR CLEANER     1-M05   1350   STARTING ASSIST SYSTEM     1-M05   1364   THROTTLE BODY     1-F06   1371   AIR PUMP & AIR CONTROL VALVE     1-F06   1371   AIR PUMP & AIR CONTROL VALVE     1-F06   1371   AIR PUMP & AIR CONTROL VALVE     1-F07   1400   OIL PUMP & FILTER     (W/O   TURBO)   FILTER     1-F07   1400   OIL PUMP & FILTER     (W/O   TURBO)   FILTER     1-F07   1500   COOLING SYSTEM     1-F08   1580   BRACKET,PULLEY & BELT     1-F09   1700   TRANSMISSION CASE (MANUAL)     1-F09   1710   TRANSMISSION CASE (MANUAL)     109   1710   TRANSMISSION CASE (MANUAL)     1-H00   1800   ENGINE ELECTRICAL SYSTEM     1-M00   IBOL ENGINE ELECTRICAL SYSTEM	1-N04	1311						1			
1-H05 1325 FUEL DISTRIBUTOR 1-I05 1330 AIR CLEANER 1-N05 1350 STARTING ASSIST SYSTEM 1-N05 1364 THROTILE BODY 1-F06 1371 AIR PUMP & AIR CONTROL VALVE 1-F06 1380 EMISSION CONTROL SYSTEM 1-007 1399 CAP & HOSE CLIP (INLET & EXHAU ST SIDE) 1-F07 1400 OIL PUMP & FILTER (W/D TURBO) 1-F07 1400 A OIL PUMP & FILTER (W/D TURBO) 1-M07 1500 COOLING SYSTEM 1-F08 1580 BRACKET,PULLEY & BELT 1-C09 1600 CLUTCH DISC & COVER (MANUAL) 1-F09 1710 TRANSMISSION CASE (MANUAL) 1-M07 1720 CHANGE CONTROL SYSTEM (MANUAL) 1-M10 1800 EMGINE ELECTRICAL SYSTEM	1-C05	1312									
1-ID51330AIR CLEANER1-M051350STARTING ASSIST SYSTEM1-N051364THROTTLE BODY1-F061371AIR PUMP & AIR CONTROL VALVE1-F061371AIR PUMP & AIR CONTROL VALVE1-D071389CAP & HOSE CLIP (INLET & EXHAU STIDE)1-F071400OIL PUMP & FILTER (TURBO)1-H071500COOLING SYSTEM1-F081580BRACKET.PULLEY & BELT1-F091700TRANSMISSION CASE (MANUAL)1-F091700TRANSMISSION CASE (MANUAL)1-H101720CHANGE CONTROL SYSTEM1-M101800ENGINE ELECTRICAL SYSTEM	1-F05	1320	FUEL SYSTEM								
1-M051350STARTING ASSIST SYSTEM1-N051364THROTTLE BODY1-F061371AIR PUMP & AIR CONTROL VALVE1-I061380EMISSION CONTROL SYSTEM1-D071399CAP & HOSE CLIP (INLET & EXHAU ST SIDE)1-F071400OIL PUMP & FILTER (W/O TURBO)1-I071400 AOIL PUMP & FILTER (W/O TURBO)1-M071500COOLING SYSTEM1-F081580BRACKET, PULLEY & BELT1-C091600CLUTCH DISC & COVER (MANUAL)1-F091700TRANSMISSION CASE (MANUAL)1-H011720CHANGE CONTROL SYSTEM1-M101800ENGINE ELECTRICAL SYSTEM	1-H05	1325	FUEL DISTRIBUTOR								
1-N051364THROTTLE BODY1-F061371AIR PUMP & AIR CONTROL VALVE1-I061380EMISSION CONTROL SYSTEM1-D071399CAP & HOSE CLIP (INLET & EXHAU ST SIDE)1-F071400OIL PUMP & FILTER (W/O TURBO)1-I071400 AOIL PUMP & FILTER (W/O TURBO)1-M071500COOLING SYSTEM1-F081580BRACKET, PULLEY & BELT1-C091600CLUTCH DISC & COVER (MANUAL)1-F091700TRANSMISSION CASE (MANUAL)1-J091710TRANSMISSION GEARS(MANUAL)1-H101720CHANGE CONTROL SYSTEM1-M101800ENGINE ELECTRICAL SYSTEM	1-105	1330	AIR CLEANER								
1-F06   1371   AIR PUMP & AIR CONTROL VALVE     1-I06   1380   EMISSION CONTROL SYSTEM     1-D07   1399   CAP & HOSE CLIP (INLET & EXHAU     1-F07   1400   OIL PUMP & FILTER     1-I07   1400 A   OIL PUMP & FILTER     1-M07   1500   COOLING SYSTEM     1-F08   1580   BRACKET, PULLEY & BELT     1-F09   1700   TRANSMISSION CASE (MANUAL)     1-F09   1700   TRANSMISSION CASE (MANUAL)     1-J09   1710   TRANSMISSION GEARS(MANUAL)     1-H00   1800   ENGINE ELECTRICAL SYSTEM	1-M05	1350	STARTING ASSIST SYSTEM								
1-106   1380   EMISSION CONTROL SYSTEM     1-D07   1399   CAP & HOSE CLIP (INLET & EXHAU     1-F07   1400   OIL PUMP & FILTER     (W/O TURBO)   (W/O TURBO)     1-I07   1400 A     0IL PUMP & FILTER     (H/O TURBO)     1-H07   1500     COOLING SYSTEM     1-F08   1580     BRACKET.PULLEY & BELT     1-F09   1700     CLUTCH DISC & COVER (MANUAL)     1-F09   1710     TRANSMISSION CASE (MANUAL)     1-H10   1720     CHANGE CONTROL SYSTEM (MANUAL)     1-H10   1800     ENGINE ELECTRICAL SYSTEM	1-N05	1364	THROTTLE BODY								
1-D07 1399 CAP & HOSE CLIP (INLET & EXHAU ST SIDE) 1-F07 1400 OIL PUMP & FILTER (W/O TURBO) 1-I07 1400 A OIL PUMP & FILTER (TURBO) 1-M07 1500 COOLING SYSTEM 1-F08 1580 BRACKET, PULLEY & BELT 1-C09 1600 CLUTCH DISC & COVER (MANUAL) 1-F09 1700 TRANSMISSION CASE (MANUAL) 1-F09 1710 TRANSMISSION GEARS(MANUAL) 1-H10 1720 CHANGE CONTROL SYSTEM (MANUAL) 1-M10 1800 ENGINE ELECTRICAL SYSTEM	1-F06	1371	AIR PUMP & AIR CONTROL VALVE		l						
ST SIDE)     1-F07   1400   OIL PUMP & FILTER (W/O TURBO)     1-I07   1400 A   OIL PUMP & FILTER (TURBO)     1-M07   1500   COOLING SYSTEM     1-F08   1580   BRACKET,PULLEY & BELT     1-C09   1600   CLUTCH DISC & COVER (MANUAL)     1-F09   1700   TRANSMISSION CASE (MANUAL)     1-H10   1720   CHANGE CONTROL SYSTEM (MANUAL)     1-H10   1800   ENGINE ELECTRICAL SYSTEM	1-106	1380	EMISSION CONTROL SYSTEM								
(W/O TURBO)     1-IO7   140D A     01L PUMP & FILTER (TURBO)     1-M07   1500     COOLING SYSTEM     1-F08   1580     BRACKET,PULLEY & BELT     1-C09   1600     CLUTCH DISC & COVER (MANUAL)     1-F09   1700     TRANSMISSION CASE (MANUAL)     1-J09   1710     TRANSMISSION GEARS(MANUAL)     1-H10   1720     CHANGE CONTROL SYSTEM     1-M10   1800     ENGINE ELECTRICAL SYSTEM	1-007	1399									
I-M07   1500   COOLING SYSTEM     I-F08   1580   BRACKET, PULLEY & BELT     I-C09   1600   CLUTCH DISC & COVER (MANUAL)     I-F09   1700   TRANSMISSION CASE (MANUAL)     I-H10   1720   CHANGE CONTROL SYSTEM (MANUAL)     I-H10   1800   ENGINE ELECTRICAL SYSTEM	1-F07	1400									
1-F08   1580   BRACKET, PULLEY & BELT     1-C09   1600   CLUTCH DISC & COVER (MANUAL)     1-F09   1700   TRANSMISSION CASE (MANUAL)     1-J09   1710   TRANSMISSION GEARS(MANUAL)     1-H10   1720   CHANGE CONTROL SYSTEM (MANUAL)     1-M10   1800   ENGINE ELECTRICAL SYSTEM	1-107	1400 A									
1-C09   1600   CLUTCH DISC & COVER (MANUAL)     1-F09   1700   TRANSMISSION CASE (MANUAL)     1-J09   1710   TRANSMISSION GEARS(MANUAL)     1-H10   1720   CHANGE CONTROL SYSTEM (MANUAL)     1-H10   1800   ENGINE ELECTRICAL SYSTEM	1-M07	1500	COOLING SYSTEM								
1-F09   1700   TRANSMISSION CASE (MANUAL)     1-J09   1710   TRANSMISSION GEARS(MANUAL)     1-H10   1720   CHANGE CONTROL SYSTEM (MANUAL)     1-H10   1720   CHANGE CONTROL SYSTEM (MANUAL)     1-H10   1800   ENGINE ELECTRICAL SYSTEM	1-F08	1580	BRACKET, PULLEY & BELT								
1-J09 1710 TRANSMISSION GEARS(MANUAL) 1-H10 1720 CHANGE CONTROL SYSTEM (MANUAL) 1-M10 1800 ENGINE ELECTRICAL SYSTEM	1-09	1600	CLUTCH DISC & COVER (MANUAL)								
1-J09 1710 TRANSMISSION GEARS(MANUAL) 1-H10 1720 CHANGE CONTROL SYSTEM (MANUAL) 1-M10 1800 ENGINE ELECTRICAL SYSTEM	1-F09	1700	TRANSMISSION CASE (MANUAL)								
1-H10 1720 CHANGE CONTROL SYSTEM (MANUAL) 1-M10 1800 ENGINE ELECTRICAL SYSTEM	6		TRANSMISSION GEARS(MANUAL)		Į						
1-M10 1800 ENGINE ELECTRICAL SYSTEM			CHANGE CONTROL SYSTEM (MANUAL)	2							
	1-M10	1800	ENGINE ELECTRICAL SYSTEM	$\sim$			1				
		and summer it is not set of the		1 3	Ŋ			ł			

SECTION NAME INDEX (ENGINE)



. .


(W/O TURBO) 117-201

17-201J

1710

TRANSMISSION GEARS(MANUAL)

(G501-17-265A)

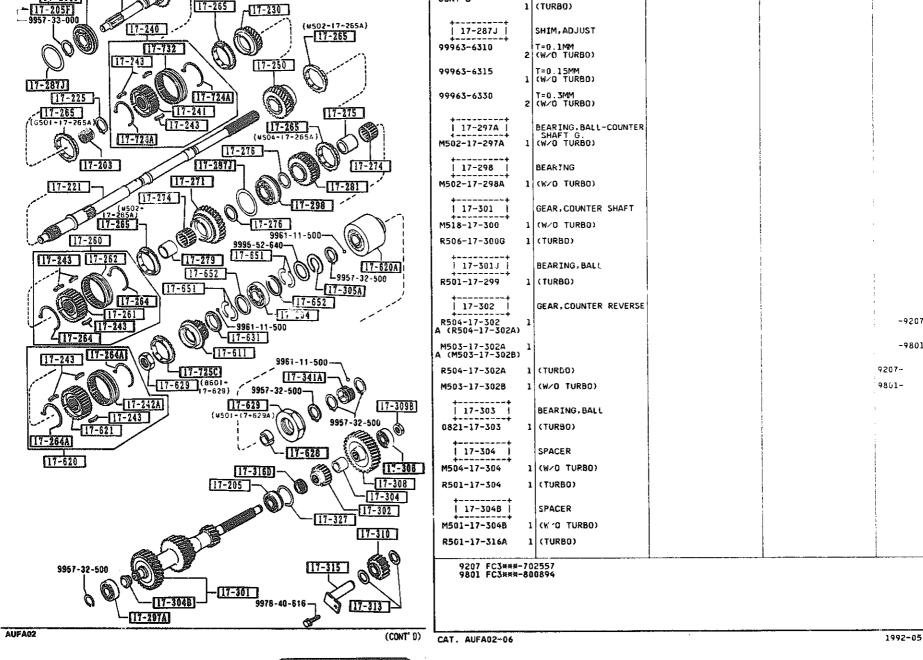

(1/2)

(THIS ILLUSTRATION CONSISTS OF 2 PAGES)

OTY MODEL/RESTRICTION

PARI NO.


CONT 'D

MODEL/RESTRICTION

MODELZPECTRICTION

FPOM-TO

-9207

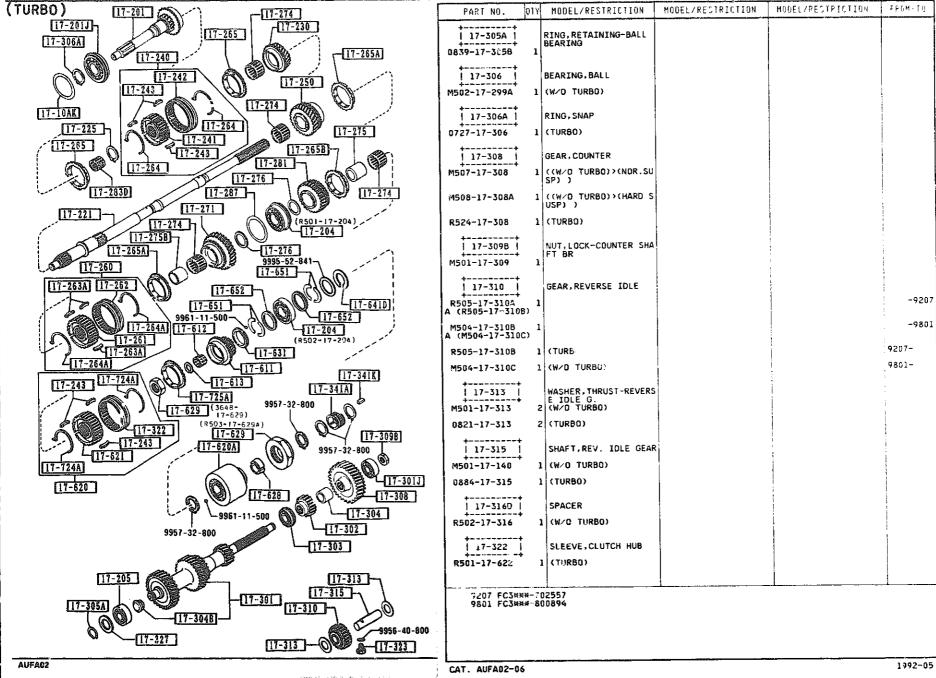


TRANSMISSION GEARS (MANUAL) (THIS ILLUSTRATION CONSISTS OF 2 PAGES) 1710

- T D

2-05

(2/2) 1710 -6


TRANSMISSION GEARS(MANUAL)

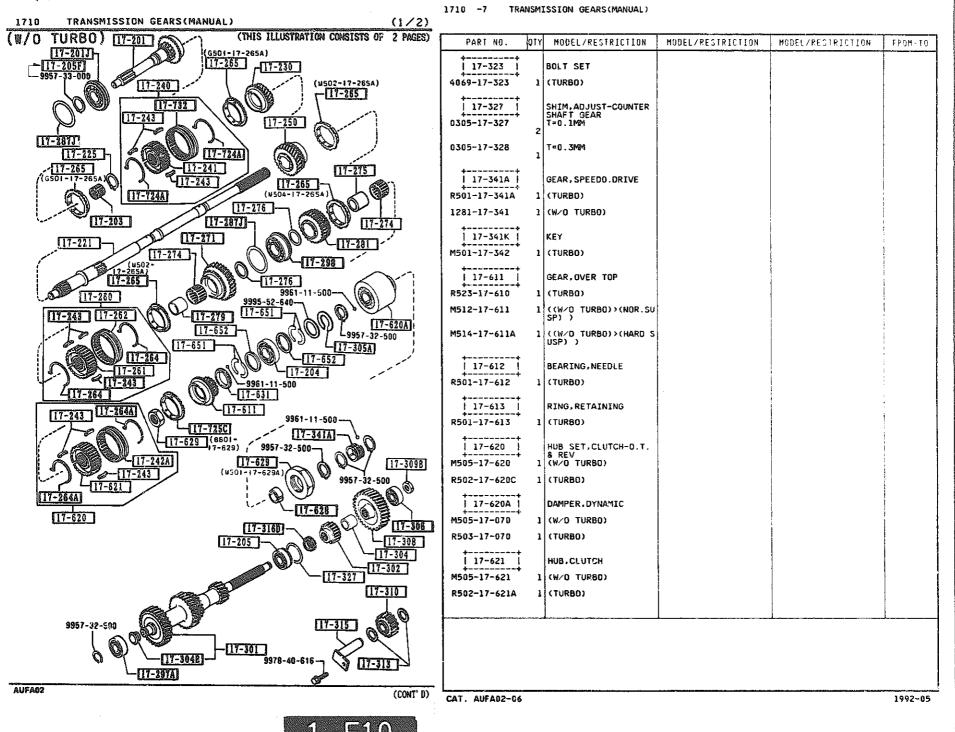and the second 


AU

-05

10

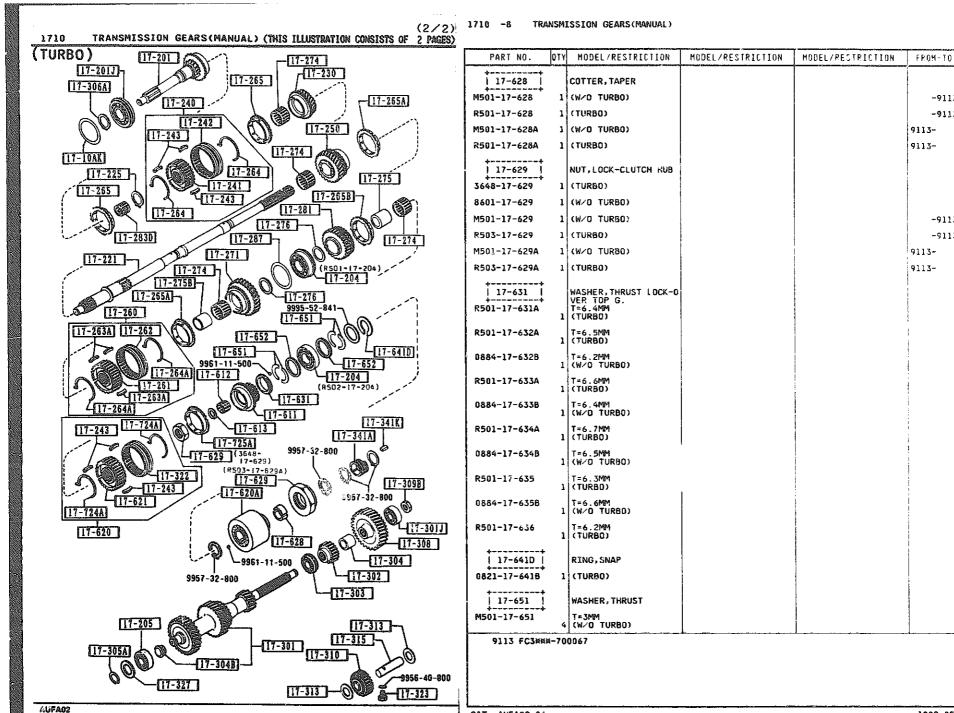

CAT. AUFA02-06

the second se


. . . . . . .

A

-9113


-9113

-9113

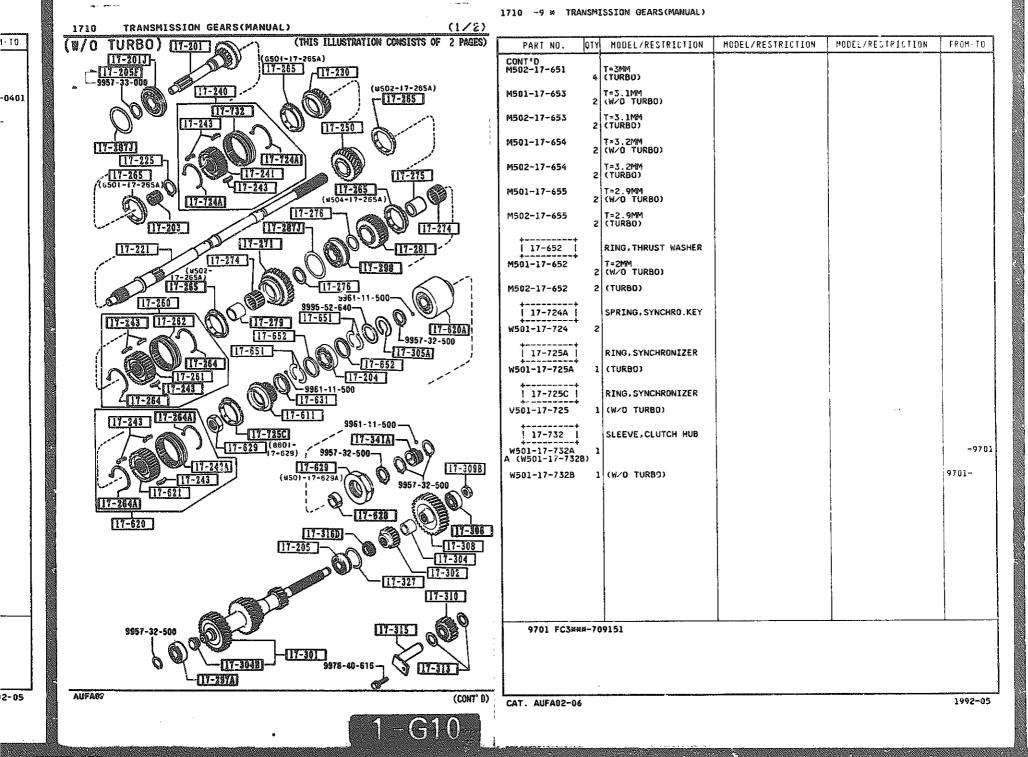


2-05

Ê

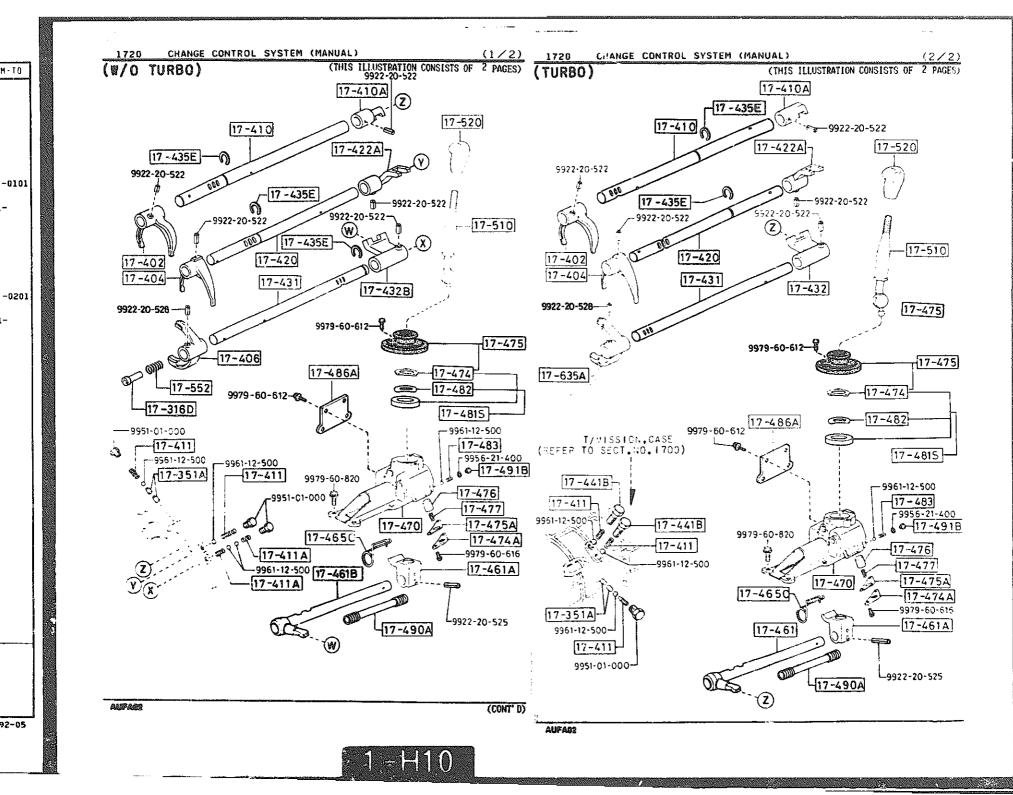



M - TO




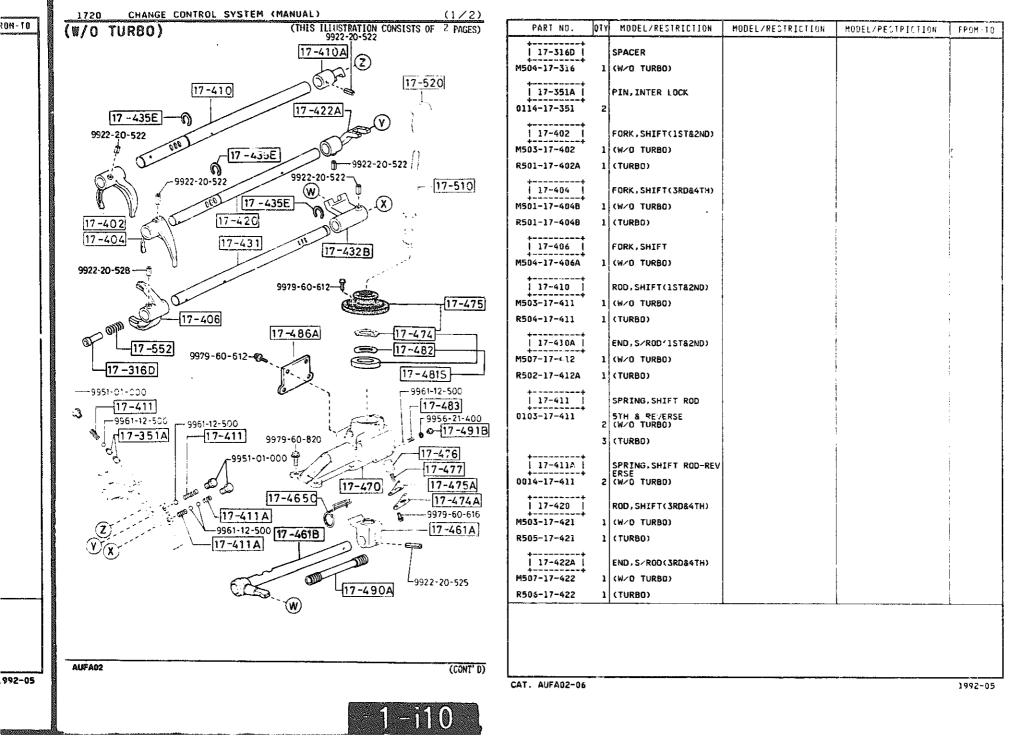


.

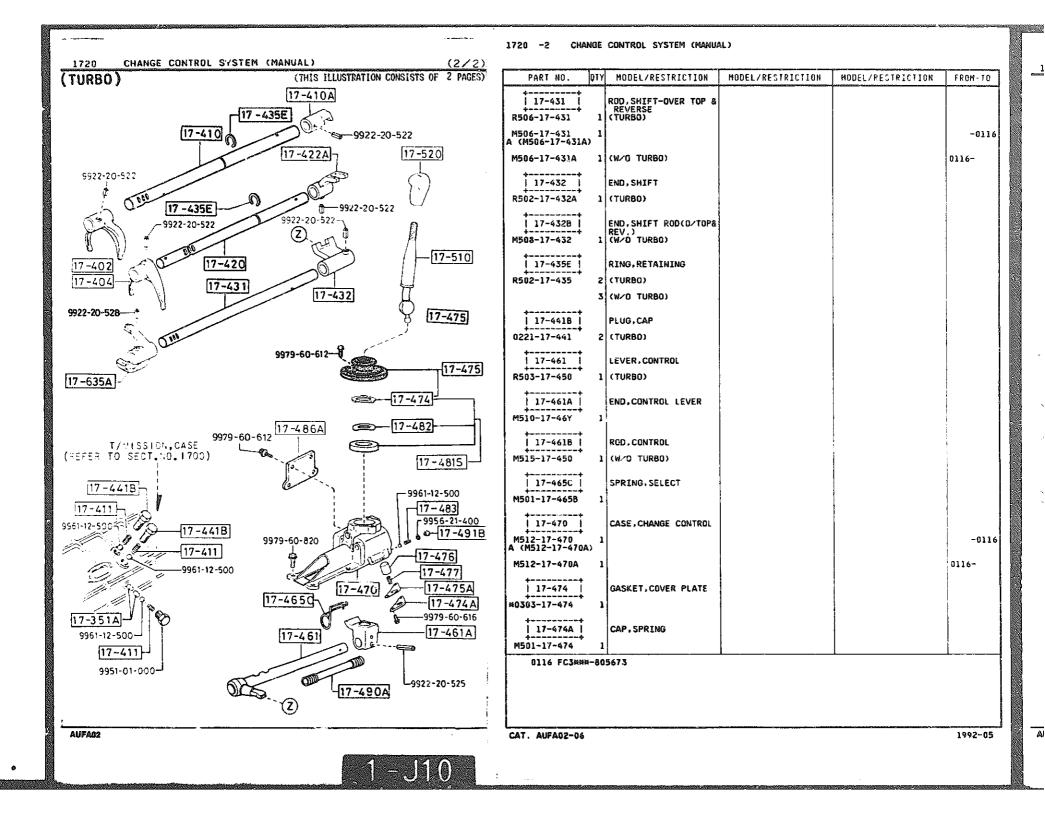

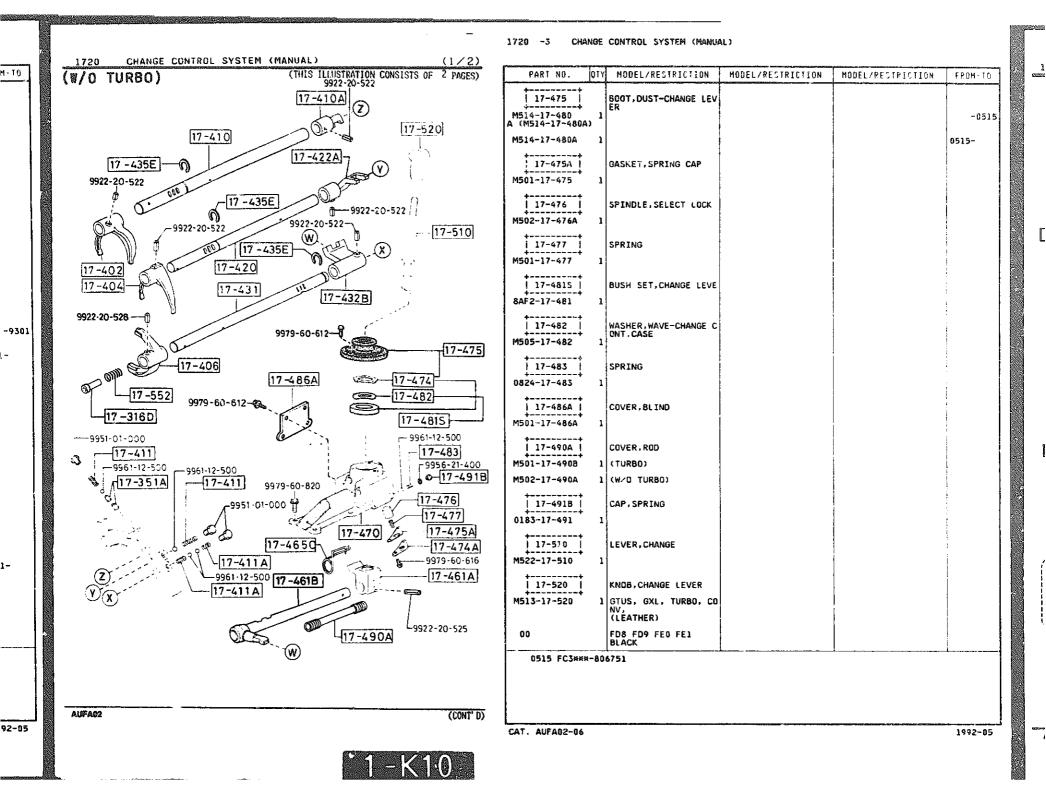

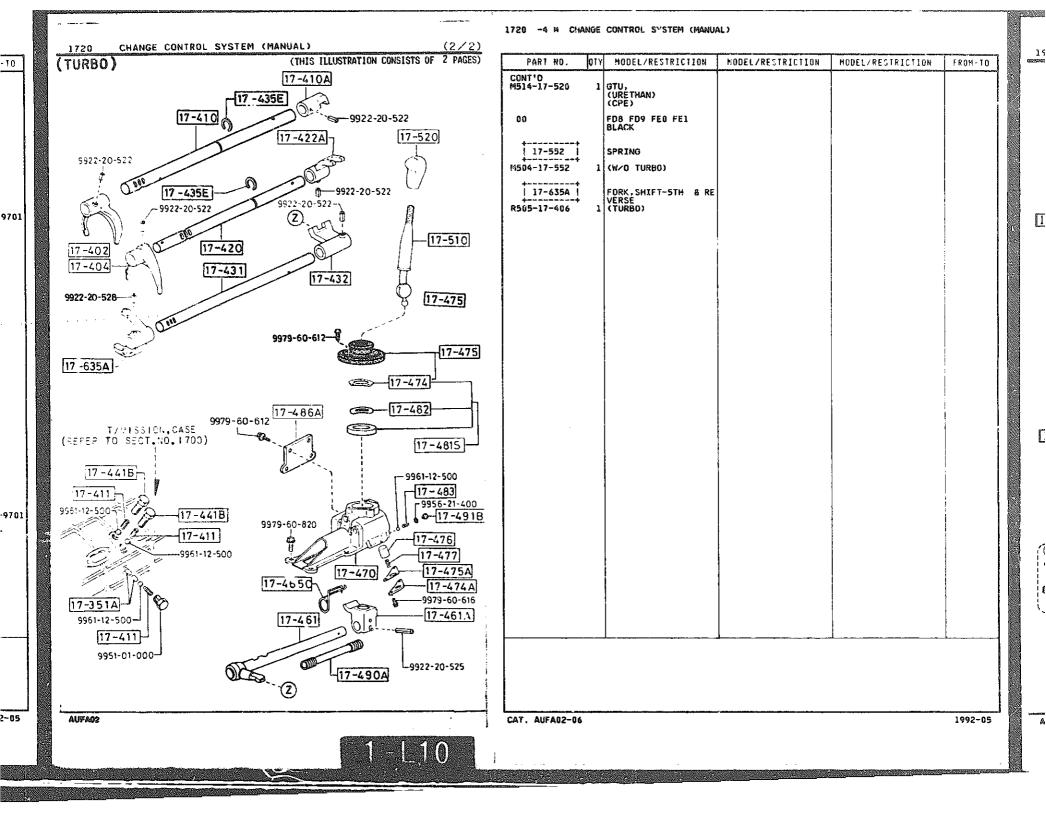

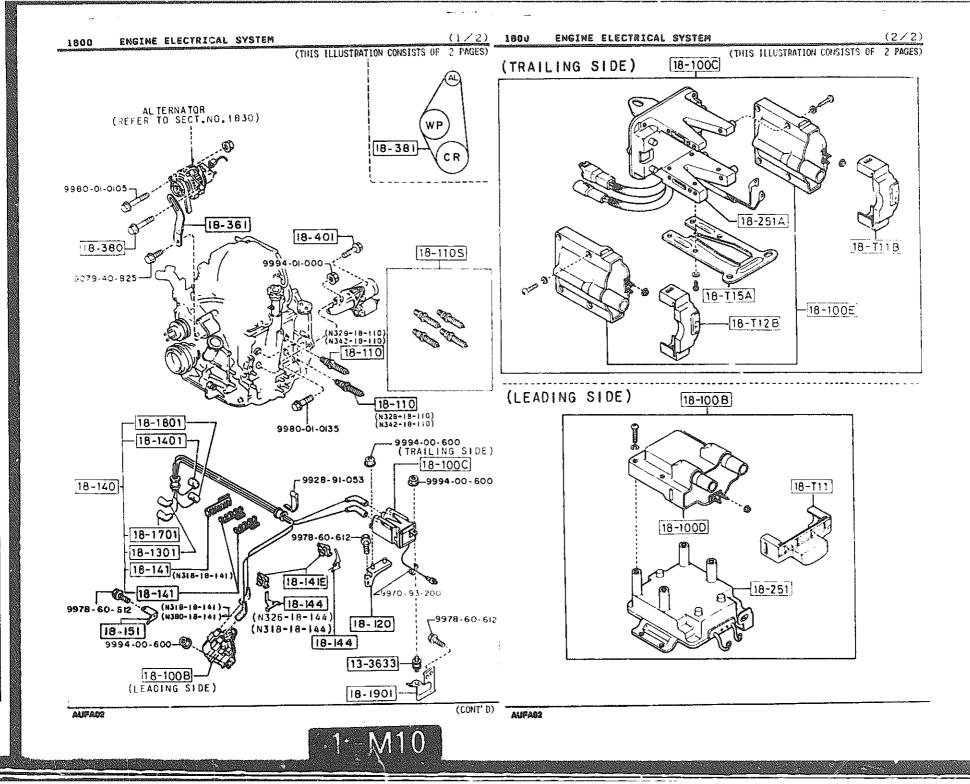

-19

-0101

-0501

A


19

1

1

i ç

١Ľ

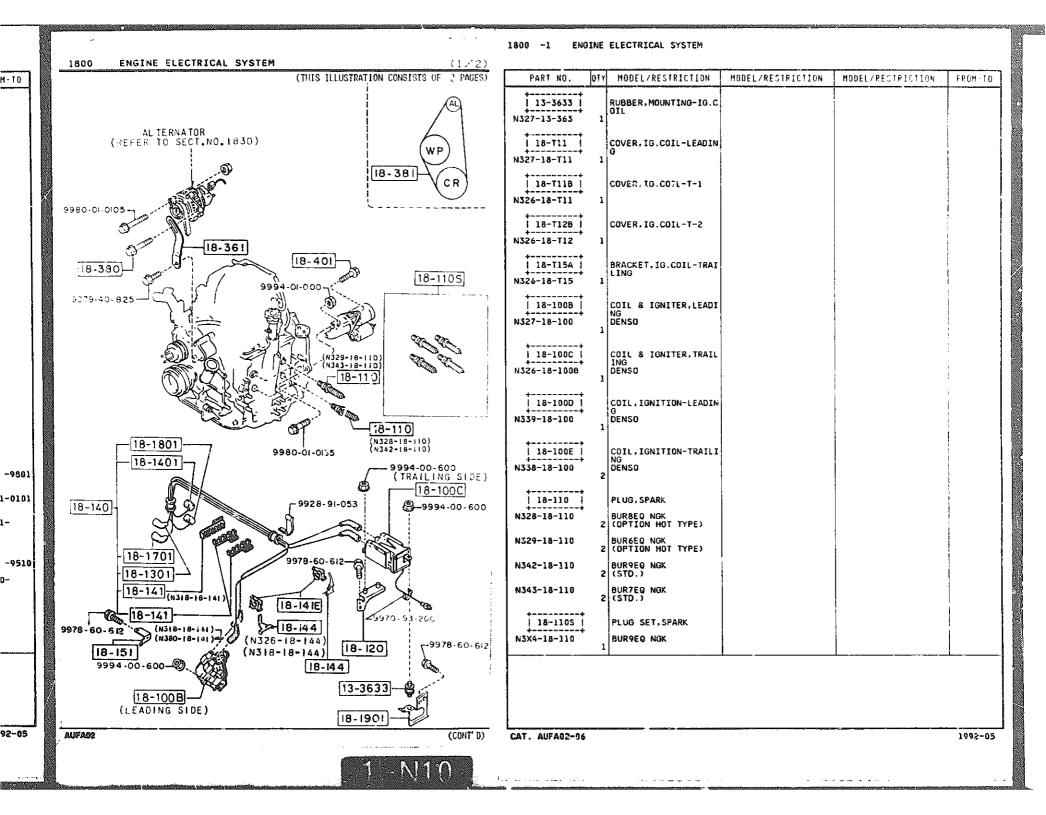

				SEC	TION NAME INDEX (ENGINE)			
L0.N0	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LQ.NO	SEC.NO	SECTION NAME
1-C03	1000	SHORT ENGINE & GASKET SETS	1-G11	1840	STARTER		[	
		(W/O TURBO)	1-J11	1850	BATTERY		l f	
1-003	1000 A	SHORT ENGINE & GASKET SETS (TURBO)	1-К11	1910	TORQUE CONVERTER, DIL PUMP & PI PINGS (AUTOMATIC)			
1-E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & M/IN CONTR OL SYSTEM (AUTOMATIC)	5		
1-G03	1030 A	ROTOR HOUSINGS	1-112	1925	CONTROL VALVE (AUTOMATIC)	EV 1		
1-J03	1040	OIL PAN,FRONT & REAR HOUSING (W/O TURBO)	1-D13	1930	CLUTCHES & PLANETARY GEARS (AU	¥		
1-M03	1040 A	DIL PAN,FRONT & REAR HOUSING (TURBO)	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)			
1-004	1100	ECCENTRIC SHAFT & FLYWHEEL	1-C14	1950	MANUAL LINKAGE SYSTEM (AUTOMAT	1		
1-604	1110	ROTORS & RELATED PARTS		1.000				
1-104	1300	INLET MANIFOLD	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)			
1-M04	1310	EXHAUST MANIFOLD						
1-N04	1311	INTER COOLER (TURBO)						
1-005	1312	TURBO CHARGER (TURBO)						
1-F05	1320	FUEL SYSTEM						
1-405	1325	FUEL DISTRIBUTOR						
1-105	1330	AIR CLEANER		ł				
1-MO5	1350	STARTING ASSIST SYSTEM						
1-N05	1364	THROTTLE BODY						
1-F06	1371	AIR PUMP & AIR CONTROL VALVE					İ	
1-106	1380	EMISSION CONTROL SYSTEM						
1-007	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)						
1-F07	1400	OIL PUMP & FILTER (W/O TURBO)						
1-107	1400 A	OIL PUMP & FILTER (TURBO)						
1-M07	1500	COOLING SYSTEM						
1-F08	1580	BRACKET, PULLEY & BELT		1				
1-009	1600	CLUTCH DISC & COVER (MANUAL)						
1-F09	1700	TRANSMISSION CASE (MANUAL)						
1-J09	1710	TRANSMISSION GEARS(MANUAL)						
1-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)	1					
1-M10	1800	ENGINE ELECTRICAL SYSTEM						
1-E11	1830	ALTERNATOR	65					


CATLOG-NO# AUFA02-06

٠,


1-811

5

DATE. 1992-05

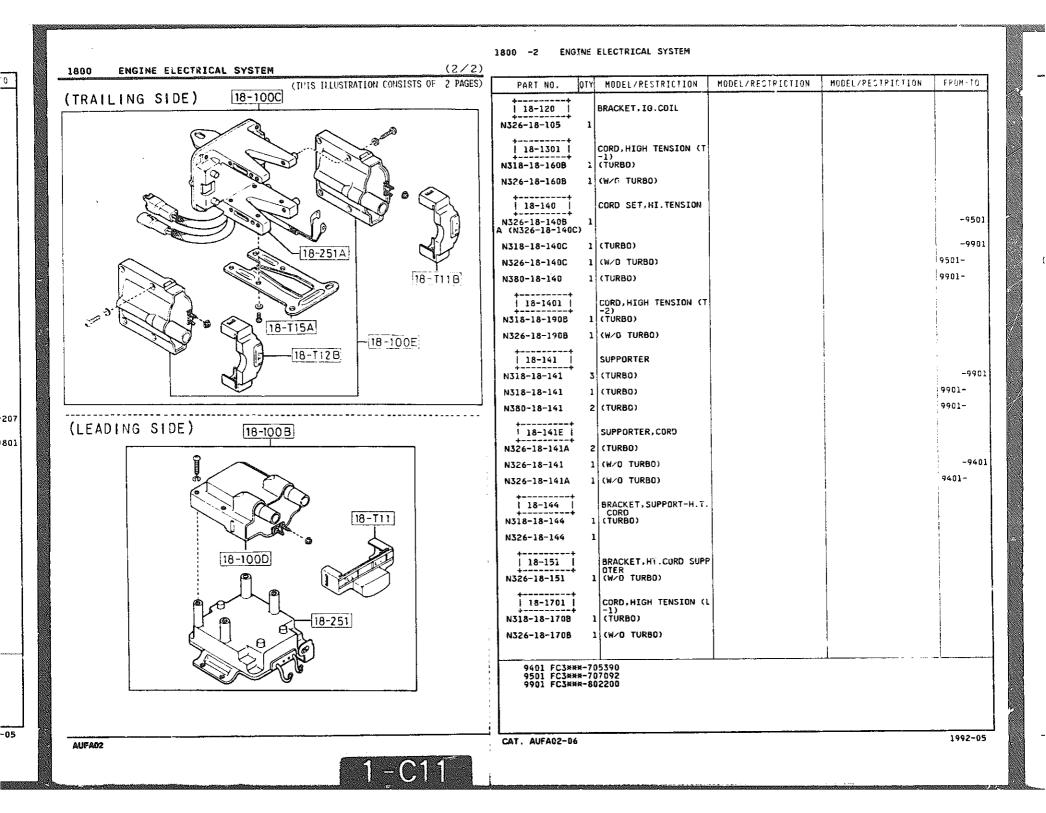

## 1800 -3 # ENGINE ELECTRICAL SYSTEM

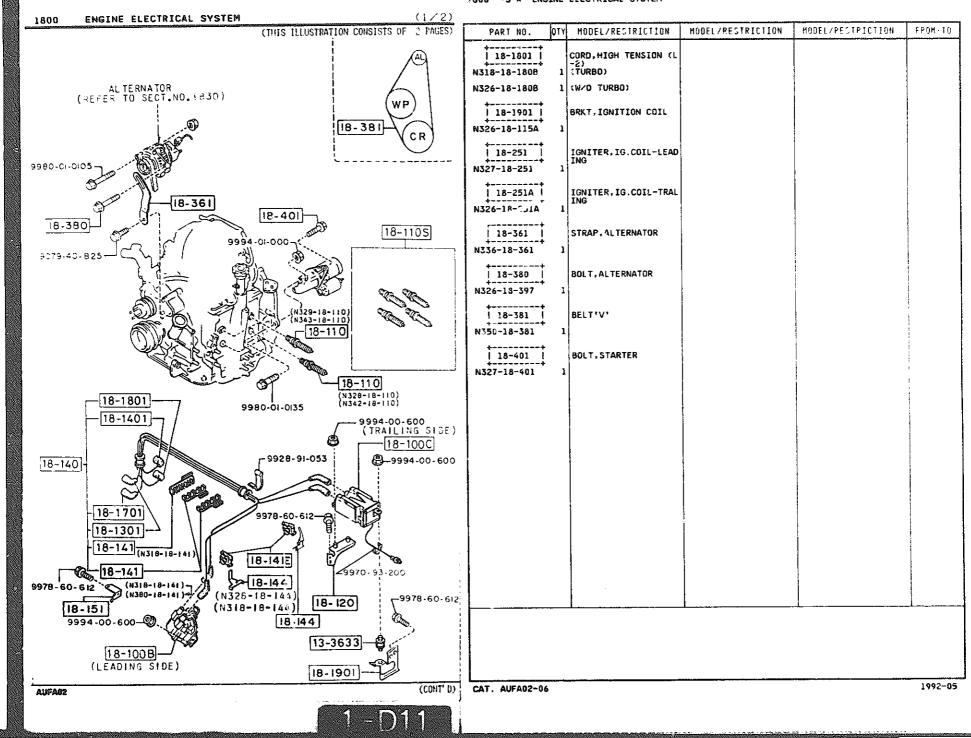

207

801





- **F** \*

τÐ

-05

## 1830 -1 ALTERNATOR

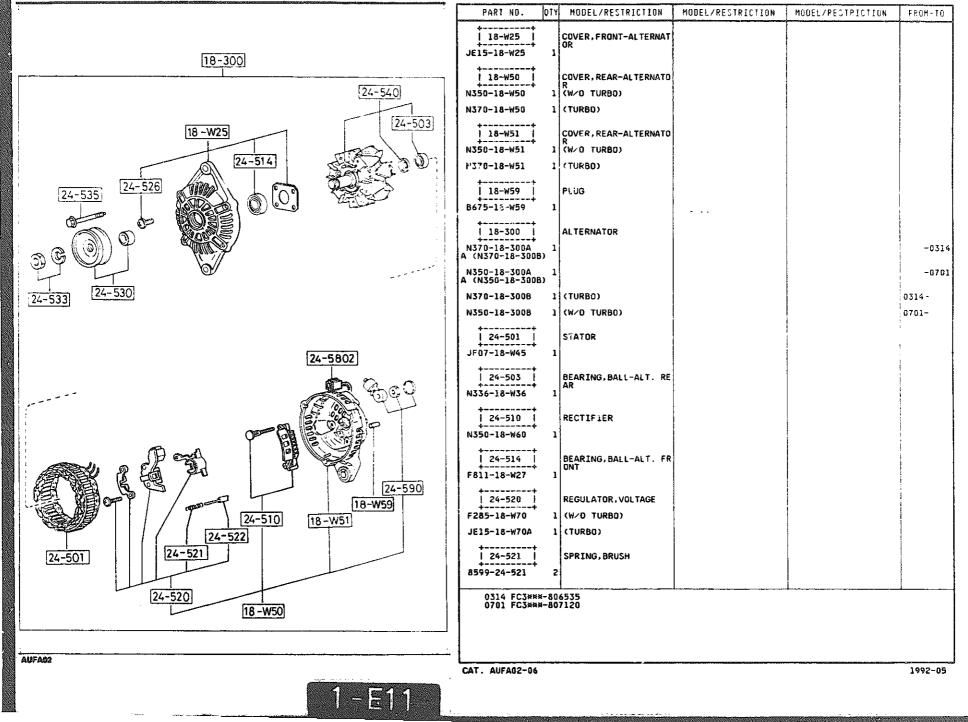

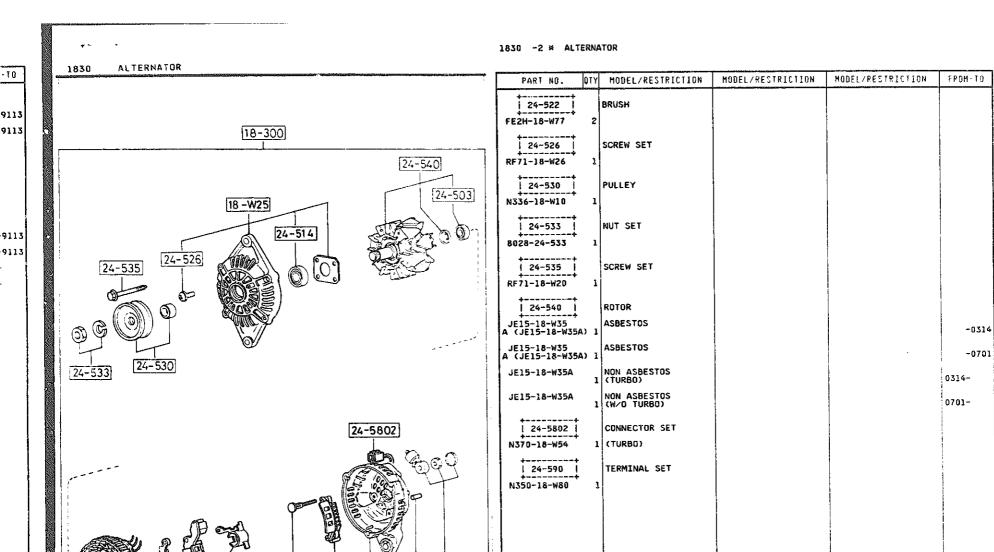

18-W59

18-W51

സ്ത

24-521

24-520

24-501


AUFA02

2-05

24-522

24-510

 18 -W50




CAT. AUFA02-06


. . .

. . . . .


------




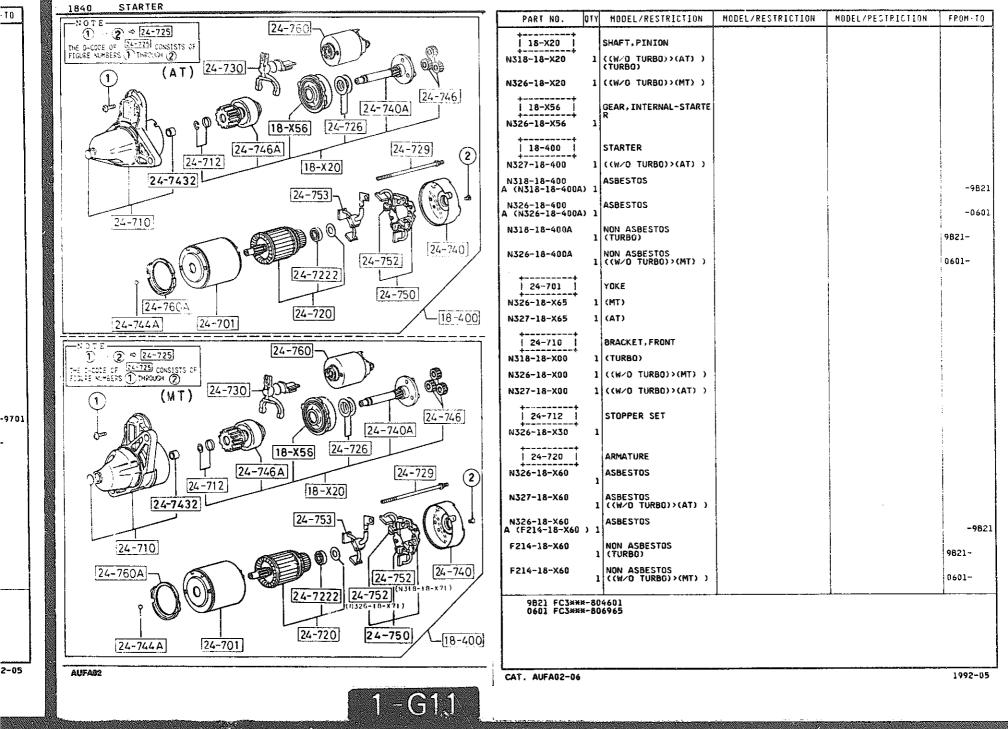

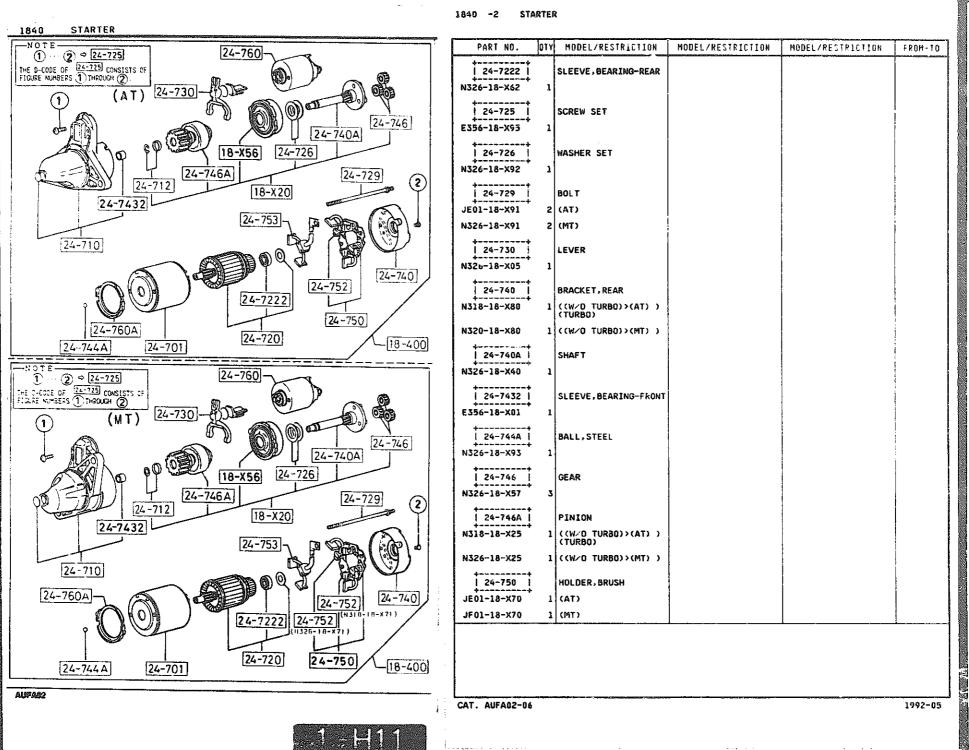


A

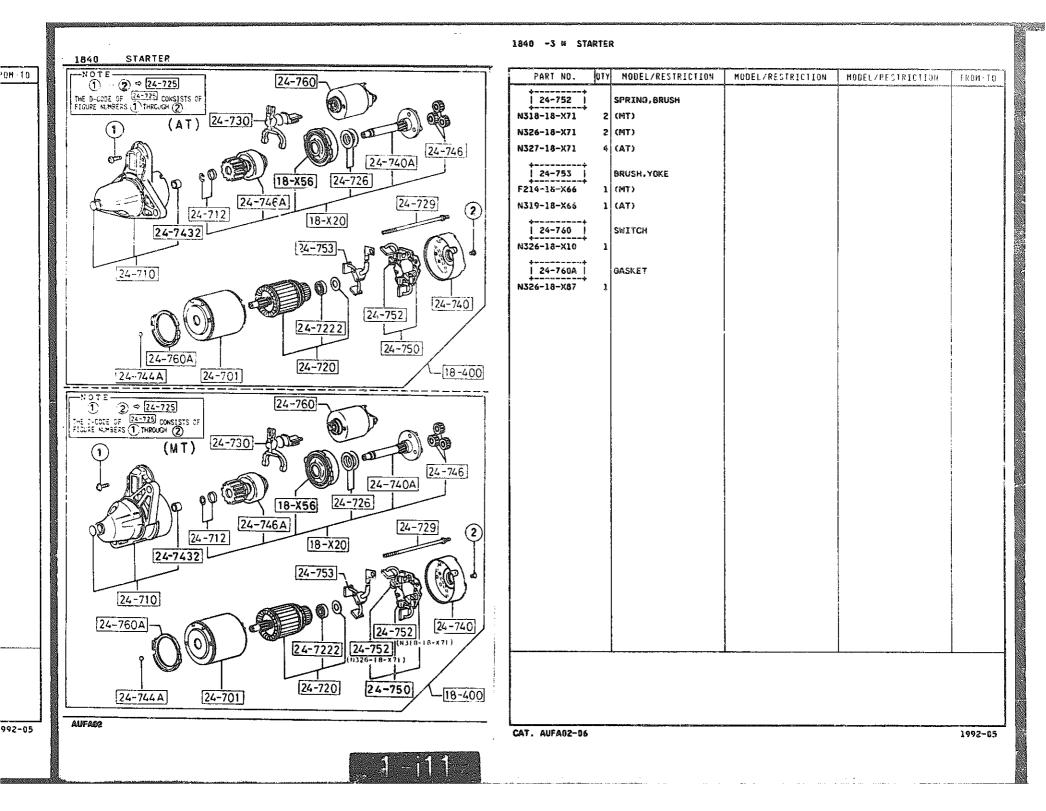

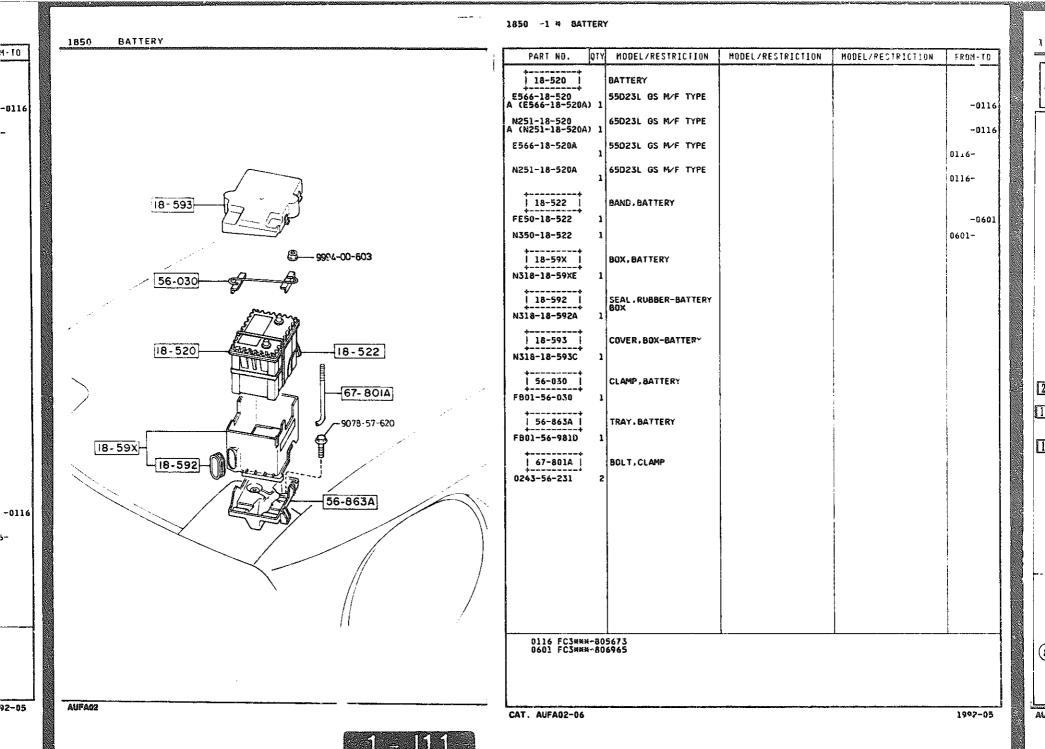

和主力

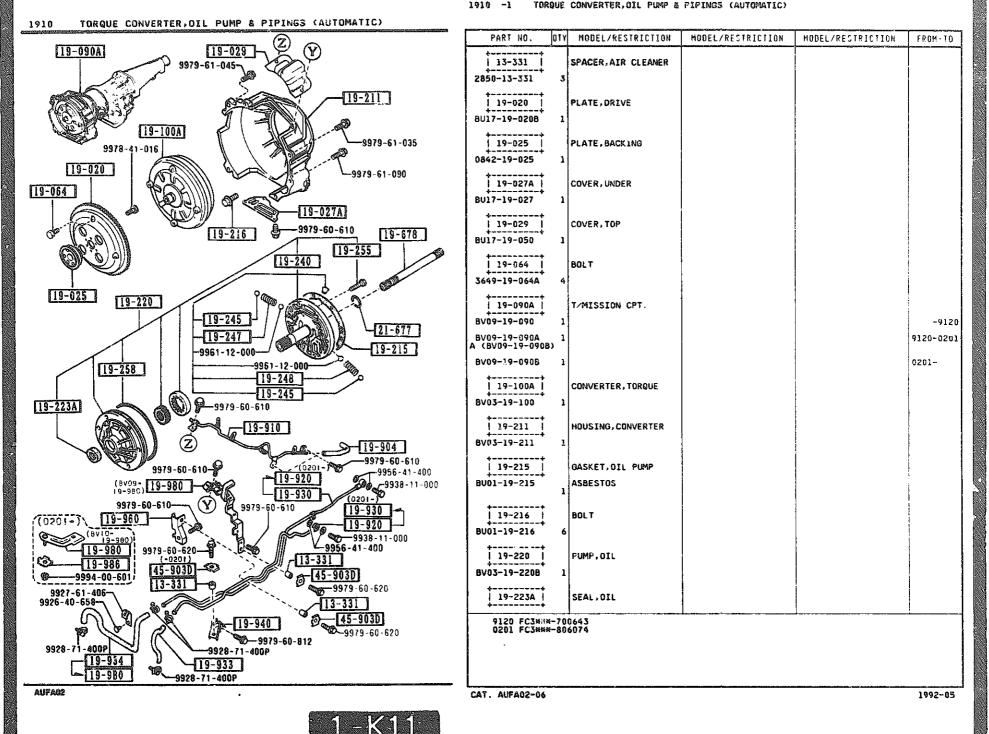


1(1


AI


2~05


M - T G

 -0515



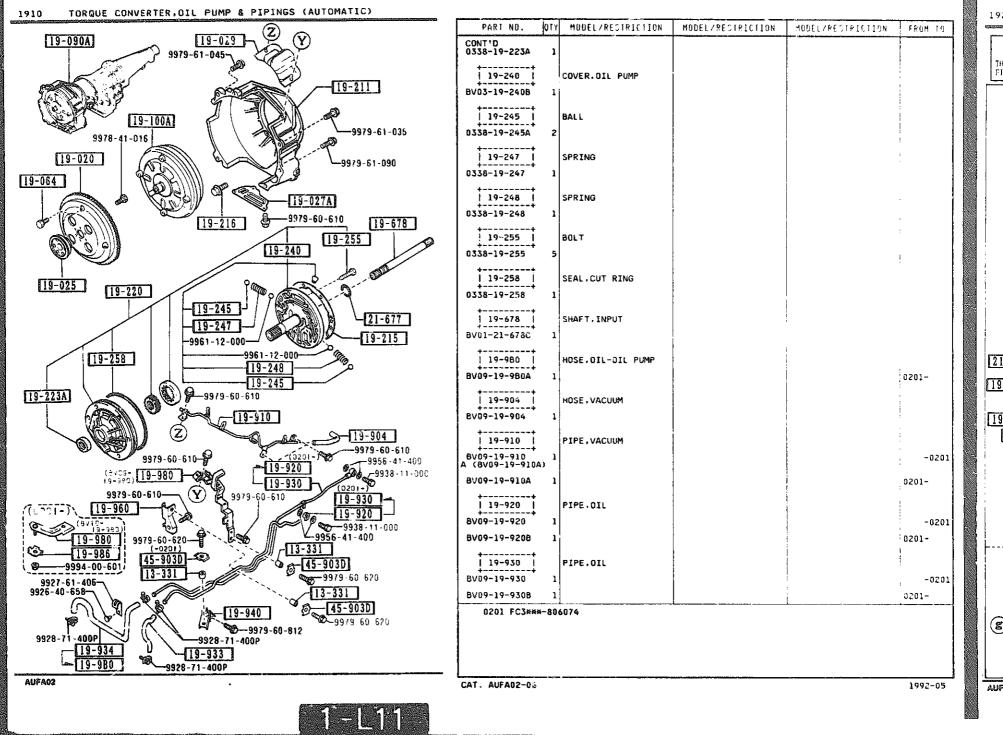

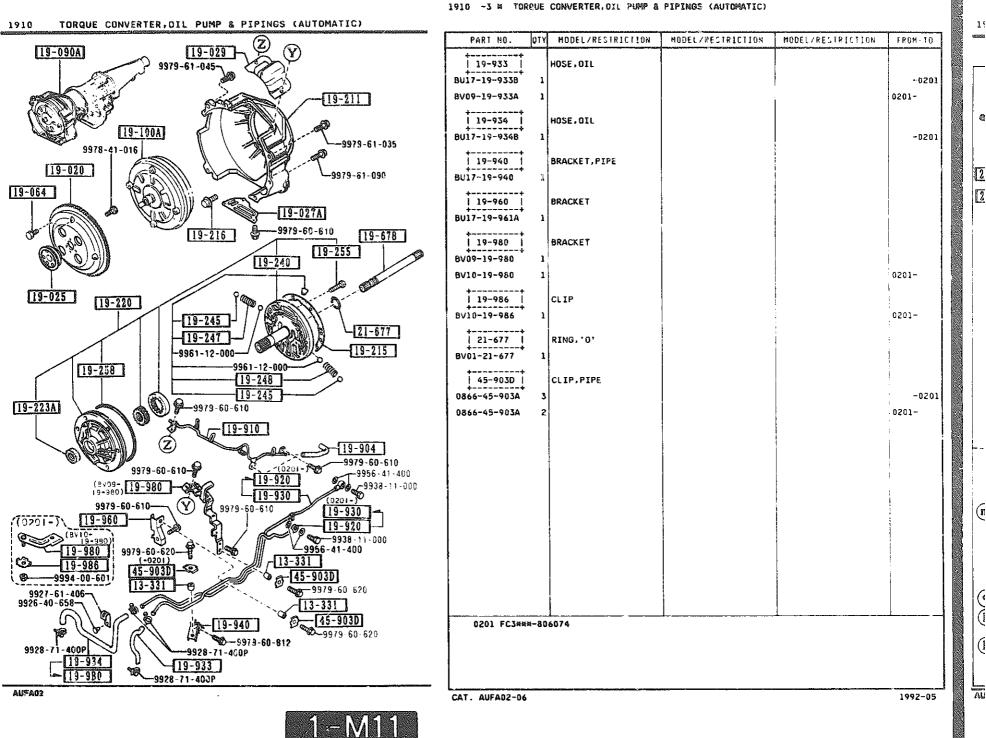

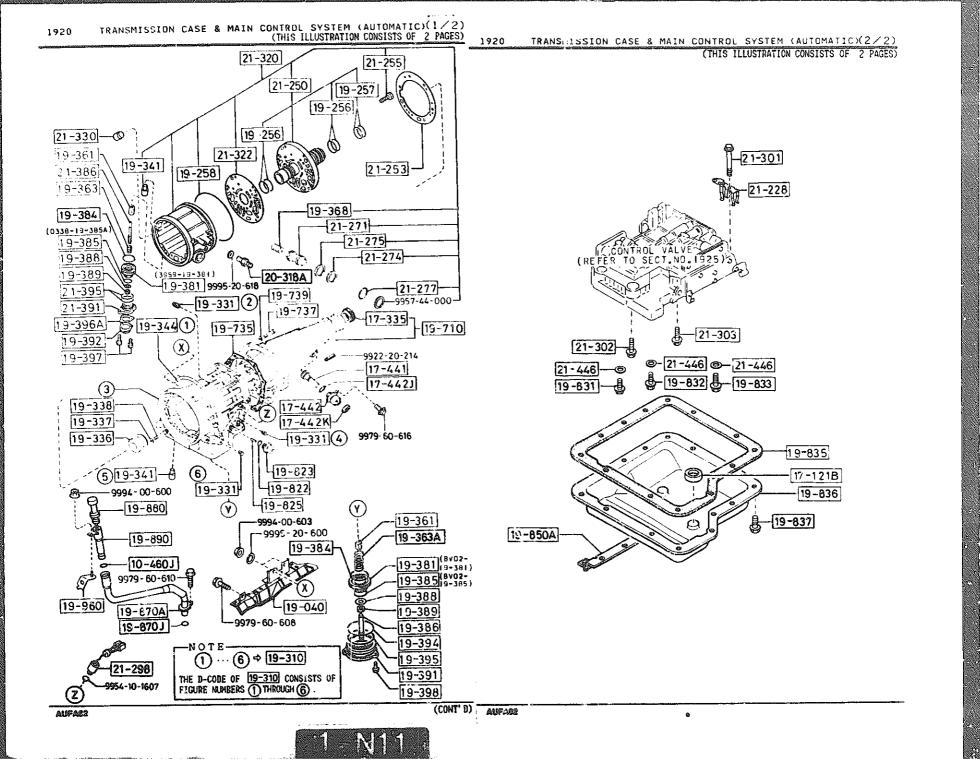

- T D

12 Al

(2007)

Π

,	SECTION NAME INDEX (ENGINE)											
LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME				
1-C03	1000	SHORT ENGINE & GASKET SETS (W/O TURBO)	1-611	1840	STARTER							
1-003	1000 A	SHORT ENGINE & GASKET SETS	1-311	1850	BATTERY							
î ļ		(TURBO)	1-К11	1910	TORQUE CONVERTER, DIL PUMP & PI PINGS (AUTOMATIC)							
1-E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR OL SYSTEM (AUTOMATIC)							
1-G03	1030 A	ROTOR HOUSINGS (TURBO)	1-112	1925	CONTROL VALVE (AUTOMATIC)	5						
1-J03	1040	OIL PAN, FRONT & REAR HOUSING (W/O TURBO)	1-D13	1930	CLUTCHES & PLANETARY GEARS (AU Tomatic)	E)	9					
1-M03	1040 A	OIL PAN, FRONT & REAR HOUSING (TURBO)	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)							
1-004	1100	ECCENTRIC SHAFT & FUNWHEEL	1-C14	1950	MANUAL LINKAGE SYSTEM (AUTOMAT							
1-G04	1110	ROTORS & RELATED PARTS	1-514	1940								
1-104	1300	INLET MANIFOLD	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)							
1-M04	1310	EXHAUST MANIFOLD				1						
1-N04	1311	INTER COOLER (TURBO)										
1-COS	1312	TURBO CHARGER (Turbo)										
1-F05	1320	FUEL SYSTEM										
1-H05	1325	FUEL DISTRIBUTOR										
1-105	1330	AIR CLEANER					 					
1-M05	1350	STARTING ASSIST SYSTEM										
1-N05	1364	THROTTLE BODY										
1-F06	1371	AIR PUMP & AIR CONTROL VALVE										
1-106	1380	EMISSION CONTROL SYSTEM										
1-007	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)										
1-F07	1400	OIL PUMP & FILTER (W/O TURBO)		ļ			İ					
1-107	1400 A	OIL PUMP & FILTER (TURBO)										
1-M07	1500	COOLING SYSTEM				l						
1-F08	1580	BRACKET, PULLEY & BELT				1						
1-09	1600	CLUTCH DISC & COVER (MANUAL)	1		]	1						
1-F09	1700	TRANSMISSION CASE (MANUAL)				1						
1-J09	1710	TRANSMISSION GEARS(MANUAL)										
1-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)				ļ						
1-M10	1800	ENGINE ELECTRICAL SYSTEM	ļ									
1-E11	1830	ALTERNATOR										
L		<u>i                                    </u>	<u> </u>	<u> </u>	<u> </u>	L						


SECTION NAME INDEX (ENGINE)

CATLOG-NO= AUFA02-06

5

DATE. 1992-05



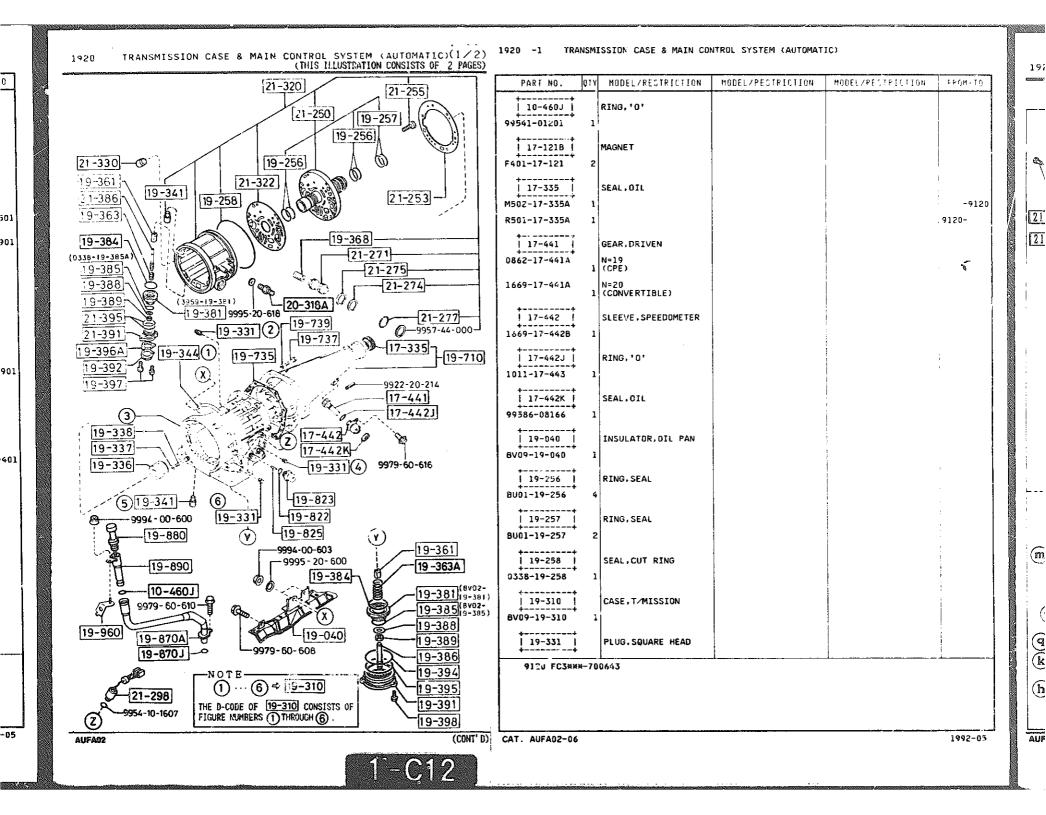


	1920 -2 TRANSMISSION CASE & MAIN CONTROL SYSTEM (AUTOMATIC)	
1920 TRANSMISSION CASE & MAIN CONTROL SYSTEM (AUTOMATIC)(2/2) (THIS ILLUSTRATION CONSISTS OF 2 PAGES)	PART NO. OTY MODEL/RESTRICTION MODEL/RESTRICTION MODEL/PESTRICTION	FPOM-TO
	CONT'D 0338-19-331A 3 1 19-336   RACE, INNER 0338-19-336 1	<u>, , , , , , , , , , , , , , , , , , , </u>
21-301 21-228	1 19-337   WASHER, PLAIN 0338-19-337 8 1 19-338   BOLT 0338-19-338 8	
(REFER TO SECT.NO. 1925)3	1     19-341     BOLT, ANCHOR END       0338-19-341     2       1     19-344     2	
	L 19-344 L BREATHER, AIR 0397-19-340 1 ++ L 19-361 L STRUT, BAND 0338-19-361B 2	
$\begin{array}{c} 21-302 \\ \hline 21-446 \\ \hline 21-446 \\ \hline 19-831 \\ \hline 19-831 \\ \hline 19-832 \\ \hline 19-833 \\ \hline 19-8$	FT40-19-363 1 FT40-19-363 1 J 19-363A SPRING, PISTON RETURN SPRING, PISTON RETURN	
	BU17-19-363 2 ++ 1 19-368   SPRING.CUSHION-PSTN. BU20-19-368 1 ++	
	↓ 19-381 ↓ PISTON, BAND SERVO BV02-19-381 1 3959-19-381 1 ++	
19-850A	L 19-384 L 3959-19-384 2 	
	1 0338-19-385A 1 D=40M94	
AUFA02 .	CAT. AUFA02-06	1992-05

2-05

- 10


1 - D12

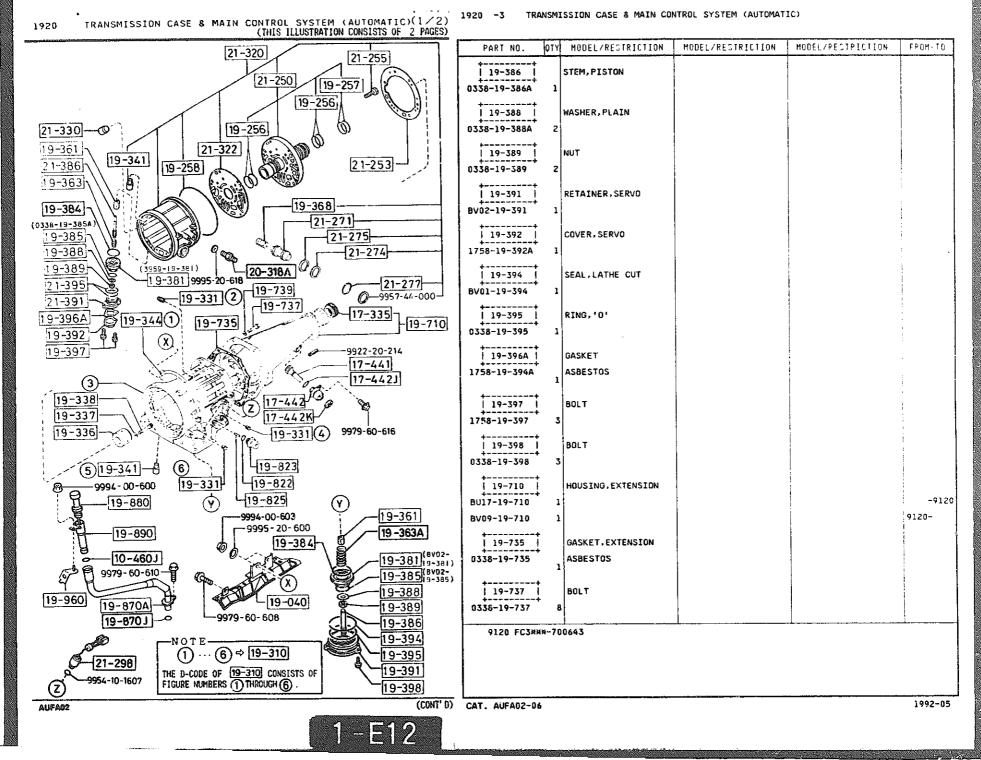


)701

-05


1920 TRANSM	ISSION CASE & MAIN CONTROL SYSTEM (AUTO	DMATIC/(2/2)	SSION CASE & MAIN CO	NTROL SYSTEM (AUTOMAT		
	(THIS ILLUSTRATION CONSI	STS OF 2 PAGES) PART NO. DTY	MODEL/RESTRICTION	MODEL/RESTRICTION	MODEL/RECTRICTION	FROM-
		19-739 0338-19-739 8	WASHER, PLAIN			
		19-822   0338-19-822 1	SEAL, 'O'RING			
	21-301	+ <b>-</b> +	DIAPHRAGM, VACUUM			
	21-228	19-825 L	ROD, DIAPHRAGM			
		1	L=30MM			
	(CCONTROL VALVE) (REFER TO SECT.NO. 1925) (REFER TO SECT.NO. 1925)	0338-19-827	L=30.5MM			
	A CALL AND A CALL AND	0338-19-828	1=29154			
			L=29.5MM +		1	
21	21-302 -446 © 21-446 © 21-446	19-831 0338-19-831 3	BOLT, CONTROL VALVE			
200		↓ 19-832 ↓ ↓ 19-832 ↓ 0338-19-832 2	BOLT, CONTROL VALVE			
			BOLT, CONTROL VALVE			
		21B	GASKET,OIL PAN			
		0338-19-8358	ASBESTOS			
<u>19-850A</u> —	0 19-837		PAN, DIL			
		++	BOLT, DIL PAN			
		0338-19-837 17 ++   19-850A	BRACKET, INSULATOR			
		BV09-19-850 1				
aufa02	¢	CAT. AUFA02-06				1992

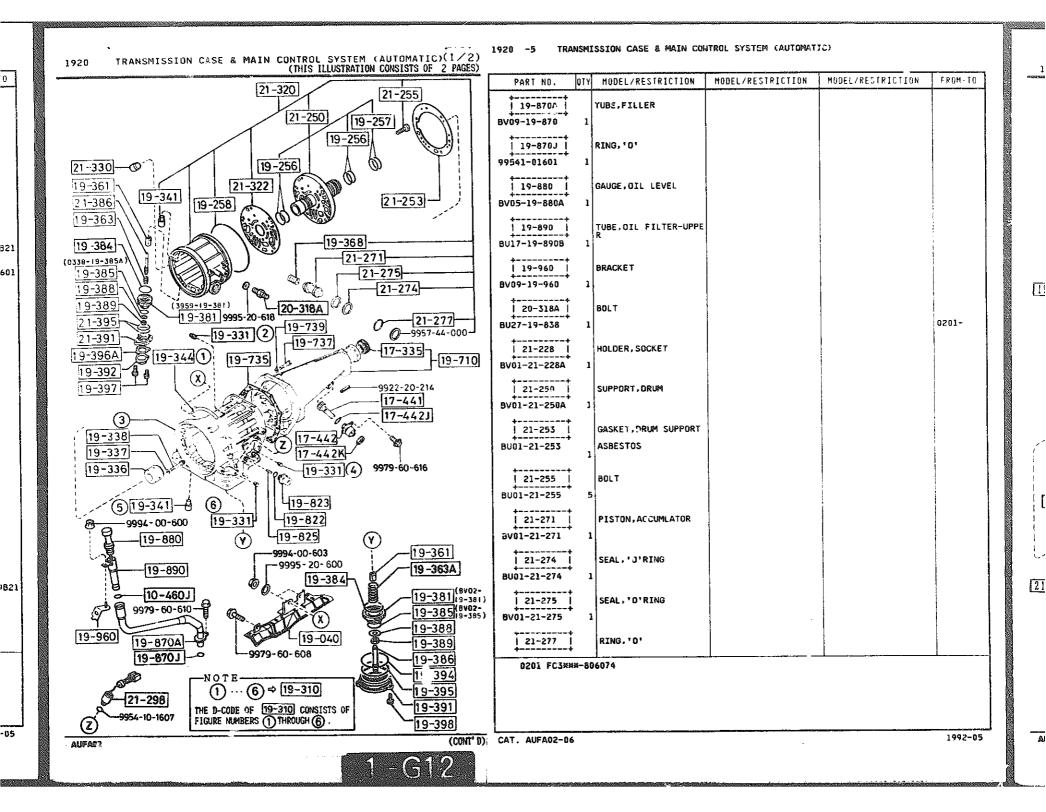

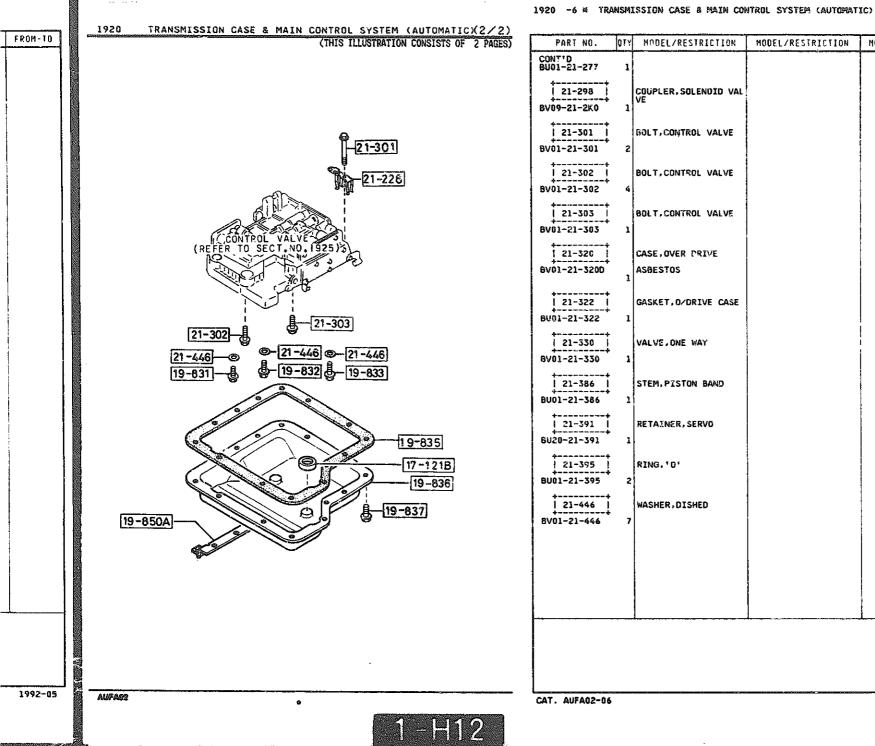

PART NO.	QTY	MODEL/RESTRICTION	MODEL/RESTRICTION	MODEL/RESTRICTION	FROM-TO
CONT'D BU01-21-277	1				
21-298   BV09-21-2K0		COUPLER,SQLENDID VAL Ve			
21-301 BV01-21-301		BOLT, CONTROL VALVE			
1 21-302 1 BV01-21-302		BOLT, CONTROL VALVE			
21-303   BV01-21-303		BOLT, CONTROL VALVE			
21-320 8V01-21-320D		CASE,OVER PRIVE Asõestos			
21-322 ( BV01-21-322		GASKET, D/DRIVE CASE			
21-330 8V01-21-330		VALVE, ONE WAY			
21-386 BU01-21-386		STEM, PISTON BAND			
( 21-391 ) 6U20-21-391		RETAINER, SERVO			
21-395 BU01-21-395	2	RING,'D'			
21-446 BV01-21-446		WASHER, DISHED			
·		1		<u> </u>	L

CAT. AUFA02-06

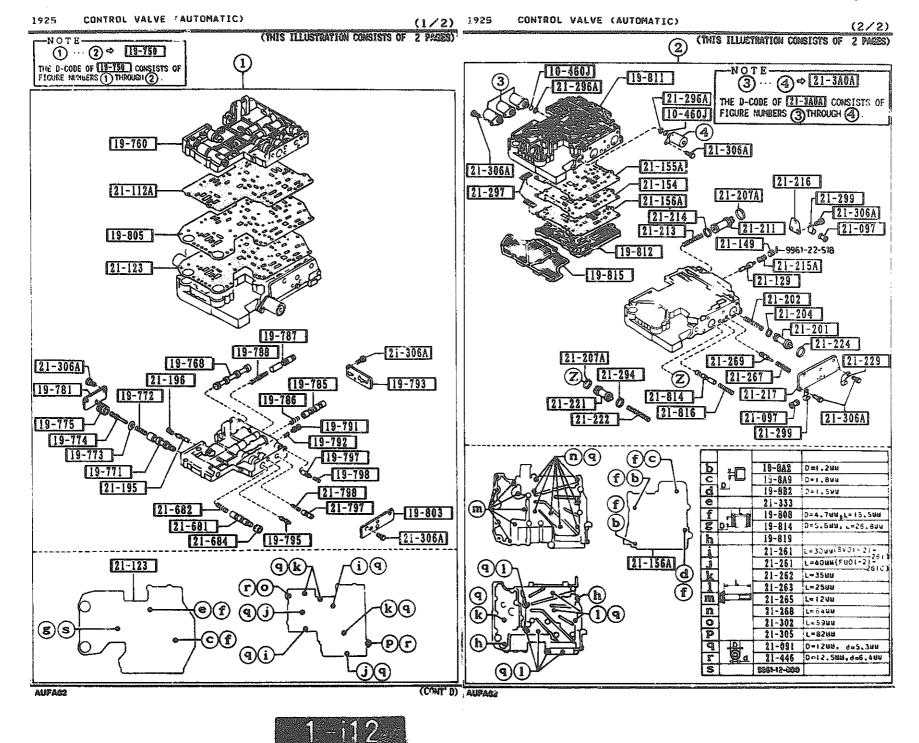


4-TO

A

21

1

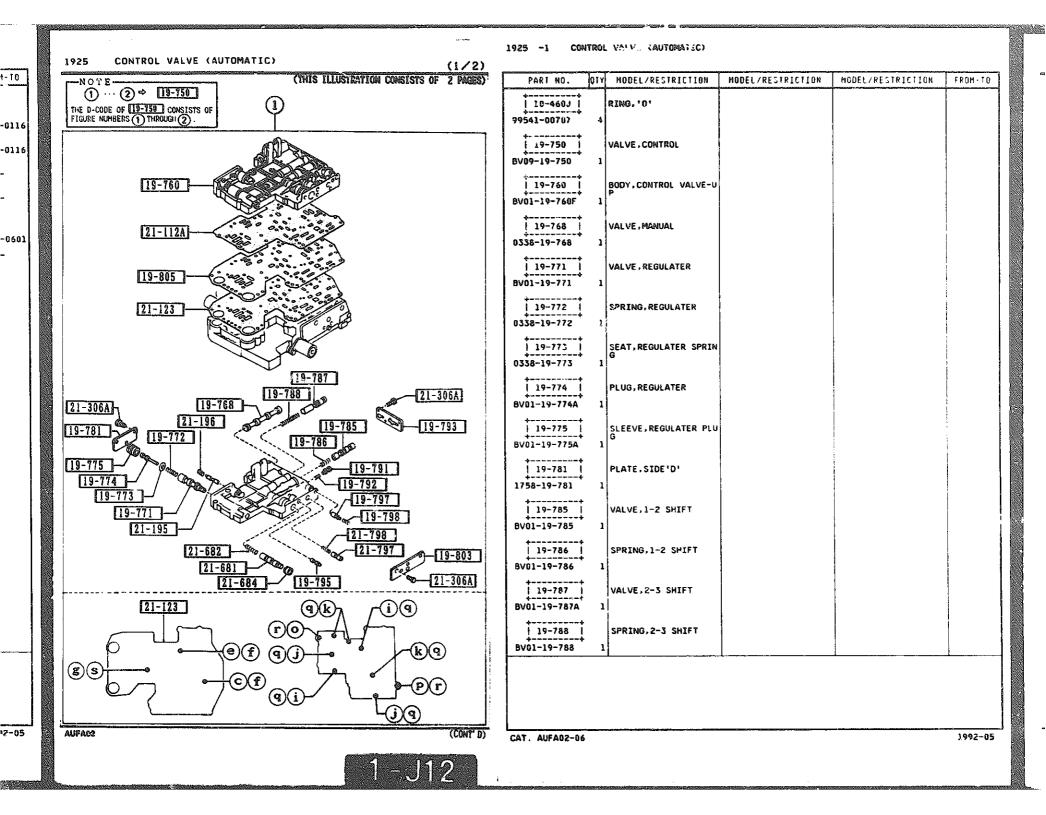






M - TO


-9120

-0201

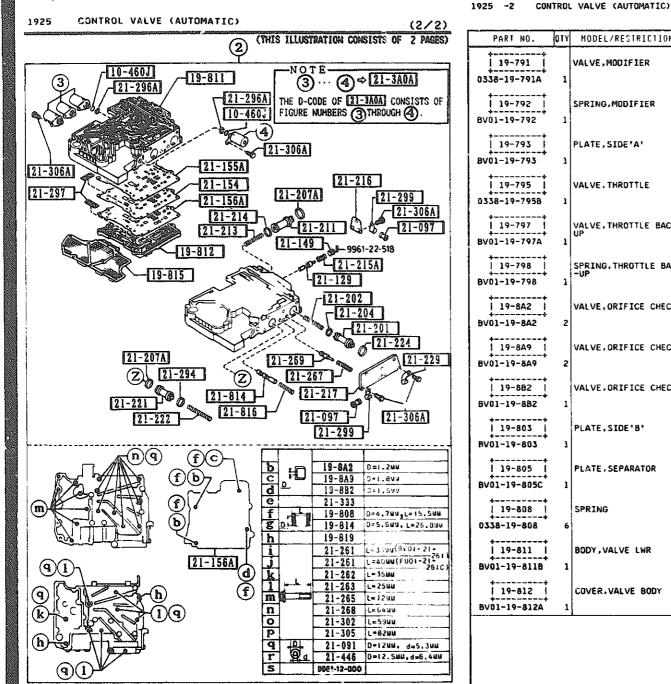

PART NO.	OTY	MODEL/RESTRICTION	MODEL/RESTRICTION	MODEL/RECTPICTION	FROM-TO
19-791   0338-19-791A	1	VALVE, MODIFIER			
19-792   BV01-19-792	1	SPRING,MODIFIER			
19-793   BV01-19-793		PLATE, SIDE'A'			
19-795   0338-19-7958		VALVE, THROTTLE			
++   19-797   BV01-19-797A	1	VALVE, THROTTLE BACK-			) }
19-798     BV01-19-798	ı	SPRING,THROTTLE BACK -UP			- - - - - - - - - - -
19-8A2     19-8A2     BV01-19-8A2		VALVE,ORIFICE CHECK			
19-8A9 1 BV01-19-8A9	2	VALVE, ORIFICE CHECK			
19-882   BV01-19-882	1	VALVE, ORIFICE CHECK			
19-803     19-803     RV01-19-803		PLATE, SIDE'B'			
19-805   BV01-19-805C	1	PLATE, SEPARATOR		2 	
19-808     0338-19-808		SPRING			
19-811   +		BODY, VALVE LWR			
19-812   8v01-19-812A		COVER, VALVE BODY			

CAT. AUFA02-06

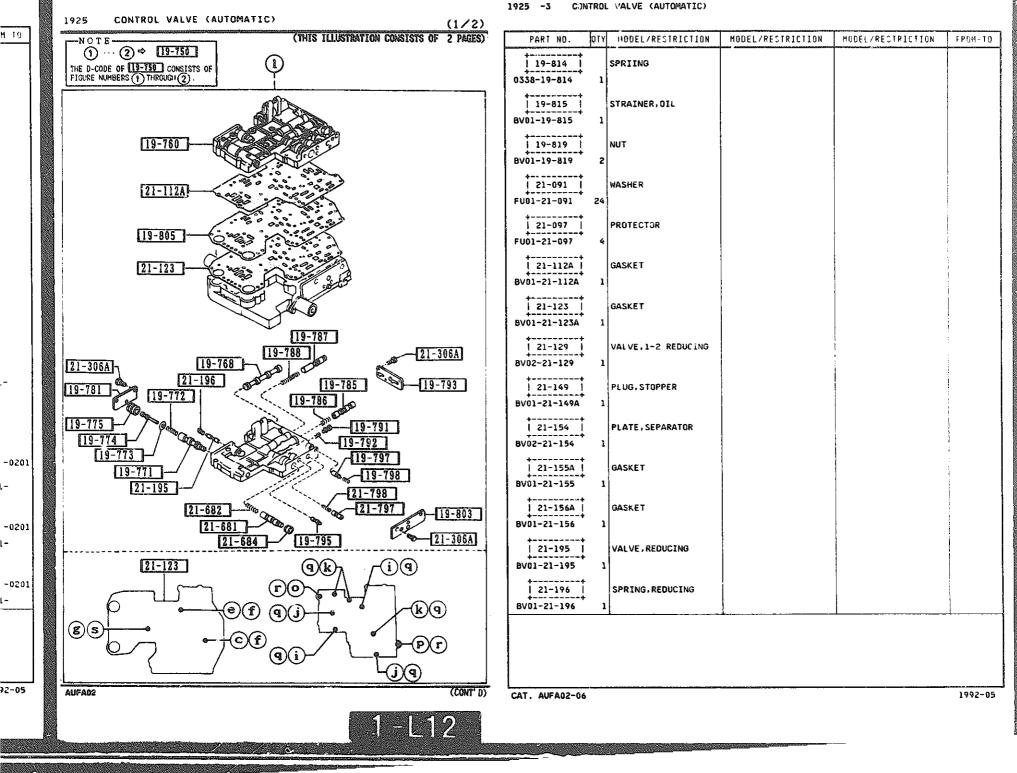


4

۱-

1-

l÷


AL

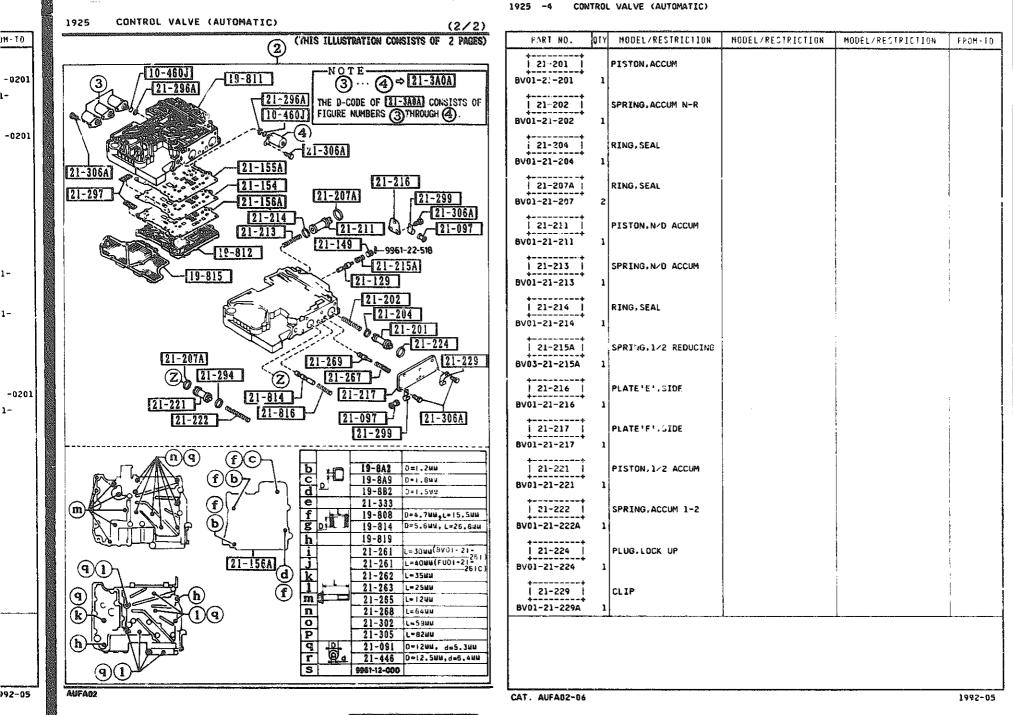

1-



A

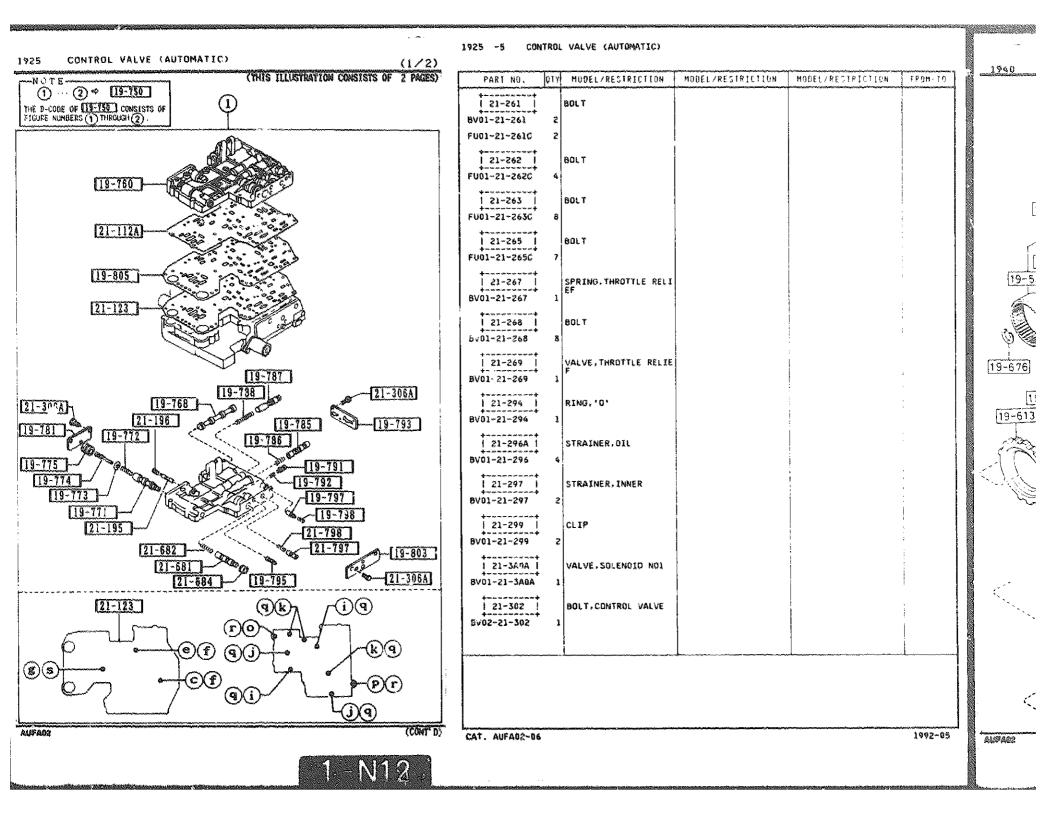

0.10	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	L0.N0	SEC.NO	SECTION NAME
1-03	1000	SHORT ENGINE & GASKET SETS (W/D TURBO)	1-G11	1640	STARTER			
1-003	100C A	SHORT ENGINE & GASKET SETS	1-J11	3850	BATTERY		Ì	
	1000 4	(TURBO)	1-К 3 1	1910	TORQUE CONVERTER, DIL PUMP & PI PINGS (AUTOMATIC)			
1-E03	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR			
1-G03	1030 A	ROTOR HOUSINGS	1-112	1925	CONTROL VALVE (AUTOMATIC)			
1-JG3	104 <b>0</b>	UIL PAN,FRONT & REAR HOUSING (W/O TURBO)	1-013	1930	CLUTCHES & PLANETARY GEARS (AU			
1-MO3	1040 A	OIL PAN, FRONT & REAR HOUSING	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)			
1-004	1100	ECCENTRIC SHAFT & FLYWHEEL	1-014	1950	MANUAL LINKAGE SYSTEM (AUTOMAT	8	¥9	
1-604	1110	ROTORS & RELATED PARTS	1-614	1960		N N		
1-104	1300	INLET MANIFOLD	1-E14	1960	GASKET & SEAL KIŤ (AUTOMATIC)			
)-M04	1310	EXHAUST MANIFOLD			1			
1-N04	1311	INTER COOLER (TURBO)						
1-C05	1312	TURBO CHARGER (Turbo)						
1~F05	1320	FUEL SYSTEM						
1-405	1325	FUEL DISTRIBUTOR			1			
1-105	1330	AIR CLEANER				Į		
1-M05	1350	STARTING ASSIST SYSTEM		1		1		
1-N05	1364	THROTTLE BODY			ĺ	1		
1-F06	1371	AIR PUMP & AIR CONTROL VALVE					l i	
1-106	1380	EMISSION CONTROL SYSTEM						
1~D07	1399	CAP & HOSE CLIP (INLET & EXHAU St SIDE;						
1-FÖ7	1400	OIL PUMP & FILTER (W/O TURBO)						
1-107	1400 A	OIL PUMP & FILTER (TURBO)						
1-M07	1500	COOLING SYSTEM	Ì					
1-F08	1580	BRACKET, PULLEY & BELT						
1-009	1600	CLUTCH DISC & COVER (MANUAL)	ļ	1				
1-F09	1700	TRANSMISSION CASE (MANUAL)						
1-J09	1710	TRANSMISSION GEARS(MANUAL)						
1-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)						
1-M10	1800	ENGINE ELECTRICAL SYSTEM		1	i i	]		
1-E11	1830	ALTERNATOR						

SECTION NAME INDEX (ENGINE)

1057 (5208

CATLOG-NO= AUFA02-06


DATE. 1992-05


204270



05


\_\_\_\_

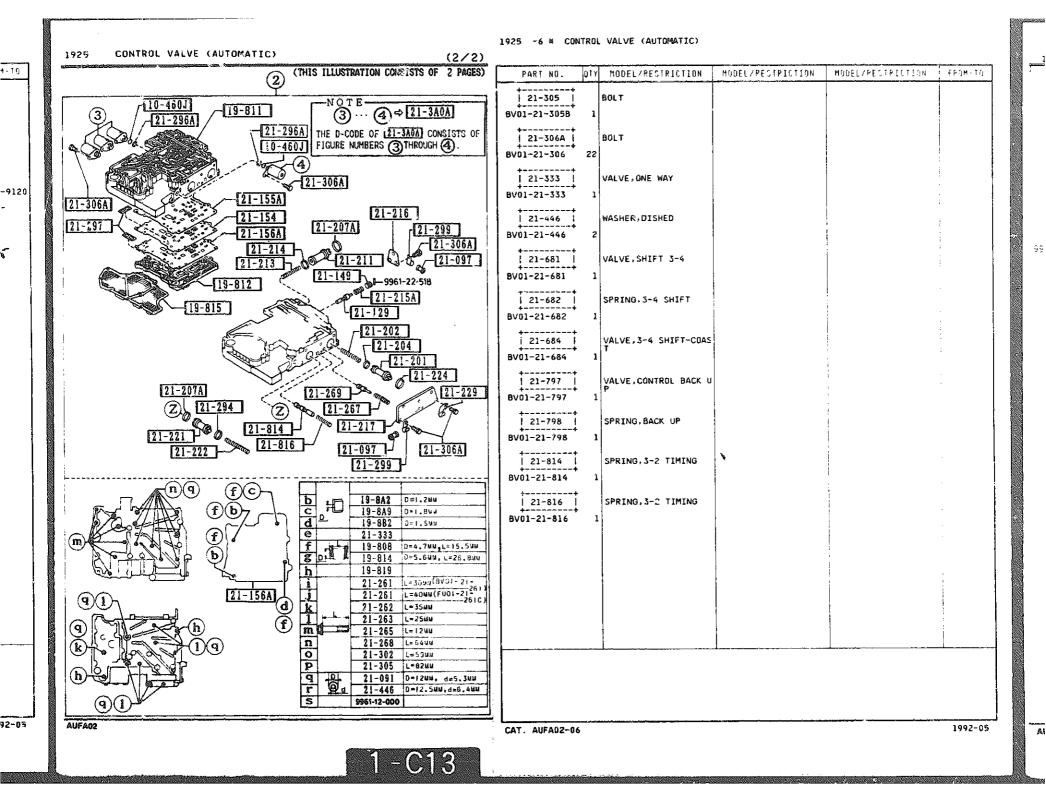


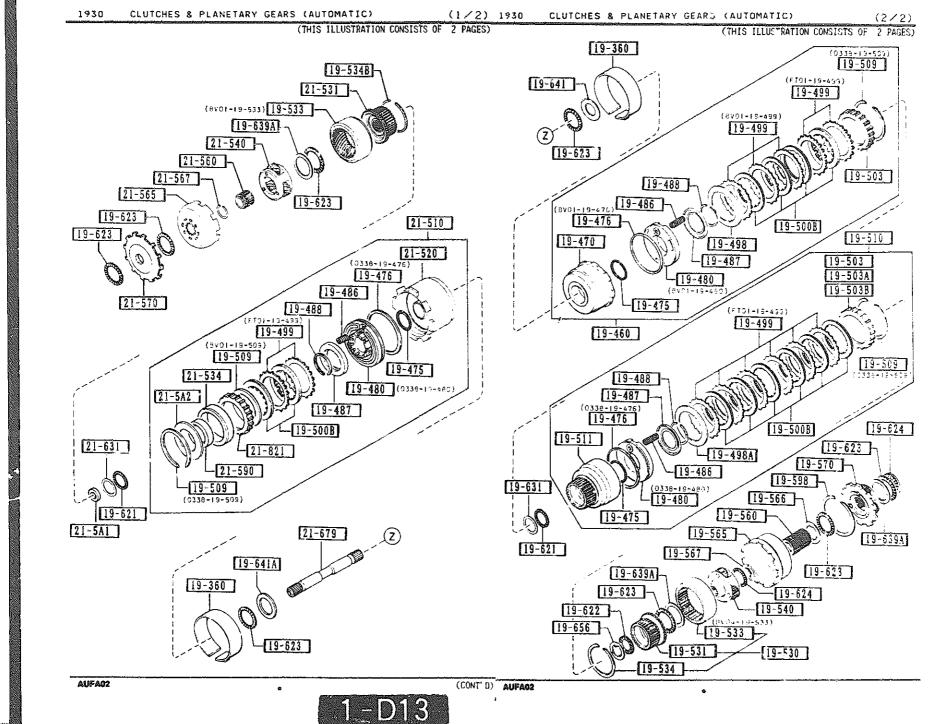

3

-70

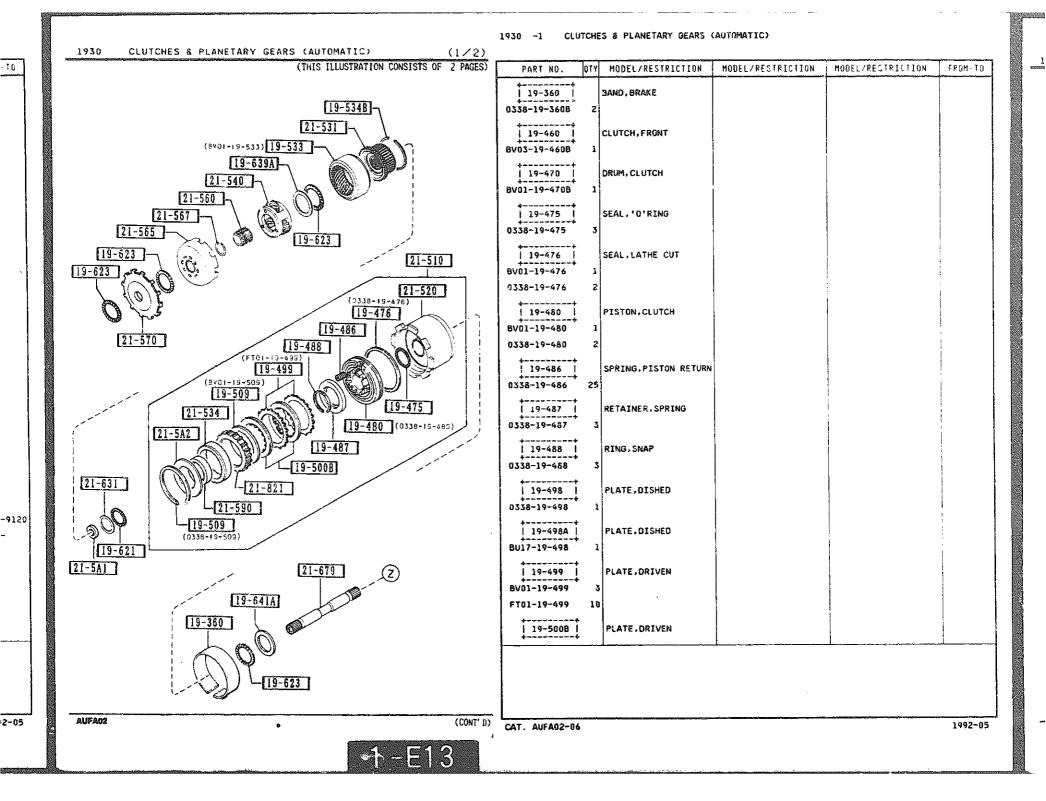


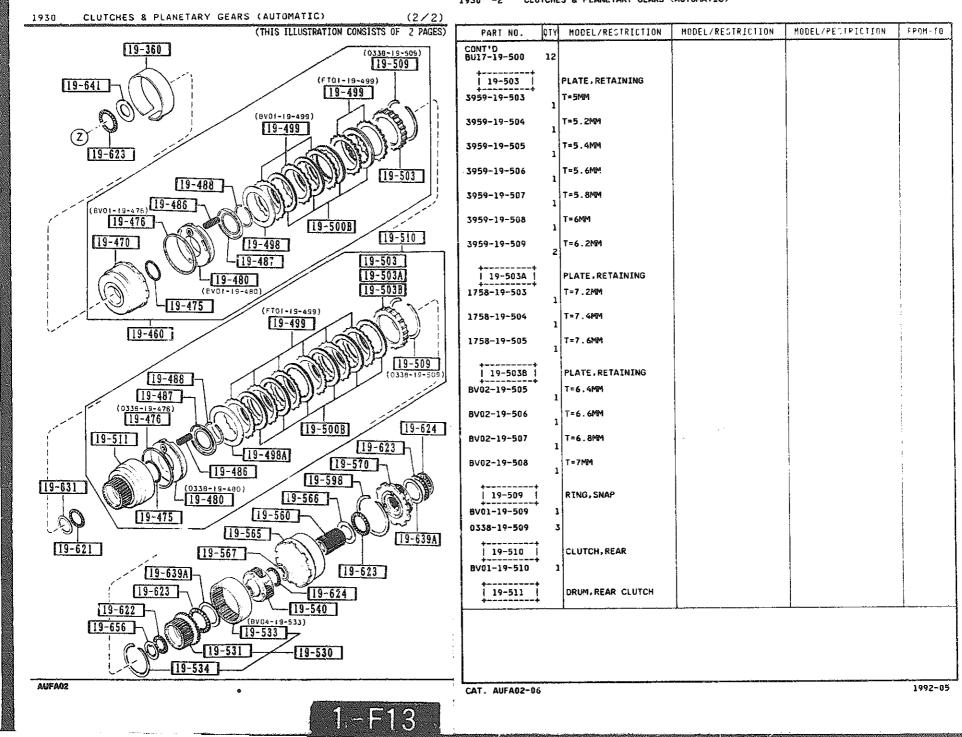


4-TD

92-05

1930 -2 CLUTCHES & PLANETARY GEARS (AUTOMATIC)

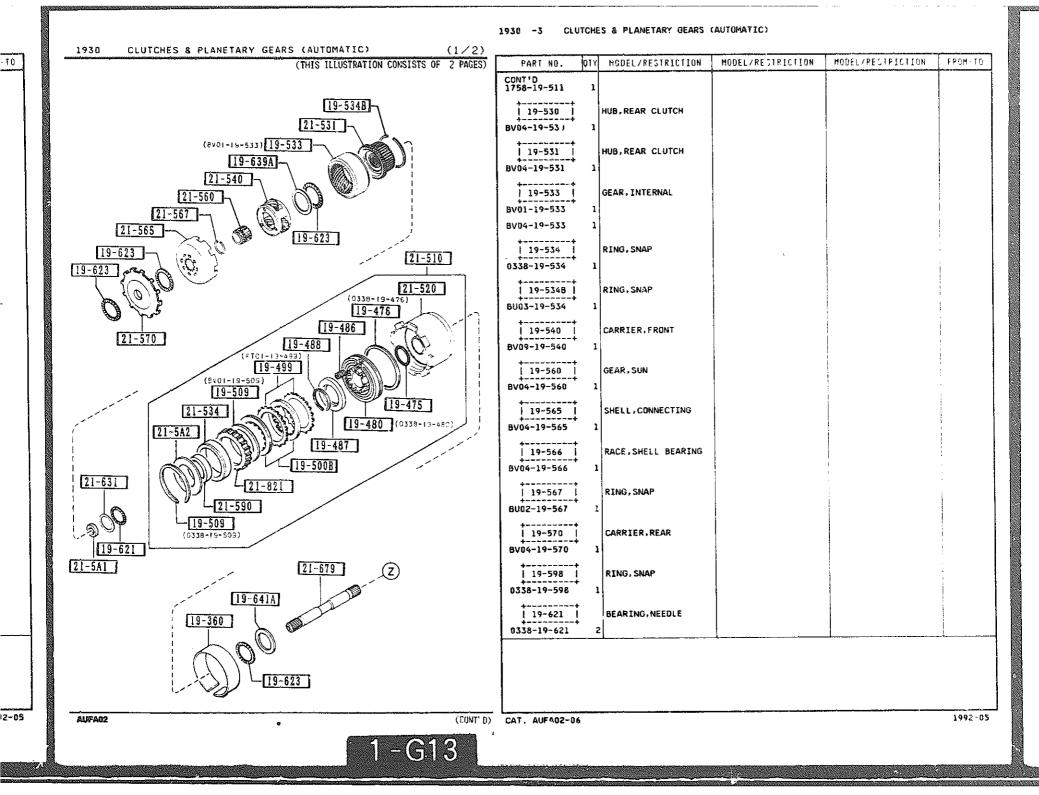

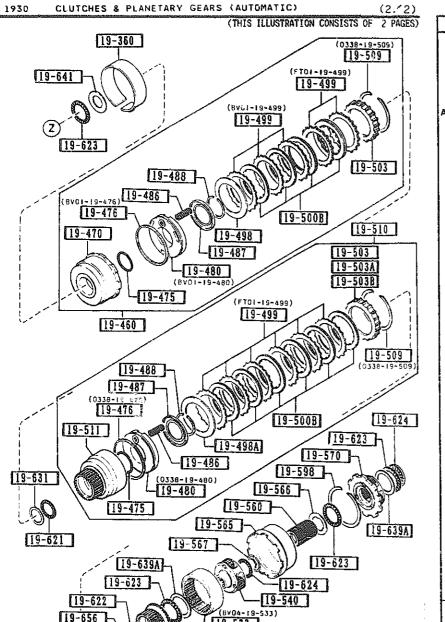

19-530

19-53


## MODEL/RESTRICTION MODEL/RESTRICTION MODEL/RECTRICTION FROM-TO PART NO. QTY. 19-622 BEARING, NEEDLE 0338-19-622 1 BEARING, NEEDLE 19-623 0338-19-623 A (0338-19-623A) -0401 0338-19-623A 0401-BEARING, NEEDLE 19-624 0338-19-629 2 19-631 RACF, BRG. PUMP COVER 0338-19-631 T=1.2MM 0338-19-632 T=1.4MM4 T=1.6MM 0338-19-633 T=1.8M94 0338-19-634 0338-19-635 T=2M64 0338-19-636 T=2.2MM 19-639A RACE, SEARING 0338-19-639 19-641 WASHER, FRONT CLUTCH BV01-19-6C3 T=0.8MM BV01-19-6C2 T≈1MM B\/01-19-6C3 T=1.2MM 8V01-19-6C4 T=1.4MM BV01-19-6C5 T≈1.6M24 T=1.8MM BV01-19-6C6 T = 21% 8V01-19-6C7 T=2.2M4 BV01~19-6C8 0401 FC3###-806597 1992-05 CAT. AUFA02-06

AUF ACZ




1930 -4

CLUTCHES & PLANETARY GEARS (AUTOMATIC)

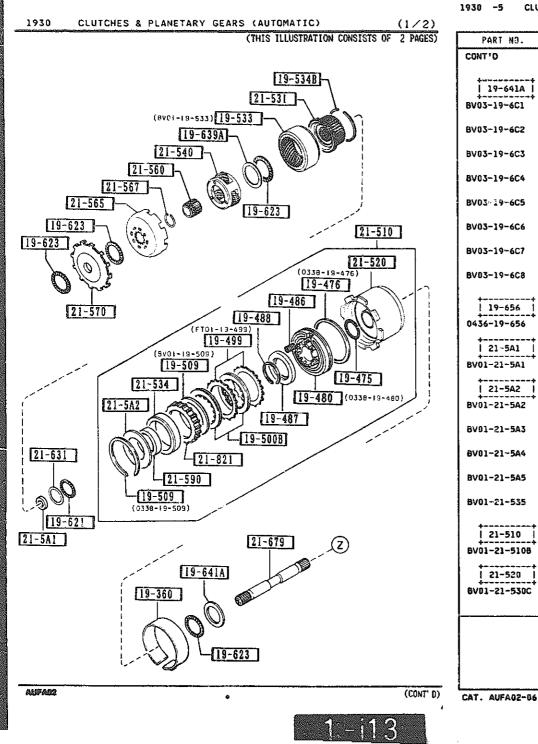

. . . . . . . .

PART NO. OTY MODEL/RESTRICTION MODEL/RESTRICTION MODEL/RESTRICTION FROM-TO | 19-641A | WASHER BV03-19-6C1 T=0.8%% BV03-19-6C2 T=1MM BV03-19-6C3 T=1.2MM BV03-19-6C4 To1.4999 BV03-19~6C5 T=2.6MM BV03-19-6C6 T#1.8: M BV03-19-6C7 T=2MM BV03-19-6C8 1=2.2494 19-656 RACE, BÉARING OIL DIS TR 0436-19-656 1 21-5A1 SLEEVE, SEAL-0.D.CARR IER BV01-21-5A1 1 RECE,SIDE-ONE WAY CL UTCH T≖0.6M%4 | 21-5A2 BV01-21-5A2 8V01-21-5A3 T=D.8P24 6V01-21-5A4 T=1MM BV01-21-5A5 T=1.2M94 BV01+21+535 T=0.4MM 21-510 CLUTCH, DIRECT BV01-21-5108 | 21-520 | DRUM, DIRECT 6V01-21-530C 1992-05

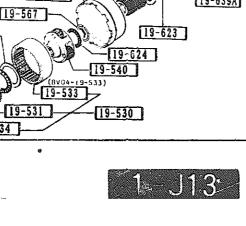

1930

19-641

Z

19-623

19-476

19-460

19-487

19-475

19-623

19-622

19-656

(9335-19-476) 19-476

19-511

19-631

AUFA02


992-05

19-621

19-470

19-360


0M-10

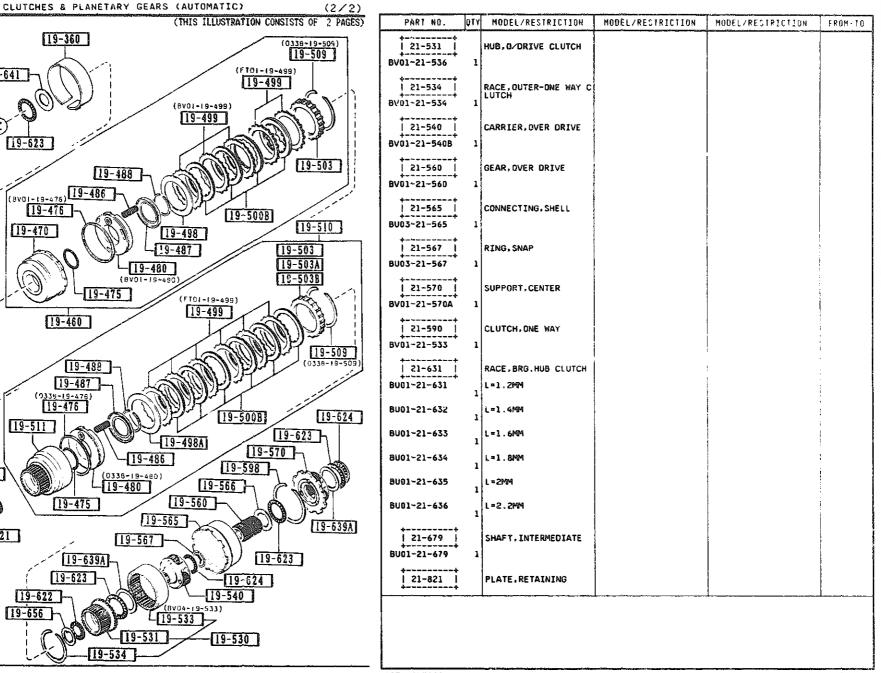


CLUTCHES & PLANETARY GEARS (AUTOMATIC)

CAT. AUFA02-06

1930 -6

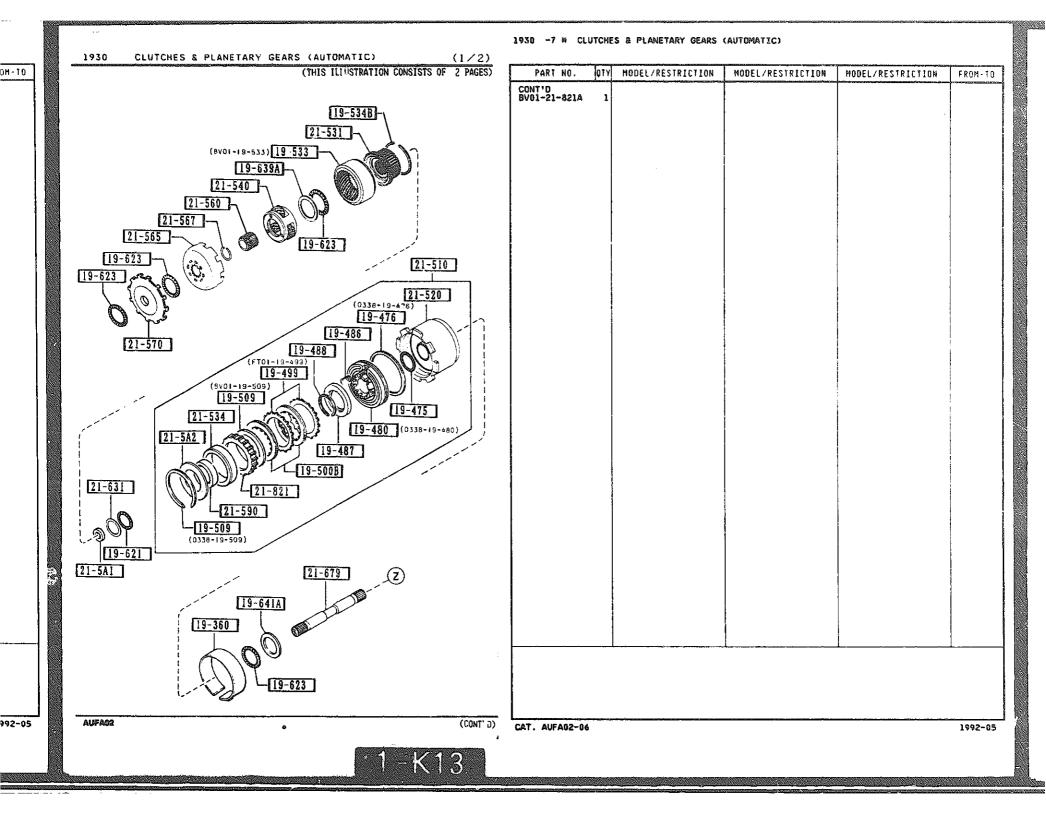




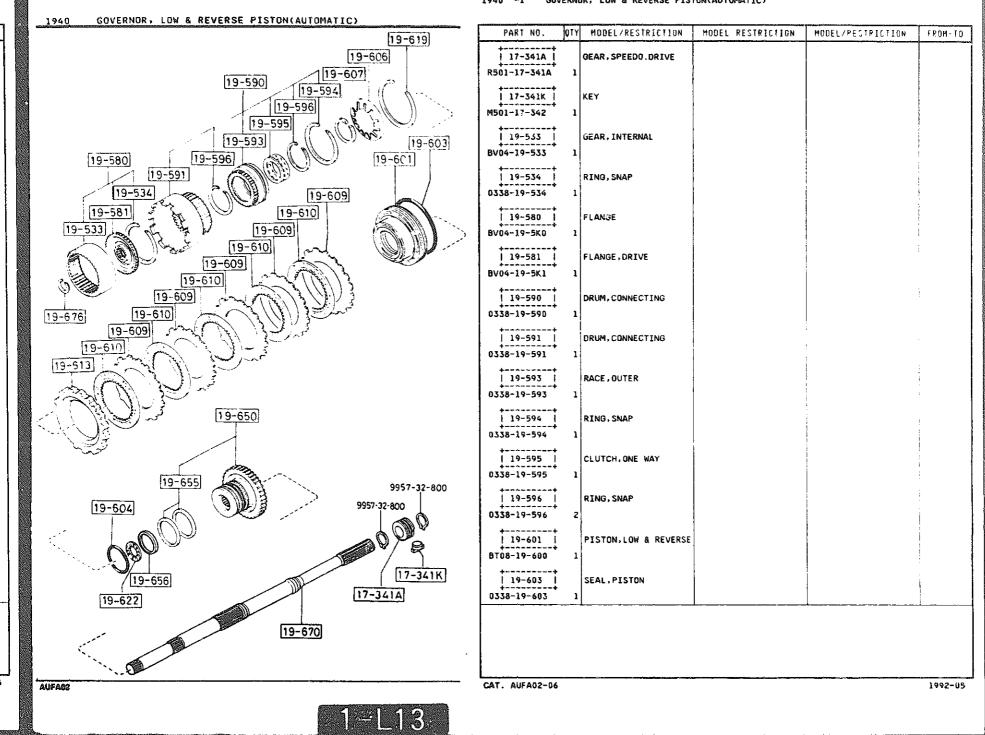


01 - N



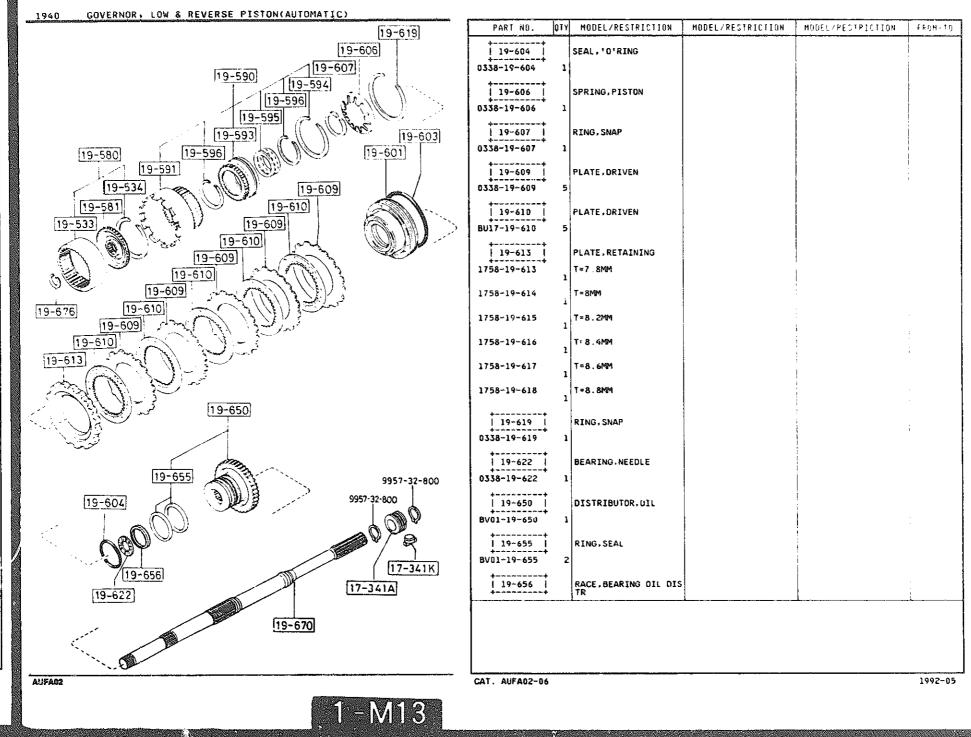

01-H05

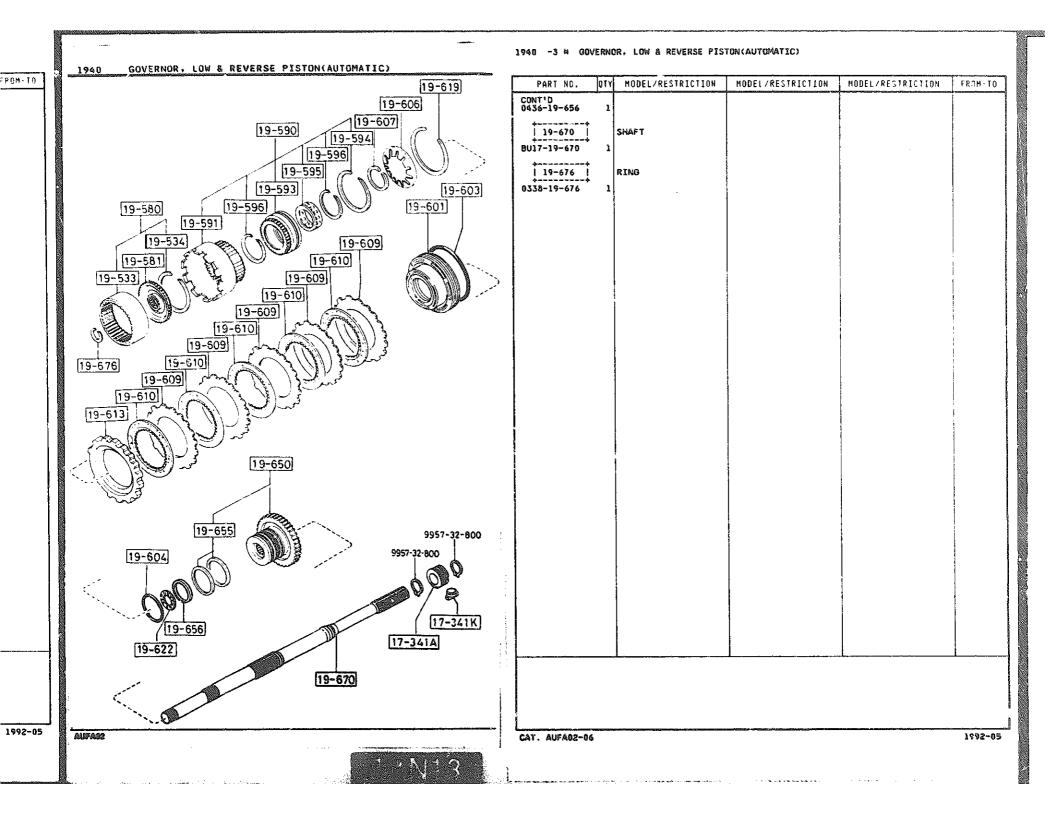


				SEC	TION NAME INDEX (ENGINE)			
LO.NO	SEC.NO	SECTION NAME	LO.NO	SEC.NO	SECTION NAME	LO,NO	SEC.NO	SECTION NAME
1-C03	1000	SHORT ENGINE & GASKET SETS (W/O TURBO)	1-G11	1840	STARTER		+	
1-003	1000 A	SHORT ENGINE & GASKET SETS	1-J11	1850	BATTERY			
1.003	1000 1	(TURBO)	1-611	1910	TORQUE CONVERTER,OIL PUMP & PI PINGS (AUTOMATIC)			
1-203	1030	ROTOR HOUSINGS (W/O TURBO)	1-N11	1920	TRANSMISSION CASE & MAIN CONTR OL SYSTEM (AUTOMATIC)			
1-603	1030 A	ROTOR HOUSINGS (Turbo)	1-112	1925	CONTROL VALVE (AUTOMATIC)			
1-J03	1040	OIL PAN,FRONT & REAR HOUSING (W/O TURBO)	1-D13	1930	CLUTCHES & PLANETARY GEARS (AU Tomatic)			
1-M03	1040 A	OIL PAN, FRONT & REAR HOUSING (TURBO)	1-L13	1940	GOVERNOR, LOW & REVERSE PISTON (AUTOMATIC)			
1-004	1100	ECCENTRIC SHAFT & FLYWHEEL	1-014	1950	MANUAL LINKAGE SYSTEM (AUTOMAT			
1-G04	1110	ROTORS & RELATED PARTS		10/0				
1-104	1300	INLET MANIFOLD	1-E14	1960	GASKET & SEAL KIT (AUTOMATIC)			
1-M04	1310	EXHAUST MANIFOLD		n min		0		
1-N04	1311	INTER COOLER (Turbo)				Ì	9	
1-005	1312	TURSO CHARGER (Turbo)				- Z		
1-F05	1320	FUEL SYSTEM						
1-H05	1325	FUEL DISTRIBUTOR						
1-105	1330	AIR CLEANER						
1-M05	1350	STARTING ASSIST SYSTEM						
1-N05	1364	THROTTLE BODY						
1-F06	1371	AIR PUMP & AIR CONTROL VALVE					ŀ	
1-106	1380	EMISSION CONTROL SYSTEM						
1-007	1399	CAP & HOSE CLIP (INLET & EXHAU ST SIDE)						
1-F07	1400	OIL PUMP & FILTER (W/O TURBO)						
1-107	1400 A	OIL PUMP & FILTER (Turbo)						
1-M07	1500	COOLING SYSTEM	İ					
1~F08	1580	BRACKET, PULLEY & BELT				-		
1-009	1600	CLUTCH DISC & COVER (MANUAL)						
1-F09	1700	TRANSMISSION CASE (MANUAL)						
1-J09	1710	TRANSMISSION GEARS(MANUAL)						
1-H10	1720	CHANGE CONTROL SYSTEM (MANUAL)						
1-M10	1800	ENGINE ELECTRICAL SYSTEM						
1-E11	1830	ALTERNATOR						
L			_					

1-B14


CATLOG-NO= AUFA02-06

05


DATE. 1992-05

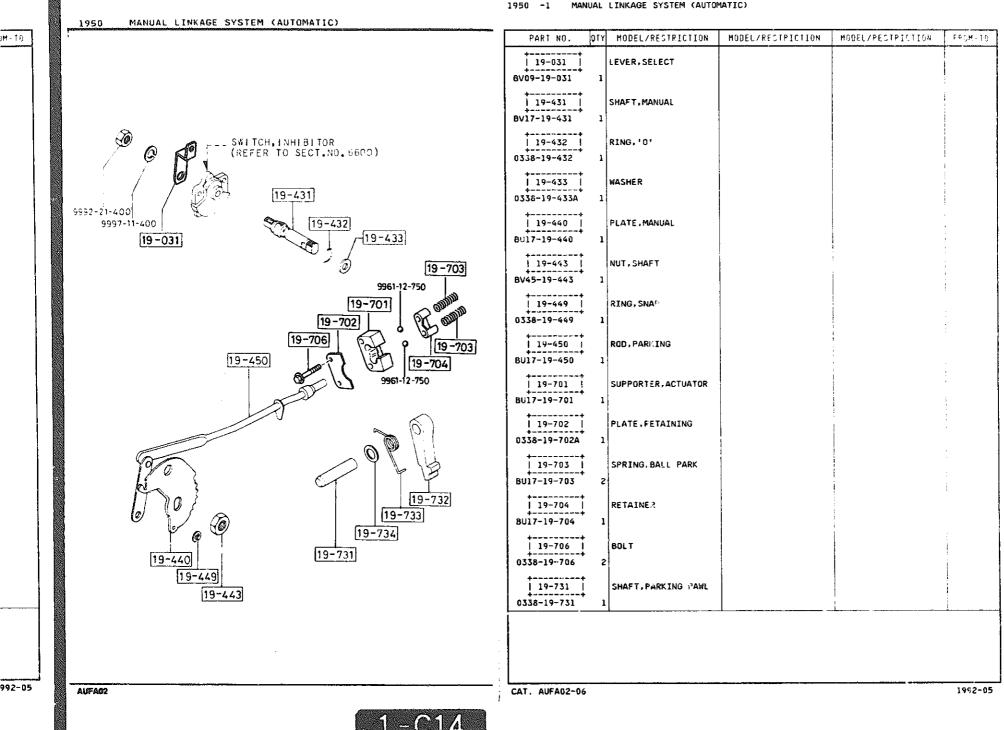

i₩-10

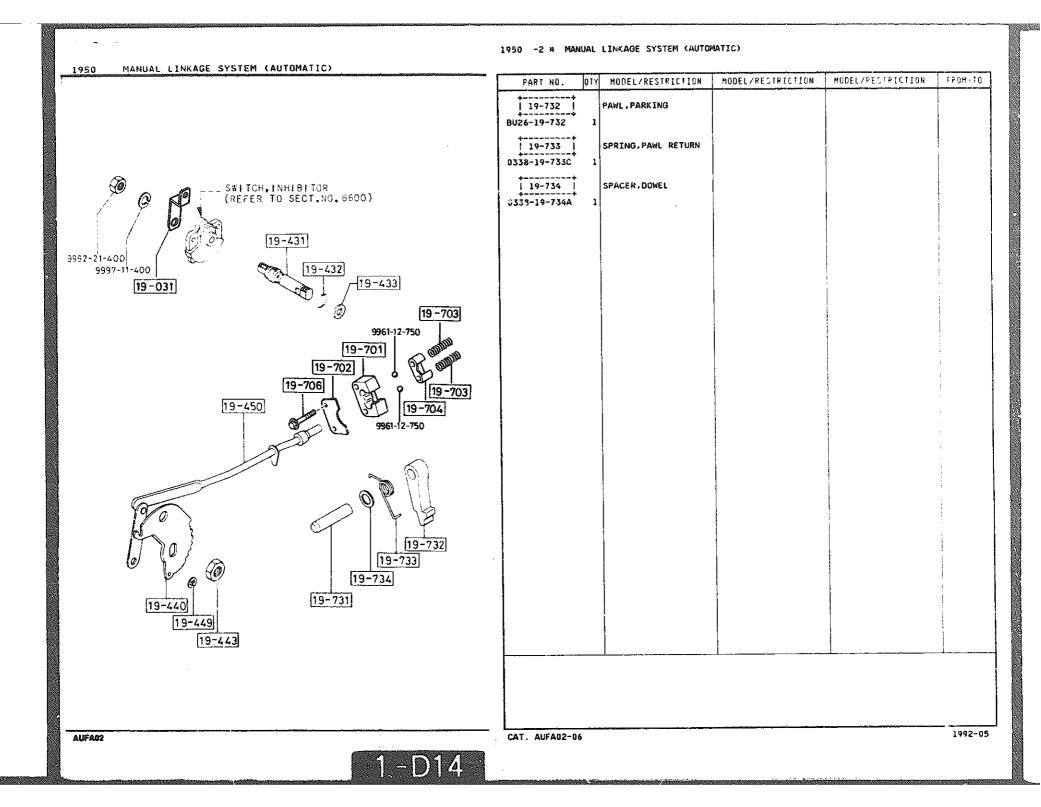

## 1960 -1 # GASKET & SEAL KIT (AUTOMATIC)

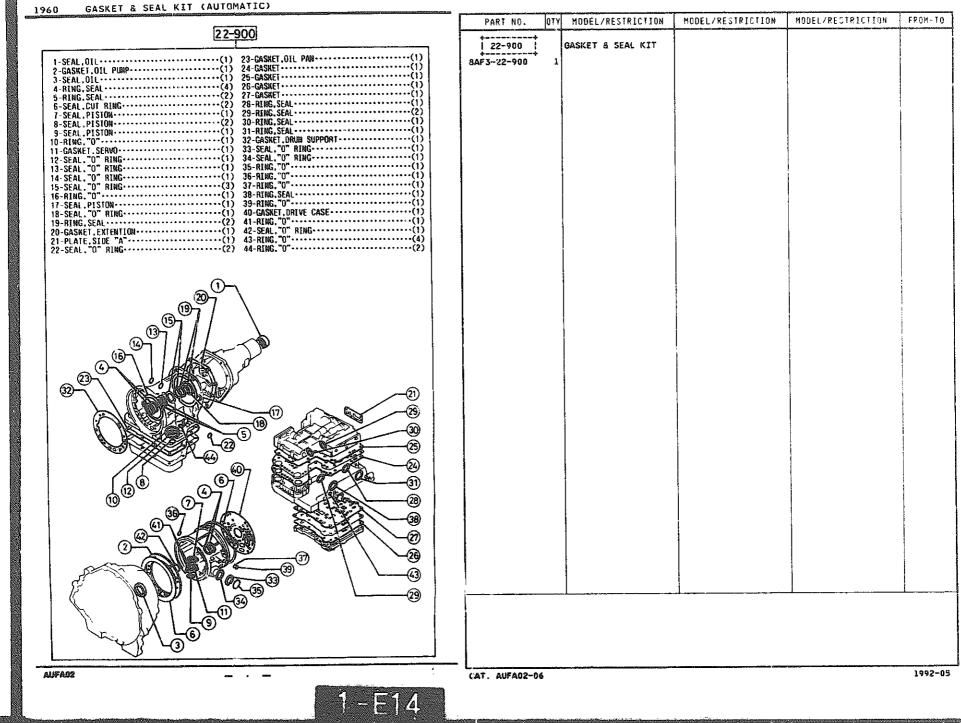

M-TO