#### This file is available for free download at <a href="http://www.iluvmyrx7.com">http://www.iluvmyrx7.com</a>

This file is fully text-searchable – select Edit and Find and type in what you're looking for. This file is intended more for online viewing than printing out so some graphics may not print 100% legibly, you can zoom in on them if you need to.



www.iluvmyrx7.com

## TRANSMISSION SERVICING - M/T Article Text

1993 Mazda RX7

For www.iluvmyrx7.com Copyright © 1998 Mitchell Repair Information Company, LLC Wednesday, August 22, 2001 07:02AM

#### **ARTICLE BEGINNING**

1993 Manual Transmission Servicing

RX7

#### **IDENTIFICATION**

MANUAL TRANSMISSION/TRANSAX	
Model	Transmission/Transaxle
RX7	R15M-D (1) (R5M-D)
(1) - Old model designation	

#### **LUBRICATION**

#### SERVICE INTERVALS

Fluid Inspection & Replacement Check fluid level(s) at least once a year. Change transmission/transaxle and transfer case fluids every 60,000 miles for normal driving conditions and every 30,000 miles for severe driving conditions.

#### CHECKING FLUID LEVEL

Transmission Fluid (RWD Models)

Remove fill plug from transmission/transaxle. Fluid should be up to bottom of fill hole on side of case. B2600i & MPV have 2 drain and 2 fill plugs in transmission case. Fluid should be up to bottom of rear fill hole on side of case.

#### RECOMMENDED FLUID

FIJID SPECIFICATIONS TABLE

#### 

Application

Recommended Fluid

Transmission/Transaxle Fluid

(1) - API GL-4 or GL-5.

#### 

#### **FLUID CAPACITIES**

TRANSMISSION/TRANSAXLE REFILL CAPACITIES TABLE

# TRANSMISSION SERVICING - M/T Article Text (p. 2)

1993 Mazda RX7

For www.iluvmyrx7.com

Copyright © 1998 Mitchell Repair Information Company, LLC Wednesday, August 22, 2001 07:02AM

 	AAAAAAAAAAAAAAAAA

Application Pts. (L)

RX7 ..... 5.2 (2.5) **AAAAAAAAAAAAAAAAAAAAAAAAAAAA** 

#### **ADJUSTMENTS**

**GEARSHIFT LINKAGE** 

No external linkage adjustment is required.

#### **TORQUE SPECIFICATIONS**

TORQUE SPECIFICATIONS TABLE

### 

Application Ft. Lbs. (N.m)

Fill Plug	18-29 (24-39)
Rearward Transmission Plug	15-23 (21-31)
Forward Transmission Plug	29-43 (39-58)

#### **END OF ARTICLE**